

ST815 Laser Source

User Manual V1.2

Contents

1 .	Summary	<i>/</i> 1	ı
١.	Juillillai	//	4

ST815 Laser Source

2. Functions	1
3. Specifications	2
4. Layout	3
5. Operation	5
6. Faults & Solutions	7
7. Advertent Items	7

- --The instrument should be avoided of mechanical oscillation, collision, fall off and any other mechanical damage.
- --The light output connectors should be avoided the touch of the hard objects, dirty objects, acid, alkali and other caustic objects. Please cover the dustproof cap to avoid the dust and other bad chemical objects.
- --Please clean the fiber jumper earthen port using alcohol and operate it after the alcohol is air-dry.
- --It is forbidden that the user looks at the light output end directly when you operate the instrument to avoid the light burn the eye and skin.
- --Clean the ceramic core regularly
- --The battery should be taken out if the instrument is out of operation for a long while, otherwise, the service time of battery will be affected.

Test s.r.l.

Strada Vic. Battifoglia, 14/N

Zona Industriale

06132 S. Andrea delle Fratte (PG)

pinto@test-italy.com

riccardo.vittori@test-italy.com

Phone: +39 075 8788003

Web: www.test.it

1. Summary

With better performance and special fast field testing function, ST815 adopts advanced technology of exact light and dealing with technology and to support high performance light for the field test and the lab development. It has been an ideal instrument for maintenance and development of optical network equipments.

ST815 can be widely used in various kinds of optical cable testing fields, such as LAN, WAN, CAN, CATV and long-distance Fiber Network.

Together with ST800 series optical power meter, ST815 Laser Source can support stable light signal on many kinds of wavelength, it can recognize the fiber, test the fiber loss and continuity accurately, help to evaluate the transmission quality of fiber chain as well.

2. Features

- 2.1 Handheld, easy to operate
- 2.2 Two to four wavelength optional
- 2.3 Continuous light, modulated light output
- 2.4 Output double wavelength or three wavelengths through single adapter
- 2.5 Output three or four wavelength through double adapter
- 2.6 High stabilization
- 2.7 Auto shut off function without operation in 10 minutes
- 2.8 Big LCD, intuitive, easy to use
- 2.9 LED backlight switch on/off
- 210 Auto close back light in 8 seconds
- 2.11 AAA dry battery or Li battery
- 2.12 Battery voltage display

2.13 Low voltage checking and shut off design to save energy

3. Specifications

3.1 Emitter type: FP-LD/DFB-LD3.2 ST815 series wavelength switch:

ST815 Wavelength: 1310±20nm, 1550±20nm

ST815B Wavelength: 1310±20nm, 1550±20nm,

1490±20nm

ST815C Wavelength: 1310±20nm, 1550±20nm, 850±20nm,

1300±20nm

ST815D Wavelength: 1310±20nm, 1550±20nm,

1625±20nm

ST815E Wavelength: 1310±20nm, 1550±20nm, 650±20nm

3.3 Spectral width: ≤5nm

3.4 Output Power: ≥-7 dBm, ≥0dBm (customized) ,650 nm≥0dBm

3.5 Stability in short time:≤±0.05dB/15min

3.6 Stability in long time:≤±0.1dB/5h

3.7 Light output mode: CW continuous light, 270Hz, 1kHz, 2kHz, 330Hz modulization output, 650nm red light 2Hz

3.8 Battery display: LCD

3.9 Working wavelength and modulated light display: LCD

3.10 Battery: 3 pieces AAA dry battery or Li battery

3.11 Low voltage: If the battery voltage is low, auto warning every 20s

3.12 Low voltage shut off: When the battery voltage is low, this meter will auto shut off

3.13 Battery working duration: dry battery about 15 hours

3.15 Working temperature: 0 □ ~ 40 □

3.16 Storage temperature: -10 □ ~ 70 □

3.17 Relative Humidity: ≤90%

3.18 Dimension (mm): 160×76×28

6. Faults & Solutions

	Faults	Reasons	Solutions
C	he instrument annot be witched on	The battery is under low voltage	Charge the battery at once
	lo optical ower output	The earthen core of the connector is broken	Replace the connector
р	he optical ower is ecreased	Connector and the inner light caudal fiber earthen core are dirty	Clean the earthen core using absorbent cotton with alcohol

7. Advertent Items

Attention: The light source maybe hurt to eyes, so it is forbidden that the user looks at the light output end directly when you operate the instrument in order to avoid the light burn the eyes!

Note: If you use dry battery, do not recharge the battery. That is dangerous!

Please pay attention to the followings in order to keep the performance of the instrument and prolong its service time.

Press "*" button to turn the backlight on or off. When the backlight is on, the sign * will display on the screen, otherwise this sign disappear. If the backlight is in a closed state, the operation of any function key will open the 8 seconds' backlight besides pressing "start" button.

5, Under-voltage

When the battery voltage is low, the power indicator become, when the battery voltage is lower than warning voltage, the equipment will alarm "Low voltage" every 20 seconds. When the battery voltage is lower than protection voltage, it will be in auto turn-off state. The equipment should be charged in time, charging time is about 4 to 6 hours, please observe the charger, if the charging indicator light becomes from red to green, which means the battery is full.

6. When the equipment is not in use, the user should immediately cover the dust cap to keep the adapter clean.

ST815 Laser Source

3.19 Weight: 0.22Kg

4. Layout



ST815, ST815B Figure

- 1. 1310nm, 1550nm output adapter
- 2. LCD
- 3. Operation buttons
- 4. Charging socket



ST815C, ST815D, ST815E Figure

1. 1310nm, 1550nm output adapter

2. The second output adapter:

ST815C: 850nm, 1300nm output adapter

ST815D: 1625nm output adapter

ST815E: 650nm output adapter

3. LCD

4. Operate button

5. Charging socket

5. Operation

1. Power On/Off

Press "On" key 2 seconds to start the equipment, LCD displays operating wavelength, battery voltage and modulation state. When you open the ST815, it works on 1310 nm wavelength and continuous light output state; press "off" key 2 seconds to close the equipment. The system defaults auto-shutdown, auto shutdown logo is displayed on the screen. Open and turn off the automatic shutdown function: Press "off" button on the screen, auto-off mark disappear, which shows the automatic shutdown function is closed; and then press "off" button, automatic shutdown logo is displayed on the screen at this time has indicated that the automatic shutdown feature open. If there is no operation for 10 minutes, the equipment will automatically shutdown.

2. Wavelength switch function

Press "wavelength" button when power on, you can switch different wavelengths, and LCD screen display the different output wavelength.

Note: If you want to switch the 1310nm, 1550nm wavelength to 850nm, 1300nm (ST815C) or 1625nm (ST815D) or 650nm (ST815E), do not forget to change the output adapter.

3. Modulation output

Press the "Mode" button, you can achieve the modulated light 270Hz, 1 kHz, 2 kHz, 330Hz, 650nm red light 2Hz, continuous light output, at the same time, on the LCD screen the equipment will show the corresponding modulation frequency of the state.

4. Backlight