EXTECH® INSTRUMENTS

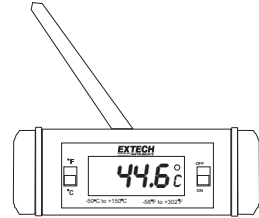## Instruction Sheet Model 392065
T-Bar Stem Thermometer

Operation

Battery Installation/Replacement

Remove the end cover and install/replace the battery observing the proper polarity.

Taking Temperature Measurements

1. Slide the ON/OFF switch to turn the thermometer on.
2. Slide the ^{o}F/C button to select the desired temperature units.
3. Place the sensor in the area desired and read the temperature on the display.

Specifications

Display	liquid crystal
Units	^{o}C/^{o}F selectable
Measurement range	-50 to 150^{o}C, -58 to 302^{o}F
Resolution	0.1^o to 199.9^o, 1^o > 199.9^o
Accuracy	±2^{o}F/1^{o}C
Sensor length	124mm/ 4.9"
Sensor material	Stainless steel
Auto Off	After one hour of operation
Operating temperature for display	14 to 122^{o}F (-10 to 50^{o}C) (dial display)
Battery	one button battery

Warranty