



TC-20 FIBER CLEAN PEN



I. Brief Introduction

TC-20 Optical Fiber Clean Pen is a kind of cleaning tools with high-performance and new-type fiber adapter. There is thread inside of the fiber clean pen for cleaning front surface. It is designed to specially work well with the female connectors on patch cords. This instrument cleans the ferrule end faces removing dust, oil, and other debris without nicking or scratching the end face. The clean pen is specially designed to clean the SC/PC/ST (PC, APC, UPC) or LC/MU (PC, APC, UPC) connector. The operation of cleaning pen is easy and exact. Otherwise, it will keep the low cost for a long time. Its working life is more than 800 times.

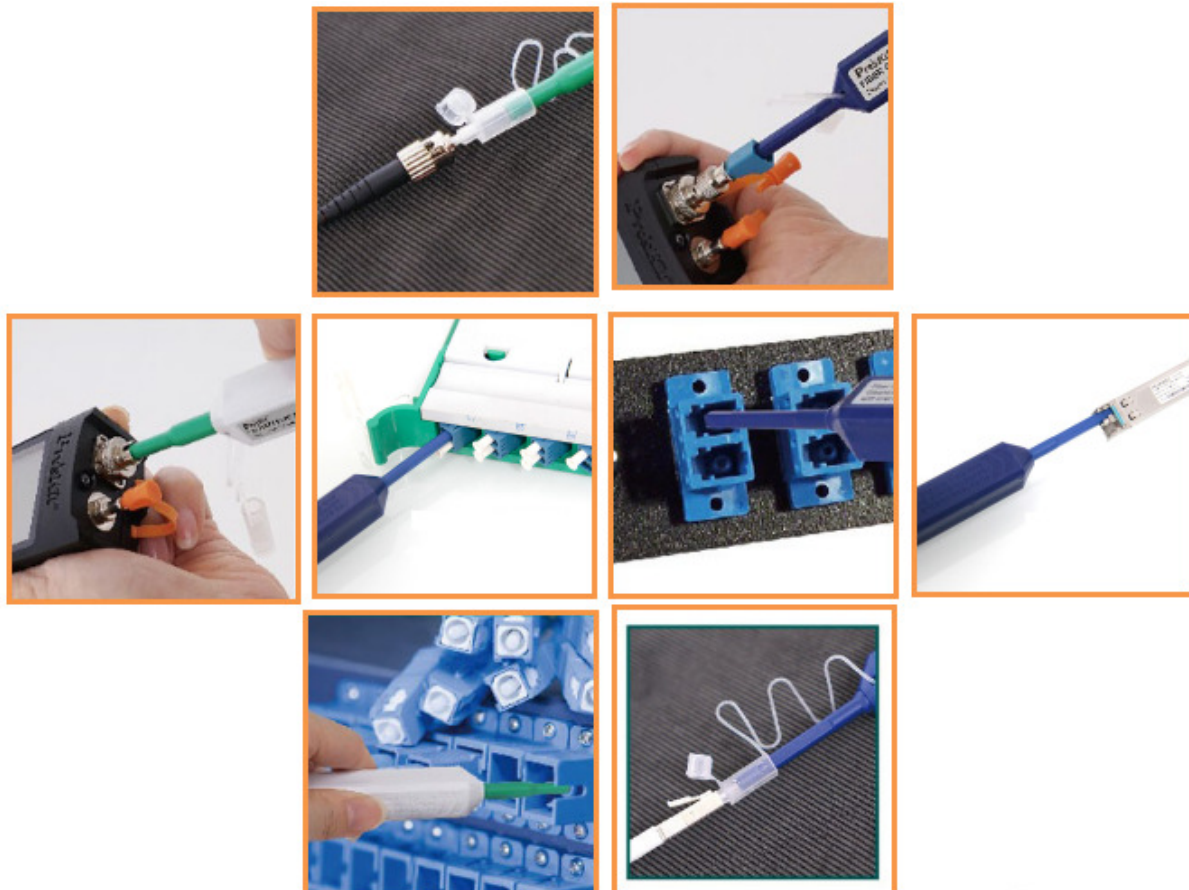
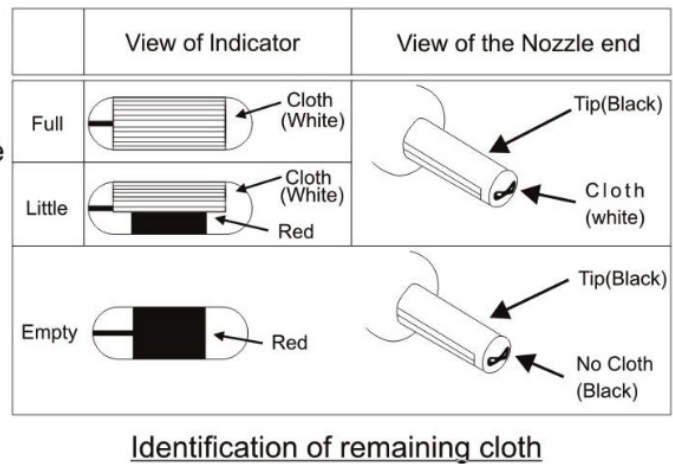
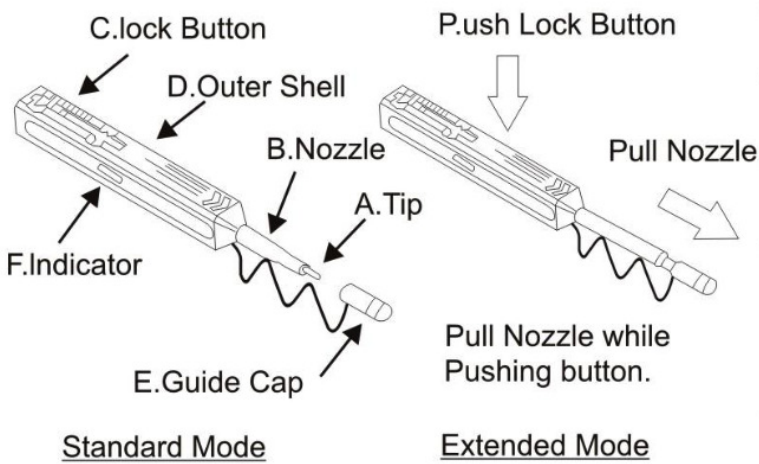
II. Main Features

- 800 application of a pen
- Compliant with EU/95/2002/EC Directive (RoHS)
- Apply to 2.5mm universal, SC/FC/ST (PC, APC, UPC) or 1.25mm, LC/MU (PC, APC, UPC) connector
- Simple operation



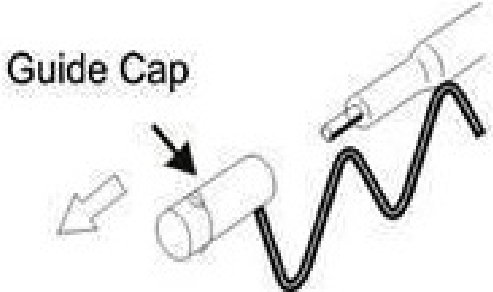
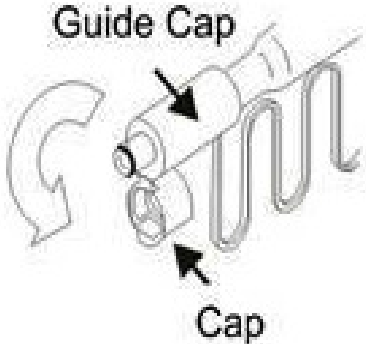
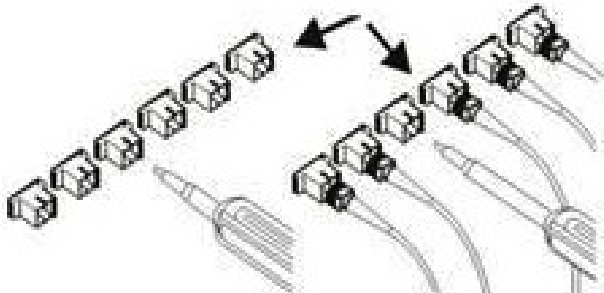
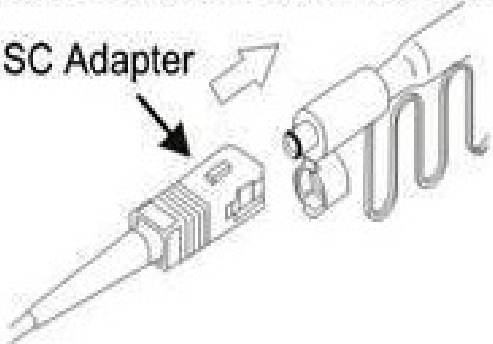
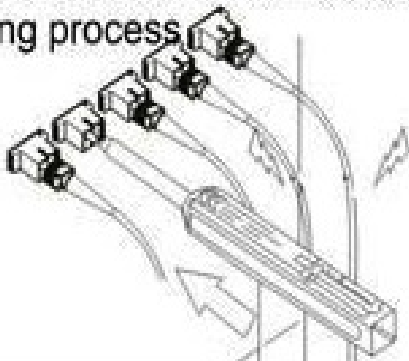
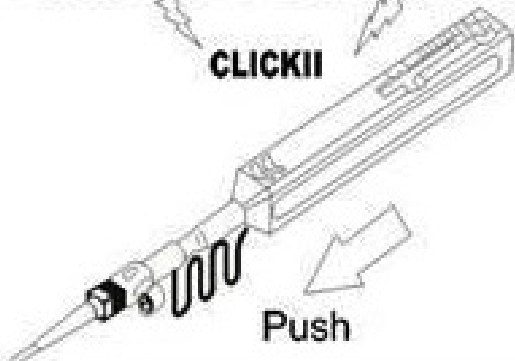
III. Structures

No	Part Name	Function
A	Tip	Lead the cleaning cloth to the optical connector end face.
B	Nozzle	Lead tip to the optical connector end face.
C	Lock Button	Push the button to extend and contract the nozzle.
D	Outer Shell	Push the outer shell to clean the connector
E	Guide Cap	Acts as dust cap or cleaning adapter for connector plug.
F	Indicator	Provides indication of remaining cleaning cloth.

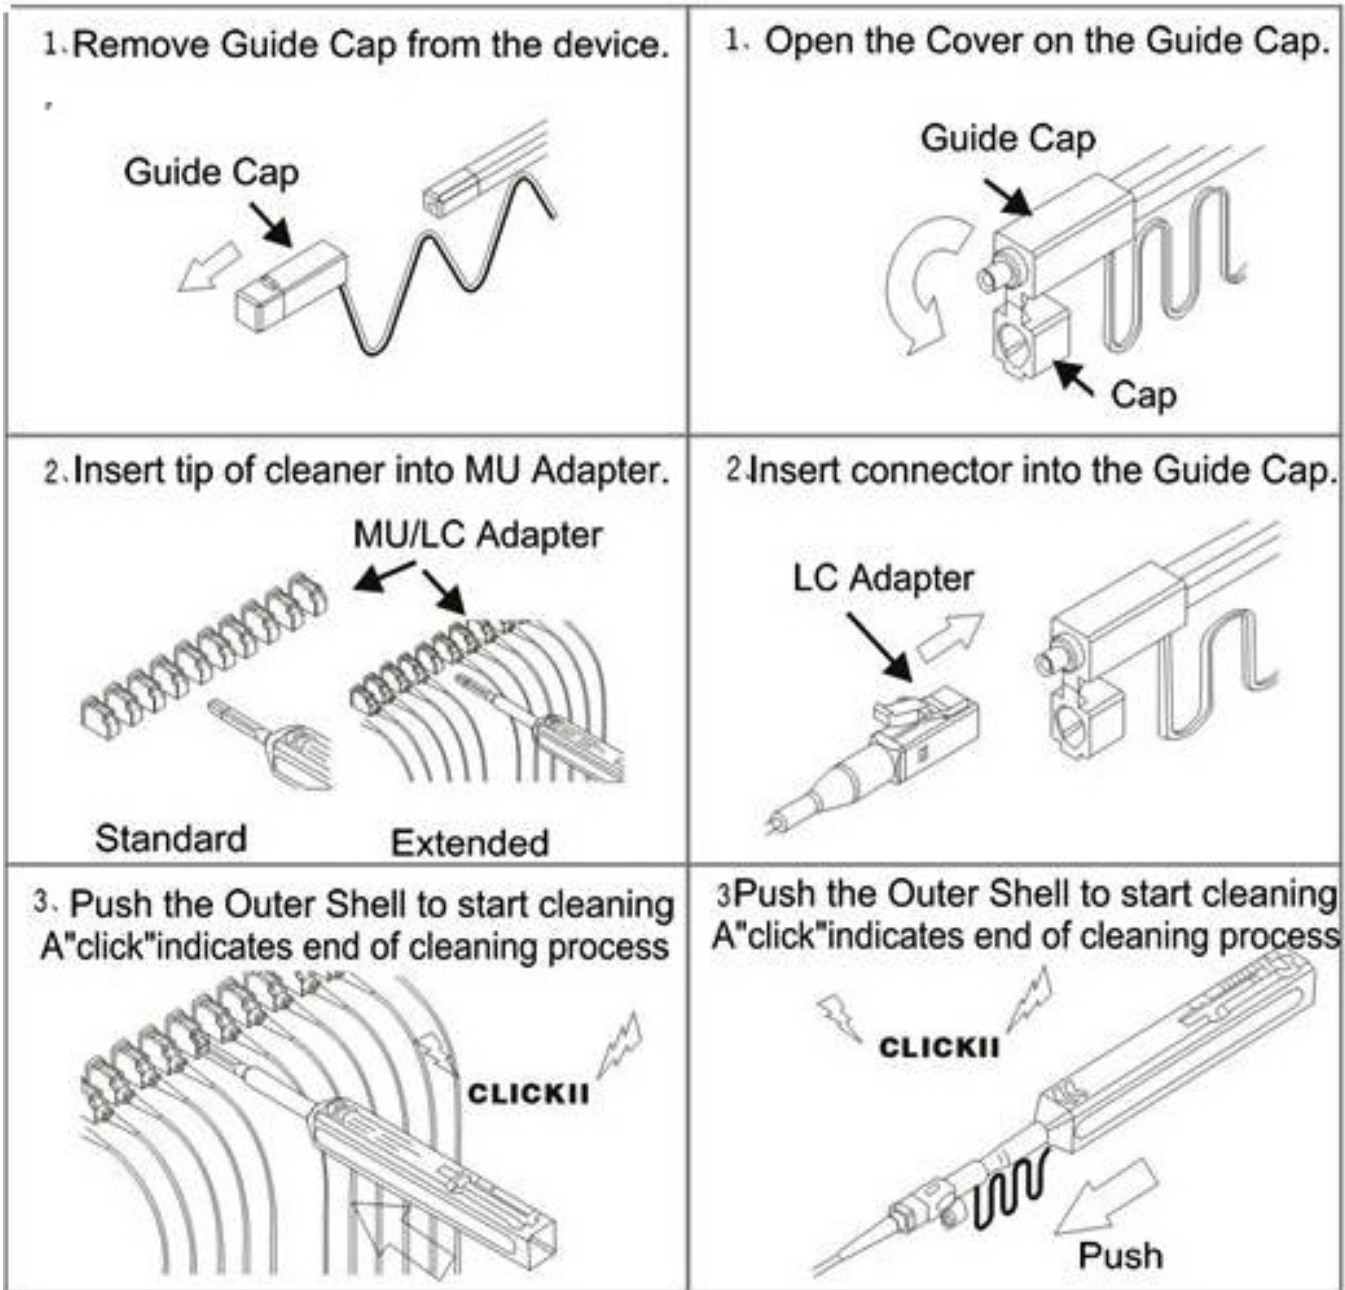


IV. Operating Procedures

FC/SC/ST Application

<p>1. Remove Guide Cap from the device.</p>  <p>Guide Cap</p>	<p>1. Open the Cover on the Guide Cap.</p>  <p>Guide Cap</p> <p>Cap</p>
<p>2. Insert tip of cleaner into SC Adapter.</p>  <p>Standard</p> <p>Extended</p>	<p>2. Insert connector into the Guide Cap.</p>  <p>SC Adapter</p>
<p>3. Push the Outer Shell to start cleaning the SC connector. A "click" indicates end of cleaning process.</p> 	<p>3. Push the Outer Shell to start cleaning the SC connector. A "click" indicates end of cleaning process.</p>  <p>CLICK!</p> <p>Push</p>

MU/LC Application



V. Ordering Information

w 2.5mm: FC/SC/ST Cleaner Pen, universal 2.5mm;

v 1.25mm: LC/MU/LC Cleaner Pen, universal 1.25mm.



VI. Package





Test Srl

Strada Vicinale Battifoglia 14/N, 06132 Sant'Andrea delle Fratte (PG)

Web. www.test.it

Email. info@test-italy.com