



Planar 808/1

Network Analyzer

Programming Manual
COM/DCOM



Version 1.2 – Oct. 17, 2013

TABLE OF CONTENTS

1	Introduction.....	8
2	Scope of Manual	9
3	Registering COM Server	9
4	COM Technology Overview.....	9
5	Automation Server.....	9
6	Automation Controllers	10
7	Local and Remote Server.....	10
8	Structure of COM Objects	13
9	Accessing the Application Object.....	14
10	Object Methods.....	15
11	Object Properties	16
12	Error Handling	16
13	COM Automation Data Types	17
14	Measurement Data Arrays	18
15	COM Server Commands.....	19
	NAME	19
	READy	19
	SCPI.ABORT	20
	SCPI.CALCulate(<i>Ch</i>).FSIMulator.SENDed.DEEMbed.PORT(<i>Pt</i>).USER.FILEname	20
	SCPI.CALCulate(<i>Ch</i>).FSIMulator.SENDed.DEEMbed.PORT(<i>Pt</i>).STATE	21
	SCPI.CALCulate(<i>Ch</i>).FSIMulator.SENDed.DEEMbed.STATE.....	23
	SCPI.CALCulate(<i>Ch</i>).FSIMulator.SENDed.PMCircuit.PORT(<i>Pt</i>).USER.FILEname.....	23
	SCPI.CALCulate(<i>Ch</i>).FSIMulator.SENDed.PMCircuit.PORT(<i>Pt</i>).STATE	24
	SCPI.CALCulate(<i>Ch</i>).FSIMulator.SENDed.PMCircuit.STATE.....	25
	SCPI.CALCulate(<i>Ch</i>).FSIMulator.SENDed.ZCONversion.PORT(<i>Pt</i>).Z0.R	25
	SCPI.CALCulate(<i>Ch</i>).FSIMulator.SENDed.ZCONversion.STATE	26
	SCPI.CALCulate(<i>Ch</i>).FSIMulator.STATE.....	27
	SCPI.CALCulate(<i>Ch</i>).PARameter.COUNT	27
	SCPI.CALCulate(<i>Ch</i>).PARameter(<i>Tr</i>).DEFine	28
	SCPI.CALCulate(<i>Ch</i>).PARameter(<i>Tr</i>).SElect	29
	SCPI.CALCulate(<i>Ch</i>).PARameter(<i>Tr</i>).SPORt	29
	SCPI.CALCulate(<i>Ch</i>).SElected.CONVersion.FUNCTion.....	30
	SCPI.CALCulate(<i>Ch</i>).SElected.CONVeRSTION.STATE.....	31
	SCPI.CALCulate(<i>Ch</i>).SElected.CORRection.EDELay.TIME	31
	SCPI.CALCulate(<i>Ch</i>).SElected.CORRection.OFFSet.PHASE.....	32
	SCPI.CALCulate(<i>Ch</i>).SElected.DATA.FDATA	33
	SCPI.CALCulate(<i>Ch</i>).SElected.DATA.FMEMory	33
	SCPI.CALCulate(<i>Ch</i>).SElected.DATA.SDATA	34
	SCPI.CALCulate(<i>Ch</i>).SElected.DATA.SMEMory	35
	SCPI.CALCulate(<i>Ch</i>).SElected.DATA.XAXis	36
	SCPI.CALCulate(<i>Ch</i>).SElected.FILTer.GATE.TIME.CENTer	36
	SCPI.CALCulate(<i>Ch</i>).SElected.FILTer.GATE.TIME.SHAPe	37
	SCPI.CALCulate(<i>Ch</i>).SElected.FILTer.GATE.TIME.SPAN.....	37
	SCPI.CALCulate(<i>Ch</i>).SElected.FILTer.GATE.TIME.START	38
	SCPI.CALCulate(<i>Ch</i>).SElected.FILTer.GATE.TIME.STATE	39
	SCPI.CALCulate(<i>Ch</i>).SElected.FILTer.GATE.TIME.STOP	39
	SCPI.CALCulate(<i>Ch</i>).SElected.FILTer.GATE.TIME.TYPE	40
	SCPI.CALCulate(<i>Ch</i>).SElected.FORMAT	41
	SCPI.CALCulate(<i>Ch</i>).SElected.FUNCTion.DATA	42
	SCPI.CALCulate(<i>Ch</i>).SElected.FUNCTion.DOMain.COUPle	42
	SCPI.CALCulate(<i>Ch</i>).SElected.FUNCTion.DOMain.START	43
	SCPI.CALCulate(<i>Ch</i>).SElected.FUNCTion.DOMain.STATE	44
	SCPI.CALCulate(<i>Ch</i>).SElected.FUNCTion.DOMain.STOP	44
	SCPI.CALCulate(<i>Ch</i>).SElected.FUNCTion.EXECute	45
	SCPI.CALCulate(<i>Ch</i>).SElected.FUNCTion.PEXCursion.....	45
	SCPI.CALCulate(<i>Ch</i>).SElected.FUNCTion.POINTs	46
	SCPI.CALCulate(<i>Ch</i>).SElected.FUNCTion.PPOLarity	47
	SCPI.CALCulate(<i>Ch</i>).SElected.FUNCTion.TARGET	47
	SCPI.CALCulate(<i>Ch</i>).SElected.FUNCTion.TTRansition.....	48

SCPI.CALCulate(<i>Ch</i>).SELected.FUNCtion.TYPE.....	49
SCPI.CALCulate(<i>Ch</i>).SELected.LIMit.DATA.....	50
SCPI.CALCulate(<i>Ch</i>).SELected.LIMit.DISPlay.STATE.....	51
SCPI.CALCulate(<i>Ch</i>).SELected.LIMit.FAIL.....	51
SCPI.CALCulate(<i>Ch</i>).SELected.LIMit.OFFSet.AMPLitude.....	52
SCPI.CALCulate(<i>Ch</i>).SELected.LIMit.OFFSet.MARKer.....	52
SCPI.CALCulate(<i>Ch</i>).SELected.LIMit.OFFSet.STIMulus	53
SCPI.CALCulate(<i>Ch</i>).SELected.LIMit.REPort.ALL	53
SCPI.CALCulate(<i>Ch</i>).SELected.LIMit.REPort.DATA	54
SCPI.CALCulate(<i>Ch</i>).SELected.LIMit.REPort.POINts	54
SCPI.CALCulate(<i>Ch</i>).SELected.LIMit.STATE	55
SCPI.CALCulate(<i>Ch</i>).SELected.MARKer(<i>Mk</i>).ACTivate	55
SCPI.CALCulate(<i>Ch</i>).SELected.MARKer(<i>Mk</i>).BWIDth.DATA	56
SCPI.CALCulate(<i>Ch</i>).SELected.MARKer.BWIDth.REFERence	57
SCPI.CALCulate(<i>Ch</i>).SELected.MARKer.BWIDth.STATE	58
SCPI.CALCulate(<i>Ch</i>).SELected.MARKer.BWIDth.THreshold	58
SCPI.CALCulate(<i>Ch</i>).SELected.MARKer.BWIDth.TYPE	59
SCPI.CALCulate(<i>Ch</i>).SELected.MARKer.COUPle	60
SCPI.CALCulate(<i>Ch</i>).SELected.MARKer.COUNt	61
SCPI.CALCulate(<i>Ch</i>).SELected.MARKer(<i>Mk</i>).Y	62
SCPI.CALCulate(<i>Ch</i>).SELected.MARKer.FUNCtion.DOMain.COUPle	62
SCPI.CALCulate(<i>Ch</i>).SELected.MARKer.FUNCtion.DOMain.START	64
SCPI.CALCulate(<i>Ch</i>).SELected.MARKer.FUNCtion.DOMain.STATE	64
SCPI.CALCulate(<i>Ch</i>).SELected.MARKer.FUNCtion.DOMain.STOP	65
SCPI.CALCulate(<i>Ch</i>).SELected.MARKer(<i>Mk</i>).FUNCtion.EXECute	65
SCPI.CALCulate(<i>Ch</i>).SELected.MARKer(<i>Mk</i>).FUNCtion.PEXCursion	66
SCPI.CALCulate(<i>Ch</i>).SELected.MARKer(<i>Mk</i>).FUNCtion.PPOLarity	67
SCPI.CALCulate(<i>Ch</i>).SELected.MARKer(<i>Mk</i>).FUNCtion.TARGet	67
SCPI.CALCulate(<i>Ch</i>).SELected.MARKer(<i>Mk</i>).FUNCtion.TRACKing	68
SCPI.CALCulate(<i>Ch</i>).SELected.MARKer(<i>Mk</i>).FUNCtion.TTTransition	69
SCPI.CALCulate(<i>Ch</i>).SELected.MARKer(<i>Mk</i>).FUNCtion.TYPE	70
SCPI.CALCulate(<i>Ch</i>).SELected.MARKer.MATH.FLATness.DATA	70
SCPI.CALCulate(<i>Ch</i>).SELected.MARKer.MATH.FLATness.DOMain.START	72
SCPI.CALCulate(<i>Ch</i>).SELected.MARKer.MATH.FLATness.DOMain.STOP	73
SCPI.CALCulate(<i>Ch</i>).SELected.MARKer.MATH.FLATness.STATE	74
SCPI.CALCulate(<i>Ch</i>).SELected.MARKer.REFERence.STATE	75
SCPI.CALCulate(<i>Ch</i>).SELected.MARKer(<i>Mk</i>).SET	75
SCPI.CALCulate(<i>Ch</i>).SELected.MARKer(<i>Mk</i>).STATE	76
SCPI.CALCulate(<i>Ch</i>).SELected.MARKer(<i>Mk</i>).X	77
SCPI.CALCulate(<i>Ch</i>).SELected.MARKer(<i>Mk</i>).Y	77
SCPI.CALCulate(<i>Ch</i>).SELected.MATH.FUNCtion	78
SCPI.CALCulate(<i>Ch</i>).SELected.MATH.MEMorize	79
SCPI.CALCulate(<i>Ch</i>).SELected.MSTatistics.DATA	79
SCPI.CALCulate(<i>Ch</i>).SELected.MSTatistics.DOMain.MARKer.START	80
SCPI.CALCulate(<i>Ch</i>).SELected.MSTatistics.DOMain.MARKer.STOP	81
SCPI.CALCulate(<i>Ch</i>).SELected.MSTatistics.DOMain.STATE	81
SCPI.CALCulate(<i>Ch</i>).SELected.MSTatistics.STATE.....	82
SCPI.CALCulate(<i>Ch</i>).SELected.RLIMit.DATA	82
SCPI.CALCulate(<i>Ch</i>).SELected.RLIMit.DISPlay.LINE	83
SCPI.CALCulate(<i>Ch</i>).SELected.RLIMit.DISPlay.SElect	84
SCPI.CALCulate(<i>Ch</i>).SELected.RLIMit.DISPlay.VALue	84
SCPI.CALCulate(<i>Ch</i>).SELected.RLIMit.FAIL	85
SCPI.CALCulate(<i>Ch</i>).SELected.RLIMit.REPort.DATA.....	86
SCPI.CALCulate(<i>Ch</i>).SELected.RLIMit.STATE.....	86
SCPI.CALCulate(<i>Ch</i>).SELected.SMOothingAPERture	87
SCPI.CALCulate(<i>Ch</i>).SELected.SMOothing.STATE	87
SCPI.CALCulate(<i>Ch</i>).SELected.TRANSform.TIME.CENTer	88
SCPI.CALCulate(<i>Ch</i>).SELected.TRANSform.TIME.IMPulse.WIDTh	89
SCPI.CALCulate(<i>Ch</i>).SELected.TRANSform.TIME.KBESsel	89
SCPI.CALCulate(<i>Ch</i>).SELected.TRANSform.TIME.LPFREquency	90
SCPI.CALCulate(<i>Ch</i>).SELected.TRANSform.TIME.SPAN	90

SCPI.CALCulate(<i>Ch</i>).SELected.TRANSform.TIME.START	91
SCPI.CALCulate(<i>Ch</i>).SELected.TRANSform.TIME.STATE	91
SCPI.CALCulate(<i>Ch</i>).SELected.TRANSform.TIME.STEP.RTIME	92
SCPI.CALCulate(<i>Ch</i>).SELected.TRANSform.TIME.STIMulus	93
SCPI.CALCulate(<i>Ch</i>).SELected.TRANSform.TIME.STOP	93
SCPI.CALCulate(<i>Ch</i>).SELected.TRANSform.TIME.TYPE	94
SCPI.CALCulate(<i>Ch</i>).TRACe(<i>Tr</i>).DATA.FDATA	95
SCPI.CALCulate(<i>Ch</i>).TRACe(<i>Tr</i>).DATA.FMEMORY	96
SCPI.CALCulate(<i>Ch</i>).TRACe(<i>Tr</i>).DATA.SDATA	96
SCPI.CALCulate(<i>Ch</i>).TRACe(<i>Tr</i>).DATA.SMEMORY	97
SCPI.CALCulate(<i>Ch</i>).TRACe(<i>Tr</i>).DATA.XAXIS	98
SCPI.DISPlay.COLOR.BACK	99
SCPI.DISPlay.COLOR.GRATICULE	99
SCPI.DISPlay.COLOR.RESet	100
SCPI.DISPlay.COLOR.TRACe(<i>Tr</i>).DATA	100
SCPI.DISPlay.COLOR.TRACe(<i>Tr</i>).MEMORY	101
SCPI.DISPlay.ENABLE	102
SCPI.DISPlay.FSIGn	102
SCPI.DISPlay.IMAGE	103
SCPI.DISPlay.MAXimize	105
SCPI.DISPlay.SPLIt	105
SCPI.DISPlay.UPDate.IMMEDIATE	106
SCPI.DISPlay.WINDOW(<i>Ch</i>).ACTivate	106
SCPI.DISPlay.WINDOW(<i>Ch</i>).ANNotation.MARKer.ALIGN.TYPE	107
SCPI.DISPlay.WINDOW(<i>Ch</i>).ANNotation.MARKer.SINGLE.STATE	108
SCPI.DISPlay.WINDOW(<i>Ch</i>).MAXimize	109
SCPI.DISPlay.WINDOW(<i>Ch</i>).SPLIt	109
SCPI.DISPlay.WINDOW(<i>Ch</i>).TITLE.DATA	110
SCPI.DISPlay.WINDOW(<i>Ch</i>).TITLE.STATE	110
SCPI.DISPlay.WINDOW(<i>Ch</i>).TRACe(<i>Tr</i>).ANNOTATION.MARKer.POSITION.X	111
SCPI.DISPlay.WINDOW(<i>Ch</i>).TRACe(<i>Tr</i>).ANNOTATION.MARKer.POSITION.Y	112
SCPI.DISPlay.WINDOW(<i>Ch</i>).TRACe(<i>Tr</i>).MEMORY.STATE	112
SCPI.DISPlay.WINDOW(<i>Ch</i>).TRACe(<i>Tr</i>).STATE	113
SCPI.DISPlay.WINDOW(<i>Ch</i>).TRACe(<i>Tr</i>).Y.SCALE.AUTO	113
SCPI.DISPlay.WINDOW(<i>Ch</i>).TRACe(<i>Tr</i>).Y.SCALE.PDIVISION	114
SCPI.DISPlay.WINDOW(<i>Ch</i>).TRACe(<i>Tr</i>).Y.SCALE.RLEV	115
SCPI.DISPlay.WINDOW(<i>Ch</i>).TRACe(<i>Tr</i>).Y.SCALE.RPOSITION	115
SCPI.DISPlay.WINDOW(<i>Ch</i>).X.SPACING	116
SCPI.DISPlay.WINDOW(<i>Ch</i>).Y.SCALE.DIVISIONS	117
SCPI.HCOPY.ABORT	117
SCPI.HCOPY.DATE.STAMP	118
SCPI.HCOPY.IMAGE	118
SCPI.HCOPY.IMMEDIATE	119
SCPI.HCOPY.PAINT	119
SCPI.IEEE4882.CLS	120
SCPI.IEEE4882.IDN	120
SCPI.IEEE4882.OPC	122
SCPI.IEEE4882.RST	122
SCPI.IEEE4882.TRG	122
SCPI.IEEE4882.WAI	123
SCPI.INITiate(<i>Ch</i>).CONTinuous	123
SCPI.INITiate(<i>Ch</i>).IMMEDIATE	124
SCPI.MMEMory.CATalog(<i>Dir</i>)	125
SCPI.MMEMory.COPY(<i>Src</i> , <i>Dst</i>)	126
SCPI.MMEMory.DELETE(<i>File</i>)	126
SCPI.MMEMory.LOAD.CHANnel.STATE	126
SCPI.MMEMory.LOAD.CKIT(<i>Ck</i>)	127
SCPI.MMEMory.LOAD.LIMIT	128
SCPI.MMEMory.LOAD.PLOSS(<i>Pt</i>)	128
SCPI.MMEMory.LOAD.RLIMIT	129
SCPI.MMEMory.LOAD.SEGMENT	129

SCPI.MMEMory.LOAD.SNP.DATA	131
SCPI.MMEMory.LOAD.SNP.TRACe(<i>Tr</i>).MEMORY	132
SCPI.MMEMory.LOAD.STATE	132
SCPI.MMEMory.MDIRectory	133
SCPI.MMEMory.STORe.CHANnel.CLEar	133
SCPI.MMEMory.STORe.CHANnel.STATE	134
SCPI.MMEMory.STORe.CKIT(<i>Ck</i>)	134
SCPI.MMEMory.STORe.FDATA	135
SCPI.MMEMory.STORe.IMAGE	135
SCPI.MMEMory.STORe.LIMit	136
SCPI.MMEMory.STORe.PLOSSs(<i>Pt</i>)	136
SCPI.MMEMory.STORe.RLIMit	137
SCPI.MMEMory.STORe.SEGment	137
SCPI.MMEMory.STORe.SNP.DATA	138
SCPI.MMEMory.STORe.SNP.FORMat	138
SCPI.MMEMory.STORe.SNP.TYPE.S1P	139
SCPI.MMEMory.STORe.SNP.TYPE.S2P	139
SCPI.MMEMory.STORe.SNP.TYPE.S3P	141
SCPI.MMEMory.STORe.SNP.TYPE.S4P	142
SCPI.MMEMory.STORe.STATE	142
SCPI.MMEMory.STORe.STYPE	143
SCPI.OUTPut.STATE	143
SCPI.SENSe(<i>Ch</i>).AVERage.CLEAR	144
SCPI.SENSe(<i>Ch</i>).AVERage.COUNt	144
SCPI.SENSe(<i>Ch</i>).AVERage.STATE	145
SCPI.SENSe(<i>Ch</i>).BANDwidth.RESolution	145
SCPI.SENSe(<i>Ch</i>).CORRection.CLEAR	146
SCPI.SENSe(<i>Ch</i>).CORRection.COEFficient.DATA(<i>Str</i> , <i>Pt_r</i> , <i>Pt_s</i>)	146
SCPI.SENSe(<i>Ch</i>).CORRection.COEFficient.METHod.EREspOnse	148
SCPI.SENSe(<i>Ch</i>).CORRection.COEFficient.METHod.RESPonse.OPEN	148
SCPI.SENSe(<i>Ch</i>).CORRection.COEFficient.METHod.RESPonse.SHORt	149
SCPI.SENSe(<i>Ch</i>).CORRection.COEFficient.METHod.RESPonse.THRU	149
SCPI.SENSe(<i>Ch</i>).CORRection.COEFficient.METHod.SOLT1	150
SCPI.SENSe(<i>Ch</i>).CORRection.COEFficient.METHod.SOLT2	151
SCPI.SENSe(<i>Ch</i>).CORRection.COEFficient.METHod.SOLT3	152
SCPI.SENSe(<i>Ch</i>).CORRection.COEFficient.METHod.SOLT4	153
SCPI.SENSe(<i>Ch</i>).CORRection.COEFficient.SAVE	153
SCPI.SENSe(<i>Ch</i>).CORRection.COLlect.ACQuire.ISOLation	154
SCPI.SENSe(<i>Ch</i>).CORRection.COLlect.ACQuire.LOAD	155
SCPI.SENSe(<i>Ch</i>).CORRection.COLlect.ACQuire.OPEN	156
SCPI.SENSe(<i>Ch</i>).CORRection.COLlect.ACQuire.SHORt	157
SCPI.SENSe(<i>Ch</i>).CORRection.COLlect.ACQuire.SUBClass	158
SCPI.SENSe(<i>Ch</i>).CORRection.COLlect.ACQuire.THRU	158
SCPI.SENSe(<i>Ch</i>).CORRection.COLlect.ACQuire.TRLLine	160
SCPI.SENSe(<i>Ch</i>).CORRection.COLlect.ACQuireTRLReflect	161
SCPI.SENSe(<i>Ch</i>).CORRection.COLlect.ACQuireTRLThru	162
SCPI.SENSe(<i>Ch</i>).CORRection.COLlect.CKIT.LABel	162
SCPI.SENSe(<i>Ch</i>).CORRection.COLlect.CKIT.ORDer.LOAD(<i>Pt</i>)	163
SCPI.SENSe(<i>Ch</i>).CORRection.COLlect.CKIT.ORDer.OPEN(<i>Pt</i>)	163
SCPI.SENSe(<i>Ch</i>).CORRection.COLlect.CKIT.ORDer.SElect	164
SCPI.SENSe(<i>Ch</i>).CORRection.COLlect.CKIT.ORDer.SHORt(<i>Pt</i>)	165
SCPI.SENSe(<i>Ch</i>).CORRection.COLlect.CKIT.ORDer.THRU(<i>Pt_m</i> , <i>Pt_n</i>)	165
SCPI.SENSe(<i>Ch</i>).CORRection.COLlect.CKIT.ORDer.TRLLine(<i>Pt_m</i> , <i>Pt_n</i>)	167
SCPI.SENSe(<i>Ch</i>).CORRection.COLlect.CKIT.ORDerTRLReflect(<i>Pt</i>)	168
SCPI.SENSe(<i>Ch</i>).CORRection.COLlect.CKIT.ORDerTRLThru(<i>Pt_m</i> , <i>Pt_n</i>)	169
SCPI.SENSe(<i>Ch</i>).CORRection.COLlect.CKIT.RESet	169
SCPI.SENSe(<i>Ch</i>).CORRection.COLlect.CKIT.SElect	170
SCPI.SENSe(<i>Ch</i>).CORRection.COLlect.CKIT.STAN(<i>Std</i>).ARBitrary	171
SCPI.SENSe(<i>Ch</i>).CORRection.COLlect.CKIT.STAN(<i>Std</i>).C0	172
SCPI.SENSe(<i>Ch</i>).CORRection.COLlect.CKIT.STAN(<i>Std</i>).C1	172
SCPI.SENSe(<i>Ch</i>).CORRection.COLlect.CKIT.STAN(<i>Std</i>).C2	173

SCPI.SENSe(<i>Ch</i>).CORRection.COLLeCT.CKIT.STAN(<i>Std</i>).C3	174
SCPI.SENSe(<i>Ch</i>).CORRection.COLLeCT.CKIT.STAN(<i>Std</i>).DELay	174
SCPI.SENSe(<i>Ch</i>).CORRection.COLLeCT.CKIT.STAN(<i>Std</i>).FMAXimum	176
SCPI.SENSe(<i>Ch</i>).CORRection.COLLeCT.CKIT.STAN(<i>Std</i>).FMINimum.....	177
SCPI.SENSe(<i>Ch</i>).CORRection.COLLeCT.CKIT.STAN(<i>Std</i>).L0	177
SCPI.SENSe(<i>Ch</i>).CORRection.COLLeCT.CKIT.STAN(<i>Std</i>).L1	178
SCPI.SENSe(<i>Ch</i>).CORRection.COLLeCT.CKIT.STAN(<i>Std</i>).L2	178
SCPI.SENSe(<i>Ch</i>).CORRection.COLLeCT.CKIT.STAN(<i>Std</i>).L3	179
SCPI.SENSe(<i>Ch</i>).CORRection.COLLeCT.CKIT.STAN(<i>Std</i>).LABel	180
SCPI.SENSe(<i>Ch</i>).CORRection.COLLeCT.CKIT.STAN(<i>Std</i>).LOSS	180
SCPI.SENSe(<i>Ch</i>).CORRection.COLLeCT.CKIT.STAN(<i>Std</i>).TYPE	181
SCPI.SENSe(<i>Ch</i>).CORRection.COLLeCT.CKIT.STAN(<i>Std</i>).Z0	182
SCPI.SENSe(<i>Ch</i>).CORRection.COLLeCT.CLEAR.....	182
SCPI.SENSe(<i>Ch</i>).CORRection.COLLeCT.DATa.ISOLation(<i>Pt_r, Pt_s</i>).....	183
SCPI.SENSe(<i>Ch</i>).CORRection.COLLeCT.DATa.LOAd(<i>Pt</i>)	184
SCPI.SENSe(<i>Ch</i>).CORRection.COLLeCT.DATa.OPEn(<i>Pt</i>).....	184
SCPI.SENSe(<i>Ch</i>).CORRection.COLLeCT.DATa.SHORt(<i>Pt</i>)	185
SCPI.SENSe(<i>Ch</i>).CORRection.COLLeCT.DATa.THRU.MATCH(<i>Pt_r, Pt_s</i>)	186
SCPI.SENSe(<i>Ch</i>).CORRection.COLLeCT.DATa.THRU.TRANSmission(<i>Pt_r, Pt_s</i>)	186
SCPI.SENSe(<i>Ch</i>).CORRection.COLLeCT.ECAL.INFormation	187
SCPI.SENSe(<i>Ch</i>).CORRection.COLLeCT.ECAL.ORienation.STATE.....	189
SCPI.SENSe(<i>Ch</i>).CORRection.COLLeCT.ECAL.PATH(<i>Pt</i>)	190
SCPI.SENSe(<i>Ch</i>).CORRection.COLLeCT.ECAL.SOLT1	191
SCPI.SENSe(<i>Ch</i>).CORRection.COLLeCT.ECAL.SOLT2	191
SCPI.SENSe(<i>Ch</i>).CORRection.COLLeCT.ECAL.UChar	192
SCPI.SENSe(<i>Ch</i>).CORRection.COLLeCT.ECAL.UTHRu.STATE	193
SCPI.SENSe(<i>Ch</i>).CORRection.COLLeCT.METHOD.EREspOnse	194
SCPI.SENSe(<i>Ch</i>).CORRection.COLLeCT.METHOD.RESPOnse.OPEN	194
SCPI.SENSe(<i>Ch</i>).CORRection.COLLeCT.METHOD.RESPOnse.SHOrT	195
SCPI.SENSe(<i>Ch</i>).CORRection.COLLeCT.METHOD.RESPOnse.THRU	195
SCPI.SENSe(<i>Ch</i>).CORRection.COLLeCT.METHOD.SOLT1	196
SCPI.SENSe(<i>Ch</i>).CORRection.COLLeCT.METHOD.SOLT2	196
SCPI.SENSe(<i>Ch</i>).CORRection.COLLeCT.METHOD.SOLT3	198
SCPI.SENSe(<i>Ch</i>).CORRection.COLLeCT.METHOD.SOLT4	199
SCPI.SENSe(<i>Ch</i>).CORRection.COLLeCT.METHOD.TRL2	200
SCPI.SENSe(<i>Ch</i>).CORRection.COLLeCT.METHOD.TRL3	201
SCPI.SENSe(<i>Ch</i>).CORRection.COLLeCT.METHOD.TRL4	202
SCPI.SENSe(<i>Ch</i>).CORRection.COLLeCT.METHOD.TYPE	202
SCPI.SENSe(<i>Ch</i>).CORRection.COLLeCT.SAVE	203
SCPI.SENSe(<i>Ch</i>).CORRection.COLLeCT.SIMPlified.SAVE	205
SCPI.SENSe(<i>Ch</i>).CORRection.EXTension.PORT(<i>Pt</i>).FREQuency(<i>Ls</i>)	205
SCPI.SENSe(<i>Ch</i>).CORRection.EXTension.PORT(<i>Pt</i>).INCLude(<i>Ls</i>).STATE	207
SCPI.SENSe(<i>Ch</i>).CORRection.EXTension.PORT(<i>Pt</i>).LDC	207
SCPI.SENSe(<i>Ch</i>).CORRection.EXTension.PORT(<i>Pt</i>).LOSS(<i>Ls</i>)	208
SCPI.SENSe(<i>Ch</i>).CORRection.EXTension.PORT(<i>Pt</i>).TIME	208
SCPI.SENSe(<i>Ch</i>).CORRection.EXTension.STATE	209
SCPI.SENSe(<i>Ch</i>).CORRection.INFormation	211
SCPI.SENSe(<i>Ch</i>).CORRection.IMPedance.INPUT.MAGNitude.....	211
SCPI.SENSe(<i>Ch</i>).CORRection.OFFSet.CLEar	212
SCPI.SENSe(<i>Ch</i>).CORRection.OFFSet.COLLeCT.ACQuire.LOAD	213
SCPI.SENSe(<i>Ch</i>).CORRection.OFFSet.COLLeCT.ACQuire.OPEN	214
SCPI.SENSe(<i>Ch</i>).CORRection.OFFSet.COLLeCT.ACQuire.SHORt.....	215
SCPI.SENSe(<i>Ch</i>).CORRection.OFFSet.COLLeCT.ACQuire.THRU	216
SCPI.SENSe(<i>Ch</i>).CORRection.OFFSet.COLLeCT.ACQuire.PMETer.....	217
SCPI.SENSe(<i>Ch</i>).CORRection.OFFSet.COLLeCT.CLEar	218
SCPI.SENSe(<i>Ch</i>).CORRection.OFFSet.COLLeCT.METHOD.SMIX2	219
SCPI.SENSe(<i>Ch</i>).CORRection.OFFSet.COLLeCT.SAVE	220
SCPI.SENSe(<i>Ch</i>).CORRection.RECeiver(<i>Pt</i>).COLLeCT.ACQuire	221
SCPI.SENSe(<i>Ch</i>).CORRection.RECeiver(<i>Pt</i>).COLLeCT.RCHannel.ACQuire	222
SCPI.SENSe(<i>Ch</i>).CORRection.RECeiver(<i>Pt</i>).COLLeCT.TCHannel.ACQuire	223
SCPI.SENSe(<i>Ch</i>).CORRection.RECeiver(<i>Pt</i>).OFFSet.AMPlitude	223

SCPI.SENSE(<i>Ch</i>).CORRection.RECeiver(<i>Pt</i>).STATE.....	225
SCPI.SENSE(<i>Ch</i>).CORRection.STATE	225
SCPI.SENSE(<i>Ch</i>).CORRection.TYPE(<i>Tr</i>).....	226
SCPI.SENSE(<i>Ch</i>).DATA.CORRdata(<i>Param</i>).....	227
SCPI.SENSE(<i>Ch</i>).DATA.RAWData(<i>Param</i>)	228
SCPI.SENSE(<i>Ch</i>).FREQuency.CENTer.....	229
SCPI.SENSE(<i>Ch</i>).FREQuency.CW	229
SCPI.SENSE(<i>Ch</i>).FREQuency.DATA	230
SCPI.SENSE(<i>Ch</i>).FREQuency.SPAN	230
SCPI.SENSE(<i>Ch</i>).FREQuency.START.....	231
SCPI.SENSE(<i>Ch</i>).FREQuency.STOP	232
SCPI.SENSE(<i>Ch</i>).OFFSet.ADJust.CONTinuous.PERiod.....	233
SCPI.SENSE(<i>Ch</i>).OFFSet.ADJust.CONTinuous.STATE	234
SCPI.SENSE(<i>Ch</i>).OFFSet.ADJust.EXECute	235
SCPI.SENSE(<i>Ch</i>).OFFSet.ADJust.PORT	236
SCPI.SENSE(<i>Ch</i>).OFFSet.ADJust.STATE	237
SCPI.SENSE(<i>Ch</i>).OFFSet.ADJust.Value	238
SCPI.SENSE(<i>Ch</i>).OFFSet.PORT(<i>Pt</i>).FREQuency.DATA	239
SCPI.SENSE(<i>Ch</i>).OFFSet.PORT(<i>Pt</i>).FREQuency.DIVisor	240
SCPI.SENSE(<i>Ch</i>).OFFSet.PORT(<i>Pt</i>).FREQuency.MULTiplier.....	241
SCPI.SENSE(<i>Ch</i>).OFFSet.PORT(<i>Pt</i>).FREQuency.OFFSet	242
SCPI.SENSE(<i>Ch</i>).OFFSet.PORT(<i>Pt</i>).FREQuency.START	243
SCPI.SENSE(<i>Ch</i>).OFFSet.PORT(<i>Pt</i>).FREQuency.STOP	244
SCPI.SENSE(<i>Ch</i>).OFFSet.STATE.....	245
SCPI.SENSE(<i>Ch</i>).ROScillator.SOURce.....	245
SCPI.SENSE(<i>Ch</i>).SEGment.DATA	246
SCPI.SENSE(<i>Ch</i>).SWEep.POInt.TIME	247
SCPI.SENSE(<i>Ch</i>).SWEep.POINTs.....	248
SCPI.SENSE(<i>Ch</i>).SWEep.TYPE.....	248
SCPI.SERVICE.CHANnel.ACTive	249
SCPI.SERVICE.CHANnel.COUNT	250
SCPI.SERVICE.CHANnel(<i>Ch</i>).TRACe.ACTive	250
SCPI.SERVICE.CHANnel.TRACe.COUNT	250
SCPI.SERVICE.PORT.COUNT	251
SCPI.SERVICE.SWEep.FREQuency.MAXimum	251
SCPI.SERVICE.SWEep.FREQuency.MINimum	252
SCPI.SERVICE.SWEep.POINTs.....	252
SCPI.SOURCE(<i>Ch</i>).POWER.CENTer	253
SCPI.SOURCE(<i>Ch</i>).POWER.LEVel.IMMEDIATE.AMPLitude	253
SCPI.SOURCE(<i>Ch</i>).POWER.LEVel.SLOPe.DATA	254
SCPI.SOURCE(<i>Ch</i>).POWER.LEVel.SLOPe.STATE	255
SCPI.SOURCE(<i>Ch</i>).POWER.PORT(<i>Pt</i>).CORRection.COLlect.ACQuire	255
SCPI.SOURCE(<i>Ch</i>).POWER.PORT(<i>Pt</i>).CORRection.COLLECT.TABLE. LOSS.DATA	255
SCPI.SOURCE(<i>Ch</i>).POWER.PORT(<i>Pt</i>).CORRection.COLLECT.TABLE. LOSS.STATE	256
SCPI.SOURCE(<i>Ch</i>).POWER.PORT(<i>Pt</i>).CORRection.DATA	257
SCPI.SOURCE(<i>Ch</i>).POWER.PORT(<i>Pt</i>).CORRection.STATE	257
SCPI.SOURCE(<i>Ch</i>).POWER.PORT(<i>Pt</i>).LEVEL.IMMEDIATE.AMPLitude	259
SCPI.SOURCE(<i>Ch</i>).POWER.PORT.COUPle	260
SCPI.SOURCE(<i>Ch</i>).POWER.SPAN	260
SCPI.SOURCE(<i>Ch</i>).POWER.START	261
SCPI.SOURCE(<i>Ch</i>).POWER.STOP	262
SCPI.STATUS.OPERation.CONDITION	262
SCPI.STATUS.OPERation.ENABLE	263
SCPI.STATUS.OPERATION.EVENT	263
SCPI.STATUS.OPERATION.NTRansition	263
SCPI.STATUS.OPERATION.PTRansition	264
SCPI.STATUS.PRESET.....	264
SCPI.STATUS.QUESTIONable.CONDITION	265
SCPI.STATUS.QUESTIONable.ENABLE	265
SCPI.STATUS.QUESTIONable.EVENT	266
SCPI.STATUS.QUESTIONable.LIMit.CHANnel(<i>Ch</i>).CONDITION	266

SCPI.STATUS.QUESTIONable.LIMit.CHANnel(<i>Ch</i>).ENABLE	266
SCPI.STATUS.QUESTIONable.LIMit.CHANnel(<i>Ch</i>).EVENT	267
SCPI.STATUS.QUESTIONable.LIMit.CHANnel(<i>Ch</i>).NTRansition	267
SCPI.STATUS.QUESTIONable.LIMit.CHANnel(<i>Ch</i>).PTRansition	268
SCPI.STATUS.QUESTIONable.LIMit.CONDITION	268
SCPI.STATUS.QUESTIONable.LIMit.ENABLE	269
SCPI.STATUS.QUESTIONable.LIMit.EVENT	269
SCPI.STATUS.QUESTIONable.LIMit.NTRansition	270
SCPI.STATUS.QUESTIONable.LIMit.PTRansition	270
SCPI.STATUS.QUESTIONable.NTRansition	271
SCPI.STATUS.QUESTIONable.PTRansition	271
SCPI.STATUS.QUESTIONable.RLIMit.CHANnel(<i>Ch</i>).CONDITION	272
SCPI.STATUS.QUESTIONable.RLIMit.CHANnel(<i>Ch</i>).ENABLE	272
SCPI.STATUS.QUESTIONable.RLIMit.CHANnel(<i>Ch</i>).EVENT	273
SCPI.STATUS.QUESTIONable.RLIMit.CHANnel(<i>Ch</i>).NTRansition	273
SCPI.STATUS.QUESTIONable.RLIMit.CHANnel(<i>Ch</i>).PTRansition	274
SCPI.STATUS.QUESTIONable.RLIMit.CONDITION	274
SCPI.STATUS.QUESTIONable.RLIMit.ENABLE	275
SCPI.STATUS.QUESTIONable.RLIMit.EVENT	275
SCPI.STATUS.QUESTIONable.RLIMit.NTRansition	276
SCPI.STATUS.QUESTIONable.RLIMit.PTRansition	276
SCPI.SYSTem.BEEPer.COMplete.IMMediate	277
SCPI.SYSTem.BEEPer.COMplete.STATE	277
SCPI.SYSTem.BEEPer.WARNING.IMMediate	277
SCPI.SYSTem.BEEPer.WARNING.STATE	278
SCPI.SYSTem.COMMunicate.ECAL.TEMPerature.SENSOR	278
SCPI.SYSTem.COMMunicate.ECAL.IMPedance(<i>Pt</i>)	280
SCPI.SYSTem.COMMunicate.ECAL.THRU(<i>Pt1</i> , <i>Pt2</i>)	280
SCPI.SYSTem.CORRection.STATE	281
SCPI.SYSTem.DATE	281
SCPI.SYSTem.HIDE	282
SCPI.SYSTem.LOCal	283
SCPI.SYSTem.PRESet	283
SCPI.SYSTem.REMote	284
SCPI.SYSTem.RWLock	284
SCPI.SYSTem.SHOW	285
SCPI.SYSTem.TEMPerature.SENSOR(<i>Idx</i>)	285
SCPI.SYSTem.TERMinate	286
SCPI.SYSTem.TIME	286
SCPI.TRIGger.SEQuence.IMMediate	286
SCPI.TRIGger.SEQuence.SINGle	288
SCPI.TRIGger.SEQuence.SOURCE	288
Appendix 1. IEE488.2 Status Reporting System	290
Appendix 2. Error Codes	296
Appendix 3. Programming Examples	297

1 Introduction

This Manual contains information on Network Analyzer remote control and its data communication by means of user programs written with COM/DCOM technology.

COM technology is used when a user program runs together with an external measurement instrument program on one PC. DCOM technology is used when a user program runs on a PC connected with the measurement instrument by LAN.

Methods and techniques for writing of user programs are same for the both technologies. The only difference between the technologies is that the DCOM technology requires additional LAN setting performed by the LAN administrator.

Before reading this Manual, familiarize yourself with Analyzer Operating Manual.

2 Scope of Manual

This Manual directly applies to the S8081 model Network Analyzer and to the software module S8081.exe.

3 Registering COM Server

To register COM server of the analyzer run the executable module from command prompt with the */regserver* keyword. To unregister COM server of the analyzer run the executable module from command prompt with the */unregserver* keyword. Administrative rights is required to register/unregister COM server. Also user has ability to register COM server during the software installation procedure.

Example of the COM server registration command:

```
S8081.exe /regserver
```

4 COM Technology Overview

COM stands for *Component Object Model*. This programming technology was developed by Microsoft for two purposes:

- the model provides the specification for interaction of binary modules created in different programming languages;
- the model defines the interfacing between a client application and a server application running either on the same PC or on two different PCs. In the latter case, the technology has DCOM abbreviation – Distributed COM.

5 Automation Server

The network analyzer executable module contains a built-in COM server that enables other programs to access its functionality. The COM server was developed in conformity with the *COM automation* specification. COM automation is a technology allowing control over the COM server by the programs written in both traditional compiling programming languages and interpreting programming languages, such as VBScript. This enables the server applications to make their functionality accessible to many more clients.

6 Automation Controllers

Automation controllers are client programs, which use internal functionality of COM servers. Automation controller programs are developed by users for writing their own add-ons for the system.

User programs can be written in different languages:

- programming languages with built-in COM support, such as Visual Basic®, Delphi, Java;
- universal programming languages, such as C, C++;
- Microsoft Excel and Word office applications as they include built-in programming language Visual Basic for Applications®;
- program generators, such as National Instruments LabVIEW®, MathWorks MATLAB®.

Examples used thru this Manual are written in Visual Basic (VB). Appendix 3 contains examples written in VB, C++, and LabView languages.

Examples\COM\VBA folder contains source codes for examples written in Visual Basic for Applications® (Microsoft Excel files).

Examples\COM\CPP folder contains source codes for the C++ language examples.

Examples\COM\LabView folder contains source codes for the LabView language examples.

7 Local and Remote Server

The network analyzer executable module can function either as a *local* server or as a *remote* server of COM automation.

Local server runs on the same PC with the automation controller and each of the programs is executed as an individual application in a separate window. COM technology is used in this case (Figure 1).

Remote server and the automation controller run on different PCs connected by LAN. DCOM (Distributed COM) technology is used in this case (Figure 2). When using DCOM it is necessary to configure the local network by means of DCOM Windows tools.

The same automation controller is used for the both COM and DCOM technology. Some changes to the user program may be required in operators, which establish connection with the server. Moreover, DCOM technology requires additional settings of the LAN performed by the LAN administrator.

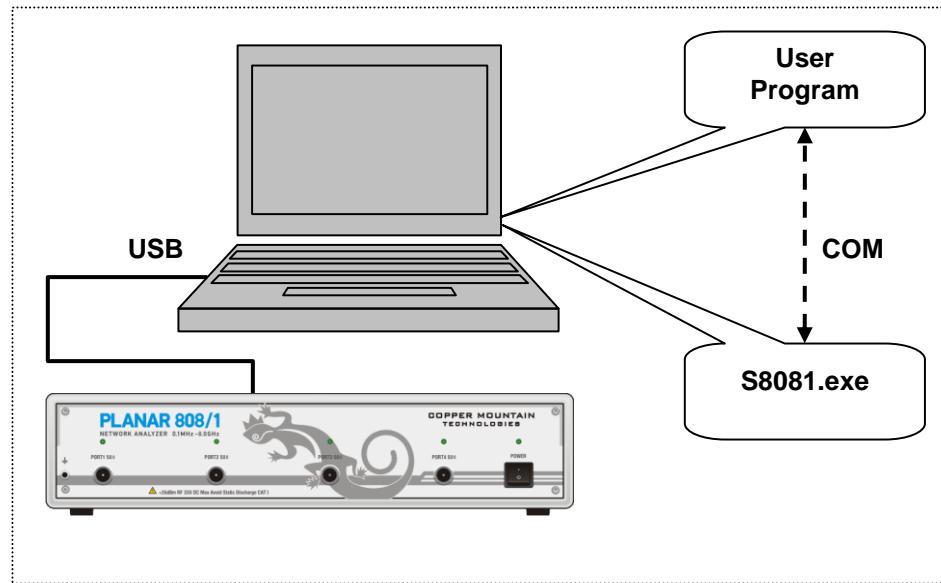


Figure 1. COM technology

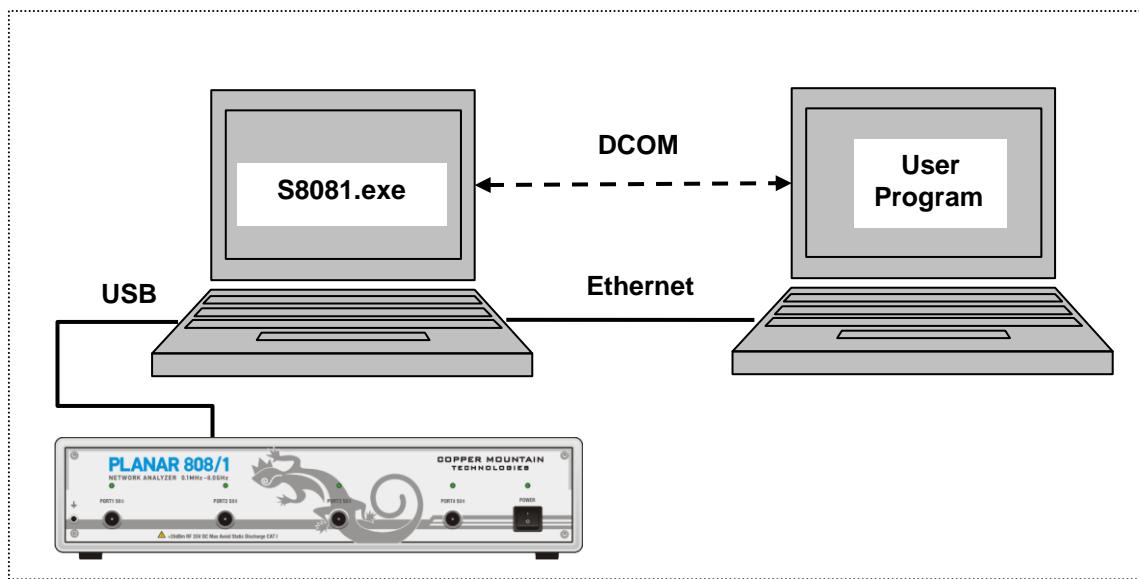


Figure 2. DCOM technology

8 Structure of COM Objects

COM server contains several *objects*, which provide different functionality of the server. The COM objects of the network analyzer executable module are organized in a hierarchical structure. Figure 3 shows the main COM objects, which comprise the first three levels of the hierarchical structure of the COM server. COM objects provide various *methods* and *properties*, which allow access to the server functions; besides, they allow access to the objects of the lower levels, which are not shown in Figure 3.

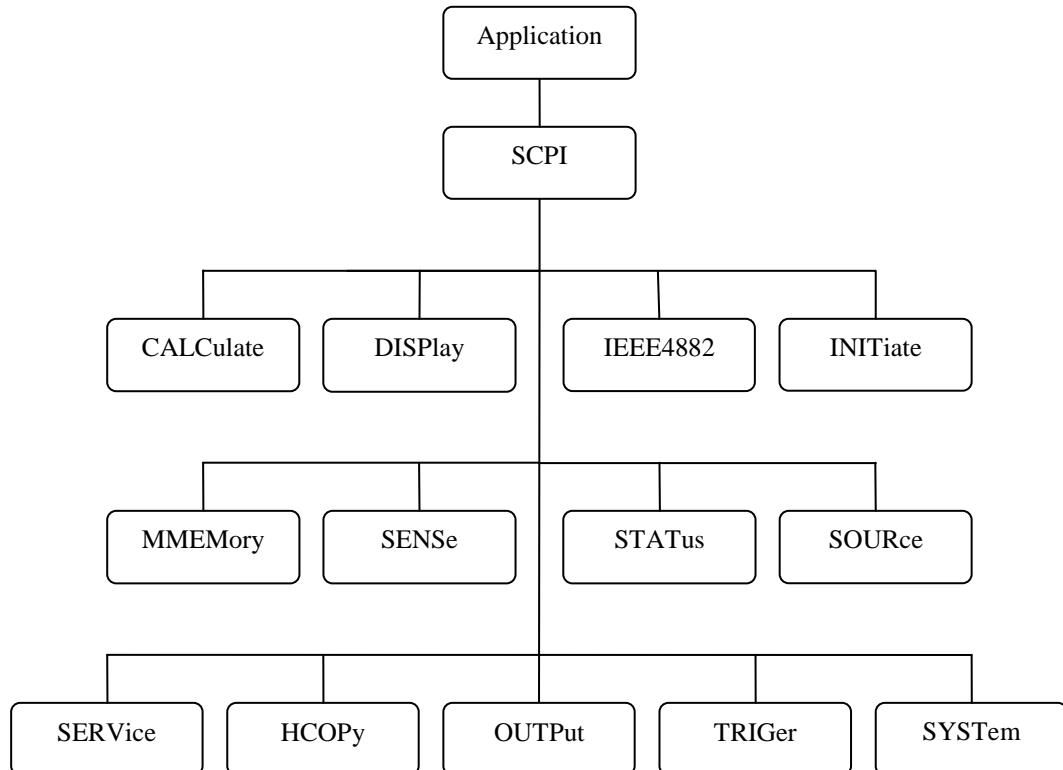


Figure 3. The structure of COM objects

The Object *Application* is in the top of the hierarchy of the COM server. Access to the lower level objects is implemented via higher level objects.

Note

The hierarchy of COM objects and their names are taken from the command system used for control over the Network Analyzers via GPIB interface. GPIB communication protocol complies with the IEE488.2 standard. In accordance with this standard the SCPI programming language is used. Operators in SCPI have hierarchical chain structure, for example:

```
CALCulate:PARameter:DEFine S11
```

The same command in COM written in VB programming language is as follows:

```
app.SCPI.CALCulate.PARameter.DEFine = "S11"
```

9 Accessing the Application Object

To establish connection with the COM server application, create an object reference in the client program. In COM programming the object reference needs to be acquired preliminarily, to be used later to access the object functionality. To define an object in Visual Basic perform the following:

- 1) Declare a variable as an object.
- 2) Assign the object to this variable.

To declare a variable, use *Dim* operator or other declaration statement (*Public*, *Private* or *Static*). The variables used for references should of the types *Variant*, *Object*, or a type of a specific object. For example, the following three operators declare *app* variable:

```
Dim app
Dim app as Object
Dim app as S8081.Application
```

Use *Set* operator and *CreateObject* (*ObjectName*, *HostName*) function to assign a specific object to a variable.

<i>ObjectName</i>	Object name is always equal to “ <i>S8081.Application</i> ”
<i>HostName</i>	Network name of the PC hosting the COM server. This parameter is not specified in case of a local server.

For example, the following operators create *Application* object and assign it to *app* variable:

```
Set app = CreateObject("S8081.Application")
Set app = CreateObject("S8081.Application", "Host_Name")
Set app = CreateObject("S8081.Application", "192.168.1.149")
```

Note	The first form of the operator is used to create the reference to the local COM server, the second and third forms are used to create the reference to the remote DCOM server.
------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

To allow access to the objects of a lower level of the hierarchy, these objects are specified after the reference to the higher level object and separated from it by a dot. For example:

```
Dim SystObj
Set SystObj = app.SCPI.SYSTem
```

COM objects can have indices. For example, *CALCulate*, *INITiate*, *SENSe*, *SOURce* objects represent various aspects of the 16 measurement channels of the Analyzer. Therefore, it is necessary to write the channel index from 1 to 16 to acquire the data of these objects. For example:

```
Set SensObj1 = app.SCPI.SENSe(1)
Set SensObj2 = app.SCPI.SENSe(2)
```

Visual Basic allows omitting of such indices; in this case the indices are considered as equal to 1. For example, the following VB operators are equivalent:

```
Set SensObj = app.SCPI.SENSe(1)
Set SensObj = app.SCPI.SENSe
```

10 Object Methods

Objects have methods. Methods are actions that can be applied to objects. The object methods are specified after the object name and separated from it by a dot.

The following example shows the *PRESet* method of *SYSTem* object. This method performs setting of the Analyzer to the preset condition:

```
app.SCPI.SYSTem.PRESet
```

11 Object Properties

Along with methods, objects have properties. Properties are object characteristics that can be set or read out. The object properties are specified after the object name and separated from it by a dot.

To modify an object characteristic, write the value of the corresponding property. To define an object characteristic, read out the value of its property. The following example show the setting of the *POINts* property of *SWEep* object, i.e. the number of sweep points:

```
app.SCPI.SENSe.SWEp.POINts = 201
```

Note

Some object properties cannot be written, and some object properties cannot be read. In such cases, the properties are indicated as “read only” or “write only”.

12 Error Handling

You can use different approaches to error handling in VB program:

- check the value of *Err.Number* variable after execution of VB operator, which contains the call to the COM server object;
- use *On Error goto* VB operator.

These approaches are represented in the examples below. The following operator causes an error in VB program as “*S13*” value of the *DEFine* property is incorrect.

```
app.SCPI.PARameter.DEFine = "S13"
```

In the first example, the value of the *Err.Number* variable is checked after execution of the VB operator, which contains the call to the COM server object. *On Error Resume Next* directive instructs VB not to interrupt the program execution when the error is detected but to pass control to the next operator in natural order.

```

Dim app
Public Sub HandleError1()
Set app = CreateObject("S8081.Application")
On Error Resume Next
app.SCPI.PARameter.DEFine = "S13"
If Err.Number <> 0 Then
    Msg = "Error # " & Str(Err.Number) & " was generated by " &_
    Err.Source & Chr(13) & Err.Description
    MsgBox Msg,, "Error"
End If
...
End Sub

```

In the second example, *On Error GoTo ErrHandler* directive instructs VB to interrupt the program execution when the error is detected and to pass control to *ErrHandler* label.

```

Dim app
Public Sub HandleError2()
Set app = CreateObject("S8081.Application")
On Error GoTo ErrHandler
app.SCPI.PARameter.DEFine = "S13"
...
Exit Sub
ErrorHandler:
Msg = "Error # " & Str(Err.Number) & " was generated by " &_
Err.Source & Chr(13) & Err.Description
MsgBox Msg,, "Error"
End Sub

```

13 COM Automation Data Types

In COM automation, there are the following data types, which can be used for client-to-server communication:

Long	32-bit signed integer, value range from -2147483648 to 2147483647
-------------	-------------------------------------------------------------------

Double	64-bit double-precision floating point, value range from –1.79769313486232E308 to –4.94065645841247E–324 for negative values, and from 4.94065645841247E–324 to 1.79769313486232E308 for positive values
Boolean	16-bit integer, two values 0 – <i>false</i> , 1 – <i>true</i>
String	Variable-length string
Variant	Can be either a value of arbitrary type or an array of values of arbitrary type. In this case, the term “arbitrary type” means any allowed type of COM automation. A variable contains information about its type and array size (if it is an array). It is used for communication of data arrays between a client and a server.

14 Measurement Data Arrays

Measurement data can be either complex values or real values. This depends on the format selected by the user. For example, the data is real in logarithmic magnitude format and the data is complex in polar format.

The measurement data is transferred in a *Variant* type variable, which represents an array of *Double* type. To transfer one complex measurement, two adjacent array cells are used. To transfer one real measurement two adjacent array cells are used as well but the second cell is always equal to 0. Thus, measurement data array size is a double number of the measurement points.




Figure 4. Array of complex measurements




Figure 5. Array of real measurements

15 COM Server Commands

NAME

<i>Object Type</i>	Property (read only)
<i>Data Type</i>	String
<i>Description</i>	Instrument information string. String format: manufacturer, model, serial number, number of firmware version and number of software version.
<i>Range</i>	up to 40 characters
<i>Syntax</i>	Dim <i>ID</i> As String <i>ID</i> = app.NAME
<i>Equivalent Softkeys</i>	None

READY

<i>Object Type</i>	Property (read only)
<i>Data Type</i>	Boolean
<i>Description</i>	Ready state of the instrument. Reads out the <i>True</i> value after successful completion of the boot process (about 10 sec). The analyzer must be connected to PC by a USB cable.
<i>Syntax</i>	Dim <i>State</i> as Boolean <i>State</i> = app.READY

<i>Equivalent Softkeys</i>	None
----------------------------	-------------

SCPI.ABORT

<i>Object Type</i>	Method
<i>Description</i>	Aborts the sweep and switches the triggers of all the channels to <i>Hold</i> . The channels in <i>Continuous</i> trigger mode switch to waiting for a trigger. If the trigger source is set to <i>Internal</i> , the channel from waiting for a trigger turns to a new sweep.
<i>Syntax</i>	<i>app.SCPI.ABORT</i>
<i>Equivalent Softkeys</i>	Stimulus > Trigger > Restart

SCPI.CALCulate(*Ch*).FSIMulator.SENDed.DEEMbed.PORT(*Pt*).USER.FILEname

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	String
<i>Target</i>	Port <i>Pt</i> of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Pt</i> : port number 1–2 (see Table 2 on page 25)
<i>Description</i>	De-embedding function file name (*.s2p). The file contains the circuit S-parameters in Touchstone format.
<i>Range</i>	up to 256 characters
<i>Preset Value</i>	""
<i>Syntax</i>	<pre>Dim File As String File = app.SCPI.CALCulate(<i>Ch</i>).FSIMulator.SENDed.DEEMbed.PORT(<i>Pt</i>).USER.FILEname app.SCPI.CALCulate(<i>Ch</i>).FSIMulator.SENDed.DEEMbed.PORT(<i>Pt</i>).USER.FILEname = "network.s2p"</pre>
<i>Notes</i>	If the full path to the file is not specified, the <i>\FixtureSim</i> subdirectory of the main directory will be searched for the file.

<i>Equivalent Softkeys</i>	Analysis > Fixture Simulator > De-Embedding > User File
----------------------------	-------------------------------------------------------------------------

Table 1. *Ch*: Channel Number

<i>Data Type</i>	Long
<i>Description</i>	Channel number.
<i>Range</i>	from 1 to 16
<i>Out of Range</i>	An error occurs. Error code: 201.
<i>Notes</i>	If the channel number is not specified, it is taken as equal to 1.

Table 2. *Pt*: Port Number

<i>Data Type</i>	Long
<i>Description</i>	Port number.
<i>Range</i>	from 1 to 4
<i>Out of Range</i>	An error occurs. Error code: 221.
<i>Notes</i>	If the port number is not specified, it is taken as equal to 1.

SCPI.CALCulate(*Ch*).FSIMulator.SENDed.DEEMbed.PORT(*Pt*).STATE

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Boolean
	Port <i>Pt</i> of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Pt</i> : port number 1–2 (see Table 2 on page 25)

<i>Description</i>	The ON/OFF state of the e-embedding s2p function of specified port.
<i>Allowable Values</i>	True: De-embedding function ON False: De-embedding function OFF
<i>Preset Value</i>	False
<i>Syntax</i>	<p>Dim <i>Status</i> As Boolean</p> <p><i>Status</i> = app.SCPI.CALCulate(<i>Ch</i>).FSIMulator.SENDed.DEEMbed.PORT(<i>Pt</i>).STATe</p> <p>app.SCPI.CALCulate(<i>Ch</i>).FSIMulator.SENDed.DEEMbed.PORT(<i>Pt</i>).STATe = True</p>
<i>Equivalent Softkeys</i>	Analysis > Fixture Simulator > De-Embedding > Port n

SCPI.CALCulate(*Ch*).FSIMulator.SENDed.DEEMbed.STATE

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Boolean
	Port <i>Pt</i> of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Pt</i> : port number 1–2 (see Table 2 on page 25)
<i>Description</i>	The ON/OFF state of the e-embedding s2p function.
<i>Allowable Values</i>	True: De-embedding function ON False: De-embedding function OFF
<i>Preset Value</i>	False
<i>Syntax</i>	Dim <i>Status</i> As Boolean <i>Status</i> = app.SCPI.CALCulate(<i>Ch</i>).FSIMulator.SENDed.DEEMbed.STATE <i>app.SCPI.CALCulate(<i>Ch</i>).FSIMulator.SENDed.DEEMbed.STATE</i> = True
<i>Equivalent Softkeys</i>	Analysis > Fixture Simulator > De-Embedding > De-Embedding

SCPI.CALCulate(*Ch*).FSIMulator.SENDed.PMCircuit.PORT(*Pt*).USER.FILEname

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	String
<i>Target</i>	Port <i>Pt</i> of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Pt</i> : port number 1–2 (see Table 2 on page 25)
<i>Description</i>	Embedding function file name (*.s2p). The file contains the circuit S-parameters in Touchstone format.
<i>Range</i>	up to 256 characters
<i>Preset Value</i>	""

<i>Syntax</i>	<pre>Dim File As String File = app.SCPI.CALCulate(<i>Ch</i>).FSIMulator.SENDed.PMCircuit.PORT(<i>Pt</i>).USER.FILEname app.SCPI.CALCulate(<i>Ch</i>).FSIMulator.SENDed.PMCircuit.PORT(<i>Pt</i>).USER.FILEname = "network.s2p"</pre>
<i>Notes</i>	If the full path to the file is not specified, the \FixtureSim subdirectory of the main directory will be searched for the file.
<i>Equivalent Softkeys</i>	Analysis > Fixture Simulator > Embedding > User File

SCPI.CALCulate(*Ch*).FSIMulator.SENDed.PMCircuit.PORT(*Pt*).STATe

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Boolean
<i>Target</i>	Port <i>Pt</i> of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Pt</i> : port number 1–2 (see Table 2 on page 25)
<i>Description</i>	The ON/OFF state of the embedding s2p function of specified port.
<i>Allowable Values</i>	True: Embedding function ON False: Embedding function OFF
<i>Preset Value</i>	False
<i>Syntax</i>	<pre>Dim Status As Boolean Status = app.SCPI.CALCulate(<i>Ch</i>).FSIMulator.SENDed.DEEMbed.PORT(<i>Pt</i>).STATe app.SCPI.CALCulate(<i>Ch</i>).FSIMulator.SENDed.DEEMbed.PORT(<i>Pt</i>).STATe = True</pre>
<i>Equivalent Softkeys</i>	Analysis > Fixture Simulator > Embedding > Port n

SCPI.CALCulate(*Ch*).FSIMulator.SENDed.PMCircuit.STATE

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Boolean
<i>Target</i>	Port <i>Pt</i> of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Pt</i> : port number 1–2 (see Table 2 on page 25)
<i>Description</i>	The ON/OFF state of the embedding s2p function.
<i>Allowable Values</i>	True: Embedding function ON False: Embedding function OFF
<i>Preset Value</i>	False
<i>Syntax</i>	Dim <i>Status</i> As Boolean <i>Status</i> = app.SCPI.CALCulate(<i>Ch</i>).FSIMulator.SENDed.DEEMbed.PORT(<i>Pt</i>).STATE <i>app.SCPI.CALCulate(<i>Ch</i>).FSIMulator.SENDed.DEEMbed.PORT(<i>Pt</i>).STATE</i> = True
<i>Equivalent Softkeys</i>	Analysis > Fixture Simulator > Embedding > Embedding

SCPI.CALCulate(*Ch*).FSIMulator.SENDed.ZCONversion.PORT(*Pt*).Z0.R

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double
<i>Target</i>	Port <i>Pt</i> of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Pt</i> : port number 1–2 (see Table 2 on page 25)
<i>Description</i>	The value of the impedance for port impedance conversion function.
<i>Range</i>	from 1e–6 to 1e6
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	50

<i>Unit</i>	Ω (Ohm)
<i>Syntax</i>	<p>Dim <i>Value</i> As Double <i>Value</i> = app.SCPI.CALCulate(<i>Ch</i>).FSIMulator.SENDed.ZCONversion.PORT(<i>Pt</i>).Z0.R <i>app.SCPI.CALCulate(Ch).FSIMulator.SENDed.ZCONversion.PORT(Pt).Z0.R</i> = 50</p>
<i>Equivalent Softkeys</i>	Analysis > Fixture Simulator > Port Z Conversion > Port n Z0

SCPI.CALCulate(*Ch*).FSIMulator.SENDed.ZCONversion.STATE

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Boolean
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The ON/OFF state of the port impedance conversion function.
<i>Allowable Values</i>	True: Port Z conversion function ON False: Port Z conversion function OFF
<i>Preset Value</i>	False
<i>Syntax</i>	<p>Dim <i>Status</i> As Boolean <i>Status</i> = app.SCPI.CALCulate(<i>Ch</i>).FSIMulator.SENDed.ZCONversion.STATE <i>app.SCPI.CALCulate(Ch).FSIMulator.SENDed.ZCONversion.STATE</i> = True</p>
<i>Equivalent Softkeys</i>	Analysis > Fixture Simulator > Port Z Conversion > Port Z Conversion

SCPI.CALCulate(*Ch*).FSIMulator.STATE

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Boolean
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The ON/OFF state of the fixture simulator function of specified channel.
<i>Allowable Values</i>	True: fixture simulator function ON False: fixture simulator function OFF
<i>Preset Value</i>	False
<i>Syntax</i>	<p>Dim <i>Status</i> As Boolean</p> <p><i>Status</i> = app.SCPI.CALCulate(<i>Ch</i>).FSIMulator.STATE</p> <p>app.SCPI.CALCulate(<i>Ch</i>).FSIMulator.STATE = True</p>
<i>Equivalent Softkeys</i>	Analysis > Fixture Simulator > Fixture Simulator

SCPI.CALCulate(*Ch*).PARameter.COUnT

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Long
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The number of traces in the channel.
<i>Range</i>	from 1 to 16
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	1

<i>Syntax</i>	Dim <i>TraceNum</i> As Long <i>TraceNum</i> = app.SCPI.CALCulate(<i>Ch</i>).PARameter.COUNt app.SCPI.CALCulate(<i>Ch</i>).PARameter.COUNt = 2
<i>Equivalent Softkeys</i>	Display > Num of Traces

SCPI.CALCulate(*Ch*).PARameter(*Tr*).DEFine

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	String
<i>Target</i>	Trace <i>Tr</i> of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Tr</i> : trace number 1–16 (see Table 3 on page 36)
<i>Description</i>	The measurement parameter of the trace.
<i>Allowable Values</i>	"S11", "S12", "S13", "S14", "S21", "S22", "S23", "S24", "S31", "S32", "S33", "S34", "S41", "S42", "S43", "S44" : S – parameter "T1", "T2", "T3", "T4" : Test receiver "R1", "R2", "R3", "R4" : Reference receiver
<i>Out of Range</i>	An error occurs. Error code: 208.
<i>Preset Value</i>	Depends on the trace number.
<i>Related Commands</i>	SCPI.CALCulate(<i>Ch</i>).PARameter(<i>Tr</i>).SPORt
<i>Syntax</i>	Dim <i>Meas</i> As String <i>Meas</i> = app.SCPI.CALCulate(<i>Ch</i>).PARameter(<i>Tr</i>).DEFine app.SCPI.CALCulate(<i>Ch</i>).PARameter(<i>Tr</i>).DEFine = "S11"
<i>Equivalent Softkeys</i>	Measurement > S-parameter > S11 S12 ... S44 Measurement > Test Receiver > T1(1) T1(2) ... T4(4) Measurement > Reference Receiver > R1(1) R1(2) ... R4(4)

Table 3. Tr: Trace Number

<i>Data Type</i>	Long
<i>Description</i>	Trace number
<i>Range</i>	from 1 to 16
<i>Out of Range</i>	An error occurs. Error code: 202.
<i>Notes</i>	If the trace number is not specified, it is taken as equal to 1.

SCPI.CALCulate(*Ch*).PARameter(*Tr*).SElect

<i>Object Type</i>	Method
<i>Target</i>	Trace <i>Tr</i> of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Tr</i> : trace number 1–16 (see Table 3 on page 36)
<i>Description</i>	Sets the active channel and trace.
<i>Syntax</i>	<i>app</i> .SCPI.CALCulate(<i>Ch</i>).PARameter(<i>Tr</i>).SElect
<i>Notes</i>	If the channel number is greater than the number of the channels displayed, an error occurs and the command is ignored. If the trace number is greater than the number of the traces displayed in the channel, an error occurs and the command is ignored.
<i>Equivalent Softkeys</i>	Display > Active Trace/Channel > Active Channel Display > Active Trace/Channel > Active Trace

SCPI.CALCulate(*Ch*).PARameter(*Tr*).SPORT

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Long

<i>Target</i>	Trace <i>Tr</i> of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Tr</i> : trace number 1–16 (see Table 3 on page 36)
<i>Description</i>	The number of the source port for absolute measurements.
<i>Range</i>	from 1 to 4
<i>Out of Range</i>	An error occurs. Error code: 208.
<i>Preset Value</i>	1
<i>Syntax</i>	Dim <i>StimPort</i> As Long <i>StimPort</i> = app.SCPI.CALCulate(<i>Ch</i>).PARameter(<i>Tr</i>).SPORt <i>app.SCPI.CALCulate(Ch).PARameter(Tr).SPORt</i> = 1
<i>Equivalent Softkeys</i>	Measurement > Test Receiver > T1(1) T1(2) ... T4(4) Measurement > Reference Receiver > R1(1) R1(2) ... R4(4)

SCPI.CALCulate(*Ch*).SElected.CONVersion.FUNCtion

<i>Object Type</i>	Property (read/write)																
<i>Data Type</i>	String																
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)																
<i>Description</i>	The S-parameter conversion function type.																
<i>Range</i>	<table> <tr> <td>"ZREFlection"</td> <td>: Reflection equivalent impedance</td> </tr> <tr> <td>"ZTRansmit"</td> <td>: Transmission equivalent impedance</td> </tr> <tr> <td>"YREFlection"</td> <td>: Reflection equivalent admittance</td> </tr> <tr> <td>"YTRansmit"</td> <td>: Transmission equivalent admittance</td> </tr> <tr> <td>"INVersion"</td> <td>: Inverse S-parameter</td> </tr> <tr> <td>"ZTSHunt"</td> <td>: Shunt equivalent impedance</td> </tr> <tr> <td>"YTSHunt"</td> <td>: Shunt equivalent admittance</td> </tr> <tr> <td>"CONJugation"</td> <td>: S-parameter conjugate</td> </tr> </table>	"ZREFlection"	: Reflection equivalent impedance	"ZTRansmit"	: Transmission equivalent impedance	"YREFlection"	: Reflection equivalent admittance	"YTRansmit"	: Transmission equivalent admittance	"INVersion"	: Inverse S-parameter	"ZTSHunt"	: Shunt equivalent impedance	"YTSHunt"	: Shunt equivalent admittance	"CONJugation"	: S-parameter conjugate
"ZREFlection"	: Reflection equivalent impedance																
"ZTRansmit"	: Transmission equivalent impedance																
"YREFlection"	: Reflection equivalent admittance																
"YTRansmit"	: Transmission equivalent admittance																
"INVersion"	: Inverse S-parameter																
"ZTSHunt"	: Shunt equivalent impedance																
"YTSHunt"	: Shunt equivalent admittance																
"CONJugation"	: S-parameter conjugate																

<i>Notes</i>	The short format of the parameter is indicated by upper case letters. There is no distinction between upper and lower case letters when the property is written. When the property is read out, the short format is indicated by upper case letters.
<i>Out of Range</i>	An error occurs. Error code: 217.
<i>Preset Value</i>	"ZREF"
<i>Syntax</i>	<pre>Dim Param As String Param = app.SCPI.CALCulate(<i>Ch</i>).SELected.CONVersion.FUNCtion app.SCPI.CALCulate(<i>Ch</i>).SELected.CONVersion.FUNCtion = "ZTR"</pre>
<i>Equivalent Softkeys</i>	Analysis > Conversion > Zr Zt Yr Yt 1/S Z Trans-Shunt Y Trans-Shunt Conjugation

SCPI.CALCulate(*Ch*).SELected.CONVersion.STATE

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Boolean
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The ON/OFF state of the S-parameter conversion function.
<i>Allowable Values</i>	True: S-parameter conversion function ON False: S-parameter conversion function OFF
<i>Preset Value</i>	False
<i>Syntax</i>	<pre>Dim Status As Boolean Status = app.SCPI.CALCulate(<i>Ch</i>).SELected.CONVersion.STATE app.SCPI.CALCulate(<i>Ch</i>).SELected.CONVersion.STATE = true</pre>
<i>Equivalent Softkeys</i>	Analysis > Conversion > Conversion

SCPI.CALCulate(*Ch*).SELected.CORRection.EDELay.TIME

<i>Object Type</i>	Property (read/write)
--------------------	-----------------------

<i>Data Type</i>	Double
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The value of the electrical delay.
<i>Range</i>	from –10 to 10
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	0
<i>Unit</i>	s (second)
<i>Syntax</i>	<p>Dim <i>Value</i> As Double</p> <pre>Value = app.SCPI.CALCulate(<i>Ch</i>).SELected.CORRection.EDElay.TIME app.SCPI.CALCulate(<i>Ch</i>).SELected.CORRection.EDElay.TIME = 1e-9</pre>
<i>Equivalent Softkeys</i>	Scale > Electrical Delay

SCPI.CALCulate(*Ch*).SELected.CORRection.OFFSet.PHASE

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The value of the phase offset.
<i>Range</i>	from –360 to 360
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	0
<i>Unit</i>	° (degree)

<i>Syntax</i>	Dim <i>Value</i> As Double <i>Value</i> = app.SCPI.CALCulate(<i>Ch</i>).SELected.CORRection.OFFSet.PHASe app.SCPI.CALCulate(<i>Ch</i>).SELected.CORRection.OFFSet.PHASe = 360
<i>Equivalent Softkeys</i>	Scale > Phase Offset

SCPI.CALCulate(*Ch*).SELected.DATA.FDATA

<i>Object Type</i>	Property (read only)
<i>Data Type</i>	Variant (array of double)
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	<p>The formatted data array. The array elements contain measurements in the current format, for example, in logarithmic magnitude format (Log Mag). Also, see section “Measurement Data Arrays” on page 20.</p> <p>The array size is 2N, where N is the number of measurement points.</p> <p>For the n-th point, where n from 1 to N:</p> <ul style="list-style-type: none"> <i>Data</i>(2n–2) real number in rectangular format, real part in polar and Smith chart formats; <i>Data</i>(2n–1) 0 in rectangular format, imaginary part in polar and Smith chart formats. <p>The index of the array starts from 0.</p>
<i>Syntax</i>	Dim <i>Data</i> As Variant <i>Data</i> = app.SCPI.CALCulate(<i>Ch</i>).SELected.DATA.FDATA
<i>Equivalent Softkeys</i>	None

SCPI.CALCulate(*Ch*).SELected.DATA.FMEMORY

<i>Object Type</i>	Property (read only)
<i>Data Type</i>	Variant (array of double)
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)

<i>Description</i>	<p>The formatted memory array. The array elements contain saved measurements in the current format, for example, in logarithmic magnitude format (Log Mag). Also, see section “Measurement Data Arrays” on page 20.</p> <p>The array size is 2N, where N is the number of measurement points.</p> <p>For the n-th point, where n from 1 to N:</p> <table border="0" data-bbox="541 428 1430 574"> <tr> <td style="padding-right: 20px;"><i>Data(2n-2)</i></td><td>real number in rectangular format, real part in polar and Smith chart formats;</td></tr> <tr> <td><i>Data(2n-1)</i></td><td>0 in rectangular format, imaginary part in polar and Smith chart formats.</td></tr> </table> <p>The index of the array starts from 0.</p>	<i>Data(2n-2)</i>	real number in rectangular format, real part in polar and Smith chart formats;	<i>Data(2n-1)</i>	0 in rectangular format, imaginary part in polar and Smith chart formats.
<i>Data(2n-2)</i>	real number in rectangular format, real part in polar and Smith chart formats;				
<i>Data(2n-1)</i>	0 in rectangular format, imaginary part in polar and Smith chart formats.				
<i>Syntax</i>	<p>Dim <i>Data</i> As Variant</p> <p><i>Data</i> = app.SCPI.CALCulate(<i>Ch</i>).SElected.DATA.FMEmory</p>				
<i>Equivalent Softkeys</i>	None				

SCPI.CALCulate(*Ch*).SElected.DATA.SDATA

<i>Object Type</i>	Property (read only)				
<i>Data Type</i>	Variant (array of double)				
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)				
<i>Description</i>	<p>The corrected data array. The corrected measurements are complex numbers. Also, see section “Measurement Data Arrays” on page 20.</p> <p>The array size is 2N, where N is the number of measurement points.</p> <p>For the n-th point, where n from 1 to N:</p> <table border="0" data-bbox="541 1551 1271 1652"> <tr> <td style="padding-right: 20px;"><i>Data(2n-2)</i></td> <td>the real part of corrected measurement;</td> </tr> <tr> <td><i>Data(2n-1)</i></td> <td>the imaginary part of corrected measurement.</td> </tr> </table> <p>The index of the array starts from 0.</p>	<i>Data(2n-2)</i>	the real part of corrected measurement;	<i>Data(2n-1)</i>	the imaginary part of corrected measurement.
<i>Data(2n-2)</i>	the real part of corrected measurement;				
<i>Data(2n-1)</i>	the imaginary part of corrected measurement.				
<i>Syntax</i>	<p>Dim <i>Data</i> As Variant</p> <p><i>Data</i> = app.SCPI.CALCulate(<i>Ch</i>).SElected.DATA.SDATA</p>				
<i>Equivalent Softkeys</i>	None				

SCPI.CALCulate(*Ch*).SELected.DATA.SMEMory

<i>Object Type</i>	Property (read only)
<i>Data Type</i>	Variant (array of double)
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	<p>The corrected memory array. The corrected measurements are complex numbers. Also, see section “Measurement Data Arrays” on page 20.</p> <p>The array size is 2N, where N is the number of measurement points.</p> <p>For the n-th point, where n from 1 to N:</p> <ul style="list-style-type: none"> <i>Data</i>(2n–2) the real part of corrected measurement memory; <i>Data</i>(2n–1) the imaginary part of corrected measurement memory. <p>The index of the array starts from 0.</p>
<i>Syntax</i>	<pre>Dim <i>Data</i> As Variant <i>Data</i> = app.SCPI.CALCulate(<i>Ch</i>).SELected.DATA.SMEMory</pre>
<i>Equivalent Softkeys</i>	None

SCPI.CALCulate(*Ch*).SElected.DATA.XAXis

<i>Object Type</i>	Property (read only)
<i>Data Type</i>	Variant (array of double)
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The active trace X axis data array. The array size is N, where N is the number of measurement points. For the n-th point, where n from 0 to N–1: <i>Data(n)</i> the X axis value; The index of the array starts from 0.
<i>Syntax</i>	Dim <i>Data</i> As Variant <i>Data</i> = app.SCPI.CALCulate(<i>Ch</i>).SElected.DATA.XAXis
<i>Equivalent Softkeys</i>	None

SCPI.CALCulate(*Ch*).SElected.FILTER.GATE.TIME.CENTer

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The gate center value of the gating function.
<i>Range</i>	Varies depending on the frequency span and the number of points.
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	0
<i>Unit</i>	s (second)

<i>Syntax</i>	Dim <i>Value</i> As Double <i>Value</i> = app.SCPI.CALCulate(<i>Ch</i>).SElected.FILTter.GATE.TIME.CENTer <i>app.SCPI.CALCulate(Ch).SESelected.FILTter.GATE.TIME.CENTer</i> = 1e-8
<i>Equivalent Softkeys</i>	Analysis > Gating > Center

SCPI.CALCulate(*Ch*).SESelected.FILTter.GATE.TIME.SHAPe

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	String
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The gate shape of the gating function.
<i>Range</i>	"MAXimum" : Maximum shape "WIDE" : Wide shape "NORMAl" : Normal shape "MINimum" : Minimum shape
<i>Notes</i>	The short format of the parameter is indicated by upper case letters. There is no distinction between upper and lower case letters when the property is written. When the property is read out, the short format is indicated by upper case letters.
<i>Out of Range</i>	An error occurs. Error code: 218.
<i>Preset Value</i>	"NORM"
<i>Syntax</i>	Dim <i>Param</i> As String <i>Param</i> = app.SCPI.CALCulate(<i>Ch</i>).SESelected.FILTter.GATE.TIME.SHAPe <i>app.SCPI.CALCulate(Ch).SESelected.FILTter.GATE.TIME.SHAPe</i> = "MAX"
<i>Equivalent Softkeys</i>	Analysis > Gating > Shape > Maximum Wide Normal Minimum

SCPI.CALCulate(*Ch*).SESelected.FILTter.GATE.TIME.SPAN

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The gate span value of the gating function.
<i>Range</i>	Varies depending on the frequency span and the number of points.
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	2e–8
<i>Unit</i>	s (second)
<i>Syntax</i>	<p>Dim <i>Value</i> As Double</p> <p><i>Value</i> = app.SCPI.CALCulate(<i>Ch</i>).SElected.FILTter.GATE.TIME.SPAN</p> <p>app.SCPI.CALCulate(<i>Ch</i>).SElected.FILTter.GATE.TIME.SPAN = 1e–8</p>
<i>Equivalent Softkeys</i>	Analysis > Gating > Span

SCPI.CALCulate(*Ch*).SElected.FILTter.GATE.TIME.START

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The gate start value of the gating function.
<i>Range</i>	Varies depending on the frequency span and the number of points.
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	–1e–8

<i>Unit</i>	s (second)
<i>Syntax</i>	<p>Dim <i>Value</i> As Double</p> <p><i>Value</i> = app.SCPI.CALCulate(<i>Ch</i>).SELected.FILTer.GATE.TIME.START</p> <p><i>app.SCPI.CALCulate(Ch).SELected.FILTer.GATE.TIME.START</i> = 1e-7</p>
<i>Equivalent Softkeys</i>	Analysis > Gating > Start

SCPI.CALCulate(*Ch*).SELected.FILTer.GATE.TIME.STATE

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Boolean
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The ON/OFF state of the gating function.
<i>Allowable Values</i>	True: Gating function ON False: Gating function OFF
<i>Preset Value</i>	False
<i>Syntax</i>	<p>Dim <i>Status</i> As Boolean</p> <p><i>Status</i> = app.SCPI.CALCulate(<i>Ch</i>).SELected.FILTer.GATE.TIME.STATE</p> <p><i>app.SCPI.CALCulate(Ch).SELected.FILTer.GATE.TIME.STATE</i> = <i>Status</i></p>
<i>Equivalent Softkeys</i>	Analysis > Gating > Gating

SCPI.CALCulate(*Ch*).SELected.FILTer.GATE.TIME.STOP

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double

<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The gate stop value of the gating function.
<i>Range</i>	Varies depending on the frequency span and the number of points.
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	1e–8
<i>Unit</i>	s (second)
<i>Syntax</i>	<p>Dim <i>Value</i> As Double</p> <p><i>Value</i> = app.SCPI.CALCulate(<i>Ch</i>).SElected.FILTter.GATE.TIME.STOP</p> <p>app.SCPI.CALCulate(<i>Ch</i>).SElected.FILTter.GATE.TIME.STOP = 1e–7</p>
<i>Equivalent Softkeys</i>	Analysis > Gating > Stop

SCPI.CALCulate(*Ch*).SElected.FILTter.GATE.TIME.TYPE

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	String
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The gate type of the gating function.
<i>Range</i>	<p>"BPASs" : Bandpass type</p> <p>"NOTCh" : Notch type</p>
<i>Notes</i>	The short format of the parameter is indicated by upper case letters. There is no distinction between upper and lower case letters when the property is written. When the property is read out, the short format is indicated by upper case letters.
<i>Out of Range</i>	An error occurs. Error code: 219.
<i>Preset Value</i>	"BPAS"

<i>Syntax</i>	Dim <i>Param</i> As String <i>Param</i> = app.SCPI.CALCulate(<i>Ch</i>).SELected.FILTer.GATE.TIME.TYPE app.SCPI.CALCulate(<i>Ch</i>).SELected.FILTer.GATE.TIME.TYPE = "bpas"
<i>Equivalent Softkeys</i>	Analysis > Gating > Type

SCPI.CALCulate(*Ch*).SELected.FORMat

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	String
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	Data format.
<i>Range</i>	"MLOGarithmic" : Logarithmic magnitude "PHASE" : Phase "GDELay" : Group delay time "SLINear" : Smith chart format (Lin) "SLOGarithmic" : Smith chart format (Log) "SCOMplex" : Smith chart format (Real/Imag) "SMITH" : Smith chart format ($R + jX$) "SADMittance" : Smith chart format ($G + jB$) "PLINear" : Polar format (Lin) "PLOGarithmic" : Polar format (Log) "POLar" : Polar format (Real/Imag) "MLINear" : Linear magnitude "SWR" : Voltage standing wave ratio "REAL" : Real part "IMAGinary" : Imaginary part "UPHase" : Expanded phase
<i>Notes</i>	The short format of the parameter is indicated by upper case letters. There is no distinction between upper and lower case letters when the property is written. When the property is read out, the short format is indicated by upper case letters.
<i>Out of Range</i>	An error occurs. Error code: 209.
<i>Preset Value</i>	"MLOG"

<i>Syntax</i>	<p>Dim <i>Param</i> As String <i>Param</i> = app.SCPI.CALCulate(<i>Ch</i>).SELected.FORMat <i>app.SCPI.CALCulate(Ch).SELected.FORMat</i> = "PHAS"</p>
<i>Equivalent Softkeys</i>	<p>Format > Log Mag Phase Group Delay Lin Mag SWR Real Imag Phase > 180 Format > Smith > Log/Phase Lin/Phase Real/Imag R+jX G+jB Format > Polar > Log/Phase Ling/Phase Real/Imag</p>

SCPI.CALCulate(*Ch*).SELected.FUNCtion.DATA

<i>Object Type</i>	Property (read only)
<i>Data Type</i>	Variant (array of double)
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	<p>The data array of analysis executed by the SCPI.CALCulate(<i>Ch</i>).SELected.FUNCtion.EXECute method.</p> <p>The array size is 2N, where N is the number of points defined by the SCPI.CALCulate(<i>Ch</i>).SELected.FUNCtion.POINts property.</p> <p>For the n-th point, where n from 1 to N:</p> <ul style="list-style-type: none"> <i>Data</i>(2n–2) the response value in the n-th measurement point; <i>Data</i>(2n–1) the stimulus value in the n-th measurement point. Always set to 0 for the analysis of mean value, standard deviation, and peak-to-peak value. <p>The index of the array starts from 0.</p>
<i>Syntax</i>	<p>Dim <i>Data</i> As Variant <i>Data</i> = app.SCPI.CALCulate(<i>Ch</i>).SELected.FUNCtion.DATA</p>
<i>Equivalent Softkeys</i>	None

SCPI.CALCulate(*Ch*).SELected.FUNCtion.DOMain.COUPle

<i>Object Type</i>	Property (read/write)
--------------------	-----------------------

<i>Data Type</i>	Boolean
<i>Target</i>	All traces of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The ON/OFF coupling state of the analysis range for the SCPI.CALCulate(<i>Ch</i>).SELected.FUNCtion.EXECute method.
<i>Allowable Values</i>	True: Coupling state ON False: Coupling state OFF
<i>Preset Value</i>	True
<i>Syntax</i>	Dim <i>Status</i> As Boolean <i>Status</i> = app.SCPI.CALCulate(<i>Ch</i>).SELected.FUNCtion.DOMain.COUPle app.SCPI.CALCulate(<i>Ch</i>).SELected.FUNCtion.DOMain.COUPle = <i>Status</i>
<i>Equivalent Softkeys</i>	None

SCPI.CALCulate(*Ch*).SELected.FUNCtion.DOMain.START

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double
<i>Target</i>	All traces of channel <i>Ch</i> (if the coupling is set to OFF by the SCPI.CALCulate(<i>Ch</i>).SELected.FUNCtion.DOMain.COUPle property), the active trace of channel <i>Ch</i> (if otherwise), <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The start value of the analysis range set by the SCPI.CALCulate(<i>Ch</i>).SELected.FUNCtion.EXECute method.
<i>Range</i>	From the stimulus current start value to the stimulus current stop value.
<i>Out of Range</i>	No limitation
<i>Preset Value</i>	0
<i>Unit</i>	Hz (Hertz) s (second) dBm (decibels above 1 milliwatt)

<i>Syntax</i>	Dim <i>Value</i> As Double <i>Value</i> = app.SCPI.CALCulate(<i>Ch</i>).SELected.FUNCtion.DOMain.START app.SCPI.CALCulate(<i>Ch</i>).SELected.FUNCtion.DOMain.START = 1e9
<i>Equivalent Softkeys</i>	None

SCPI.CALCulate(*Ch*).SELected.FUNCtion.DOMain.STATE

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Boolean
<i>Target</i>	All traces of channel <i>Ch</i> (if the coupling is set to OFF by the SCPI.CALCulate(<i>Ch</i>).SELected.FUNCtion.DOMain.COUPle property), the active trace of channel <i>Ch</i> (if otherwise), <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The ON/OFF state of the arbitrary range when executing the analysis by the SCPI.CALCulate(<i>Ch</i>).SELected.FUNCtion.EXECute method.
<i>Allowable Values</i>	True: Arbitrary range ON False: Arbitrary range OFF (entire sweep range)
<i>Preset Value</i>	False
<i>Syntax</i>	Dim <i>Status</i> As Boolean <i>Status</i> = app.SCPI.CALCulate(<i>Ch</i>).SELected.FUNCtion.DOMain.STATE app.SCPI.CALCulate(<i>Ch</i>).SELected.FUNCtion.DOMain.STATE = <i>true</i>
<i>Equivalent Softkeys</i>	None

SCPI.CALCulate(*Ch*).SELected.FUNCtion.DOMain.STOP

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double

<i>Target</i>	All traces of channel <i>Ch</i> (if the coupling is set to OFF by the SCPI.CALCulate(<i>Ch</i>).SELected.FUNCTion.DOMain.COUPle property), the active trace of channel <i>Ch</i> (if otherwise), <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The stop value of the analysis range set by the SCPI.CALCulate(<i>Ch</i>).SELected.FUNCTion.EXECute method.
<i>Range</i>	From the stimulus current start value to the stimulus current stop value.
<i>Out of Range</i>	No limitation
<i>Preset Value</i>	0
<i>Unit</i>	Hz (Hertz) s (second) dBm (decibels above 1 milliwatt)
<i>Syntax</i>	<p>Dim <i>Value</i> As Double</p> <p><i>Value</i> = app.SCPI.CALCulate(<i>Ch</i>).SELected.FUNCTion.DOMain.STOP</p> <p>app.SCPI.CALCulate(<i>Ch</i>).SELected.FUNCTion.DOMain.STOP = 2e9</p>
<i>Equivalent Softkeys</i>	None

SCPI.CALCulate(*Ch*).SELected.FUNCTion.EXECute

<i>Object Type</i>	Method
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	Executes the analysis specified with the SCPI.CALCulate(<i>Ch</i>).SELected.FUNCTion.TYPE property. The analysis result can then be read out with the SCPI.CALCulate(<i>Ch</i>).SELected.FUNCTion.DATA property.
<i>Syntax</i>	<i>app.SCPI.CALCulate(<i>Ch</i>).SELected.FUNCTion.EXECute</i>
<i>Equivalent Softkeys</i>	None

SCPI.CALCulate(*Ch*).SELected.FUNCTion.PEXCursion

<i>Object Type</i>	Property (read/write)
--------------------	-----------------------

<i>Data Type</i>	Double
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The lower limit for the peak excursion value when executing the peak search by the SCPI.CALCulate(<i>Ch</i>).SElected.FUNCtion.EXECute method.
<i>Range</i>	Varies depending on the trace format.
<i>Out of Range</i>	No limitation
<i>Preset Value</i>	3
<i>Unit</i>	dB (decibel) ° (degree) s (second)
<i>Syntax</i>	<p>Dim <i>Value</i> As Double</p> <p><i>Value</i> = app.SCPI.CALCulate(<i>Ch</i>).SElected.FUNCtion.PEXCursion</p> <p>app.SCPI.CALCulate(<i>Ch</i>).SElected.FUNCtion.PEXCursion = 1.5</p>
<i>Equivalent Softkeys</i>	None

SCPI.CALCulate(*Ch*).SElected.FUNCtion.POINTs

<i>Object Type</i>	Property (read only)
<i>Data Type</i>	Long
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	<p>The number of points (data pairs) of the analysis result by the SCPI.CALCulate(<i>Ch</i>).SElected.FUNCtion.EXECute method.</p> <p>Always equal to 1, when the search is executed for the maximum, minimum, mean, standard deviation, peak, and peak-to-peak values. The actual number of points is read out, when the search is executed for all peaks or all targets.</p>
<i>Syntax</i>	<p>Dim <i>Value</i> As Long</p> <p><i>Value</i> = app.SCPI.CALCulate(<i>Ch</i>).SElected.FUNCtion.POINTs</p>
<i>Equivalent Softkeys</i>	None

SCPI.CALCulate(*Ch*).SELected.FUNCtion.PPOLarity

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	String
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The polarity selection when performing the peak search by the SCPI.CALCulate(<i>Ch</i>).SELected.FUNCtion.EXECute method.
<i>Range</i>	"POSitive" : Positive peaks "NEGative" : Negative peaks "BOTH" : Both positive peaks and negative peaks
<i>Notes</i>	The short format of the parameter is indicated by upper case letters. There is no distinction between upper and lower case letters when the property is written. When the property is read out, the short format is indicated by upper case letters.
<i>Out of Range</i>	The value is ignored.
<i>Preset Value</i>	"POS"
<i>Syntax</i>	Dim <i>Param</i> As String <i>Param</i> = app.SCPI.CALCulate(<i>Ch</i>).SELected.FUNCtion.PPOLarity app.SCPI.CALCulate(<i>Ch</i>).SELected.FUNCtion.PPOLarity = "NEG"
<i>Equivalent Softkeys</i>	None

SCPI.CALCulate(*Ch*).SELected.FUNCtion.TARGet

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The target level when performing the search for the trace and the target level crosspoints by the SCPI.CALCulate(<i>Ch</i>).SELected.FUNCtion.EXECute method.

<i>Range</i>	Varies depending on the trace format.
<i>Out of Range</i>	No limitation
<i>Preset Value</i>	0
<i>Unit</i>	dB (decibel) ° (degree) s (second)
<i>Syntax</i>	<p>Dim <i>Value</i> As Double</p> <p><i>Value</i> = app.SCPI.CALCulate(<i>Ch</i>).SELected.FUNCtion.TARGet</p> <p>app.SCPI.CALCulate(<i>Ch</i>).SELected.FUNCtion.TARGet = -10</p>
<i>Equivalent Softkeys</i>	None

SCPI.CALCulate(*Ch*).SELected.FUNCtion.TTRansition

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	String
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The transition type selection when performing the search for the trace and the target level crosspoints by the SCPI.CALCulate(<i>Ch</i>).SELected.FUNCtion.EXECute method.
<i>Range</i>	<p>"POSitive" : Positive peaks</p> <p>"NEGative" : Negative peaks</p> <p>"BOTH" : Both positive peaks and negative peaks</p>
<i>Notes</i>	The short format of the parameter is indicated by upper case letters. There is no distinction between upper and lower case letters when the property is written. When the property is read out, the short format is indicated by upper case letters.
<i>Out of Range</i>	The value is ignored.
<i>Preset Value</i>	"POS"

<i>Syntax</i>	<p>Dim <i>Param</i> As String <i>Param</i> = app.SCPI.CALCulate(<i>Ch</i>).SELected.FUNCtion.TTRansition <i>app.SCPI.CALCulate(Ch).SELected.FUNCtion.TTRansition</i> = "both"</p>
<i>Equivalent Softkeys</i>	None

SCPI.CALCulate(*Ch*).SELected.FUNCtion.TYPE

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	String
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The selection of the type of analysis executed by the SCPI.CALCulate(<i>Ch</i>).SELected.FUNCtion.EXECute method.
<i>Range</i>	<p>"PTPeak" : Peak-to-peak (difference between the maximum value and the minimum value) "STDEV" : Standard deviation "MEAN" : Mean value "MAXimum" : Maximum value "MINimum" : Minimum value "PEAK" : Search for the peak "APEak" : Search for all the peaks "ATARget" : Search for all targets</p>
<i>Notes</i>	The short format of the parameter is indicated by upper case letters. There is no distinction between upper and lower case letters when the property is written. When the property is read out, the short format is indicated by upper case letters.
<i>Out of Range</i>	The value is ignored.
<i>Preset Value</i>	"PTP"

<i>Syntax</i>	Dim <i>Param</i> As String <i>Param</i> = app.SCPI.CALCulate(<i>Ch</i>).SELected.FUNCtion.TYPE <i>app.SCPI.CALCulate(Ch).SELected.FUNCtion.TYPE</i> = "STDEV"
<i>Equivalent Softkeys</i>	None

SCPI.CALCulate(*Ch*).SELected.LIMit.DATA

<i>Object Type</i>	Property (read/write)												
<i>Data Type</i>	Variant (array of double)												
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)												
<i>Description</i>	<p>The data array, which is the limit line in the limit test function. The array size is $1 + 5N$, where N is the number of measuring points.</p> <p>For the n-th point, where n from 1 to N:</p> <table> <tr> <td><i>Data(0)</i></td> <td>The number of limit line segments N is from 0 to 100. Setting 0 clears the limit line;</td> </tr> <tr> <td><i>Data(5n-4)</i></td> <td>type of the n-th limit line segment; 0: OFF 1: Upper limit 2: Lower limit</td> </tr> <tr> <td><i>Data(5n-3)</i></td> <td>the stimulus value in the start point of the n-th segment;</td> </tr> <tr> <td><i>Data(5n-2)</i></td> <td>the stimulus value in the end point of the n-th segment;</td> </tr> <tr> <td><i>Data(5n-1)</i></td> <td>the response value in the start point of the n-th segment;</td> </tr> <tr> <td><i>Data(5n-0)</i></td> <td>the response value in the end point of the n-th segment.</td> </tr> </table>	<i>Data(0)</i>	The number of limit line segments N is from 0 to 100. Setting 0 clears the limit line;	<i>Data(5n-4)</i>	type of the n -th limit line segment; 0: OFF 1: Upper limit 2: Lower limit	<i>Data(5n-3)</i>	the stimulus value in the start point of the n -th segment;	<i>Data(5n-2)</i>	the stimulus value in the end point of the n -th segment;	<i>Data(5n-1)</i>	the response value in the start point of the n -th segment;	<i>Data(5n-0)</i>	the response value in the end point of the n -th segment.
<i>Data(0)</i>	The number of limit line segments N is from 0 to 100. Setting 0 clears the limit line;												
<i>Data(5n-4)</i>	type of the n -th limit line segment; 0: OFF 1: Upper limit 2: Lower limit												
<i>Data(5n-3)</i>	the stimulus value in the start point of the n -th segment;												
<i>Data(5n-2)</i>	the stimulus value in the end point of the n -th segment;												
<i>Data(5n-1)</i>	the response value in the start point of the n -th segment;												
<i>Data(5n-0)</i>	the response value in the end point of the n -th segment.												
<i>Notes</i>	If the array size is not $1 + 5N$, where N is <i>Data(0)</i> , an error occurs (error code 214). If <i>Data(5n - 4)</i> is less than 0 or more than 2, an error occurs (error code 214). When <i>Data(5n-3)</i> , <i>Data(5n-2)</i> , <i>Data(5n-1)</i> and <i>Data(5n-0)</i> elements are out of allowable range, the value is set to the limit, which is closer to the specified value.												
<i>Syntax</i>	Dim <i>Data</i> As Variant <i>Data</i> = app.SCPI.CALCulate(<i>Ch</i>).SELected.LIMit.DATA <i>app.SCPI.CALCulate(Ch).SELected.LIMit.DATA</i> = Array(1,2,800,900,-10,-10)												

<i>Equivalent Softkeys</i>	Analysis > Limit Test > Edit Limit Line
----------------------------	------------------------------------------------------

SCPI.CALCulate(*Ch*).SElected.LIMit.DISPlay.STATE

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Boolean
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The ON/OFF state of the limit line display of the limit test function.
<i>Allowable Values</i>	True: Limit line display ON False: Limit line display OFF
<i>Preset Value</i>	False
<i>Syntax</i>	Dim Status As Boolean <i>Status</i> = app.SCPI.CALCulate(<i>Ch</i>).SElected.LIMit.DISPlay.STATE app.SCPI.CALCulate(<i>Ch</i>).SElected.LIMit.DISPlay.STATE = true
<i>Equivalent Softkeys</i>	Analysis > Limit Test > Limit Line

SCPI.CALCulate(*Ch*).SElected.LIMit.FAIL

<i>Object Type</i>	Property (read only)
<i>Data Type</i>	Boolean
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The limit test result.
<i>Allowable Values</i>	True: Fail False: Pass

<i>Syntax</i>	Dim <i>Status</i> As Boolean <i>Status</i> = app.SCPI.CALCulate(<i>Ch</i>).SELected.LIMit.FAIL
<i>Equivalent Softkeys</i>	None

SCPI.CALCulate(*Ch*).SELected.LIMit.OFFSet.AMPLitude

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The value of the limit line offset along Y-axis.
<i>Range</i>	Varies depending on the trace format.
<i>Out of Range</i>	No limitation
<i>Preset Value</i>	0
<i>Unit</i>	dB (decibel) ° (degree) s (second)
<i>Syntax</i>	Dim <i>Value</i> As Double <i>Value</i> = app.SCPI.CALCulate(<i>Ch</i>).SELected.LIMit.OFFSet.AMPLitude app.SCPI.CALCulate(<i>Ch</i>).SELected.LIMit.OFFSet.AMPLitude = -10
<i>Equivalent Softkeys</i>	Analysis > Limit Test > Limit Line Offsets > Response Offset

SCPI.CALCulate(*Ch*).SELected.LIMit.OFFSet.MARKer

<i>Object Type</i>	Method
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)

<i>Description</i>	Sets the value of the limit line offset along Y-axis to the active marker value.
<i>Syntax</i>	<code>app.SCPI.CALCulate(<i>Ch</i>).SELected.LIMit.OFFSet.MARKer</code>
<i>Equivalent Softkeys</i>	Analysis > Limit Test > Limit Line Offsets > Marker > Response Ofs

SCPI.CALCulate(*Ch*).SELected.LIMit.OFFSet.STIMulus

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The value of the limit line offset along X-axis.
<i>Range</i>	From the stimulus current start value to the stimulus current stop value.
<i>Out of Range</i>	No limitation
<i>Preset Value</i>	0
<i>Unit</i>	Hz (Hertz) s (second) dBm (decibels above 1 milliwatt)
<i>Syntax</i>	<p>Dim <i>Value</i> As Double</p> <p><i>Value</i> = app.SCPI.CALCulate(<i>Ch</i>).SELected.LIMit.OFFSet.STIMulus</p> <p>app.SCPI.CALCulate(<i>Ch</i>).SELected.LIMit.OFFSet.STIMulus = 1e6</p>
<i>Equivalent Softkeys</i>	Analysis > Limit Test > Limit Lines Offsets > Stimulus Offset

SCPI.CALCulate(*Ch*).SELected.LIMit.REPort.ALL

<i>Object Type</i>	Property (read only)
<i>Data Type</i>	Variant (array of double)
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)

<i>Description</i>	<p>The data array, which is the limit test results. The array size is $4N$, where N is the number of measurement points.</p> <p>For the n-th point, where n from 1 to N:</p> <ul style="list-style-type: none"> $Data(4n-3)$ the stimulus value in the n-th point $Data(4n-2)$ the limit test result in the n-th point -1: No limit 0: Fail 1: Pass $Data(4n-1)$ the upper limit value in the n-th point (0 – if there is no limit) $Data(4n-0)$ the lower limit value in the n-th point (0 – if there is no limit)
<i>Syntax</i>	<pre>Dim Data As Variant Data = app.SCPI.CALCulate(<i>Ch</i>).SELected.LIMit.REPort.ALL</pre>
<i>Equivalent Softkeys</i>	None

SCPI.CALCulate(*Ch*).SELected.LIMit.REPort.DATA

<i>Object Type</i>	Property (read only)
<i>Data Type</i>	Variant (array of double)
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The data array, which is the stimulus values at all the measurement points that failed the limit test. The array size is defined by the SCPI.CALCulate(<i>Ch</i>).SELected.LIMit.REPort.POINts property.
<i>Syntax</i>	<pre>Dim Data As Variant Data = app.SCPI.CALCulate(<i>Ch</i>).SELected.LIMit.REPort.DATA</pre>
<i>Equivalent Softkeys</i>	None

SCPI.CALCulate(*Ch*).SELected.LIMit.REPort.POINts

<i>Object Type</i>	Property (read only)
--------------------	----------------------

<i>Data Type</i>	Long
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The number of the measurement points that failed the limit test. The array of stimulus values of the points can be read out by the SCPI.CALCulate(<i>Ch</i>).SElected.LIMit.REPort.DATA property.
<i>Syntax</i>	Dim <i>Cnt</i> As Long <i>Cnt</i> = app.SCPI.CALCulate(<i>Ch</i>).SElected.LIMit.REPort.POINts
<i>Equivalent Softkeys</i>	None

SCPI.CALCulate(*Ch*).SElected.LIMit.STATE

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Boolean
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The ON/OFF state of the limit test function.
<i>Allowable Values</i>	True: Limit test function ON False: Limit test function OFF
<i>Preset Value</i>	False
<i>Syntax</i>	Dim <i>Status</i> As Boolean <i>Status</i> = app.SCPI.CALCulate(<i>Ch</i>).SElected.LIMit.STATE app.SCPI.CALCulate(<i>Ch</i>).SElected.LIMit.STATE = true
<i>Equivalent Softkeys</i>	Analysis > Limit Test > Limit Test

SCPI.CALCulate(*Ch*).SElected.MARKer(*Mk*).ACTivate

<i>Object Type</i>	Method
<i>Target</i>	Marker <i>Mk</i> of the active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Mk</i> : marker number 1–15, or reference marker number 16 (see Table 4 on page 78)
<i>Description</i>	Sets the active marker. If a marker is OFF this function will turn it ON. Turning ON a marker with the number from 1 to 15 will turn ON all the markers of smaller numbers. Turning ON the reference marker with number 16 does not turn ON the markers with the numbers from 1 to 15, but switches these markers to the relative measurement mode.
<i>Syntax</i>	<i>app</i> .SCPI.CALCulate(<i>Ch</i>).SELected.MARKer(<i>Mk</i>).ACTivate
<i>Equivalent Softkeys</i>	Markers > Select > Marker n Markers > Reference Marker

Table 4. *Mk*: Marker Number

<i>Data Type</i>	Long
<i>Description</i>	Marker number. Numbers from 1 to 15 are for regular markers, number 16 is for the reference marker.
<i>Range</i>	from 1 to 16
<i>Out of Range</i>	An error occurs. Error code: 203.
<i>Notes</i>	If the marker number is not specified, it is taken as equal to 1.

SCPI.CALCulate(*Ch*).SELected.MARKer(*Mk*).BWIDth.DATA

<i>Object Type</i>	Property (read only)
<i>Data Type</i>	Variant (array of double)

<i>Target</i>	Marker <i>Mk</i> of the active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Mk</i> : marker number 1–15, or reference marker number 16 (see Table 4 on page 78)
<i>Description</i>	The bandwidth search result. The bandwidth search can be performed relatively to the marker <i>Mk</i> , or relatively to the absolute maximum value of the trace (in this case the marker number is ignored), what is set by the SCPI.CALCulate(<i>Ch</i>).SElected.MARKer(<i>Mk</i>).BWIDth.REference property. The array contains 4 elements: <i>Data(0)</i> Bandwidth; <i>Data(1)</i> Center frequency; <i>Data(2)</i> Q value; <i>Data(3)</i> Loss.
<i>Notes</i>	If the bandwidth search is impossible, all the read out values are 0. If the search is performed relatively to a maker, which is OFF, an error occurs (error code 204).
<i>Syntax</i>	Dim <i>Data</i> As Variant <i>Data</i> = app.SCPI.CALCulate(<i>Ch</i>).SElected.MARKer(<i>Mk</i>).BWIDth.DATA
<i>Equivalent Softkeys</i>	None

SCPI.CALCulate(*Ch*).SElected.MARKer.BWIDth.REference

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	String
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The selection of the reference point for the bandwidth search function: reference marker or absolute maximum value of the trace.
<i>Range</i>	"MARKer" : Bandwidth search relative to the reference marker "MAXimum" : Bandwidth search relative to the absolute maximum of the trace

<i>Notes</i>	The short format of the parameter is indicated by upper case letters. There is no distinction between upper and lower case letters when the property is written. When the property is read out, the short format is indicated by upper case letters.
<i>Out of Range</i>	The value is ignored.
<i>Preset Value</i>	"MAX"
<i>Syntax</i>	<pre>Dim Param As String Param = app.SCPI.CALCulate(<i>Ch</i>).SELected.MARKer.BWIDth.REFERENCE app.SCPI.CALCulate(<i>Ch</i>).SELected.MARKer.BWIDth.REFERENCE = "marker"</pre>
<i>Equivalent Softkeys</i>	Markers > Marker Math > Bandwidth Search > Search Ref To

SCPI.CALCulate(*Ch*).SELected.MARKer.BWIDth.STATE

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Boolean
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The ON/OFF state of the bandwidth search function.
<i>Allowable Values</i>	True: Bandwidth search function ON False: Bandwidth search function OFF
<i>Preset Value</i>	False
<i>Syntax</i>	<pre>Dim Status As Boolean Status = app.SCPI.CALCulate(<i>Ch</i>).SELected.MARKer.BWIDth.STATE app.SCPI.CALCulate(<i>Ch</i>).SELected.MARKer.BWIDth.STATE = true</pre>
<i>Equivalent Softkeys</i>	Markers > Marker Math > Bandwidth Search > Bandwidth Search

SCPI.CALCulate(*Ch*).SELected.MARKer.BWIDth.THReshold

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The bandwidth definition value.
<i>Range</i>	Varies depending on the trace format.
<i>Out of Range</i>	No limitation
<i>Preset Value</i>	-3
<i>Unit</i>	dB (decibel) ° (degree) s (second)
<i>Syntax</i>	Dim <i>Value</i> As Double <i>Value</i> = app.SCPI.CALCulate(<i>Ch</i>).SELected.MARKer(<i>Mk</i>).BWIDth.THReshold app.SCPI.CALCulate(<i>Ch</i>).SELected.MARKer(<i>Mk</i>).BWIDth.THReshold = -6.0
<i>Equivalent Softkeys</i>	Markers > Marker Math > Bandwidth Search > Bandwidth Value

SCPI.CALCulate(*Ch*).SELected.MARKer.BWIDth.TYPE

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	String
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The type of the bandwidth search function.
<i>Range</i>	"BPASs" : Bandpass "NOTCh" : Notch
<i>Notes</i>	The short format of the parameter is indicated by upper case letters. There is no distinction between upper and lower case letters when the property is written. When the property is read out, the short format is indicated by upper case letters.

<i>Out of Range</i>	The value is ignored.
<i>Preset Value</i>	"BPAS"
<i>Syntax</i>	<p>Dim <i>Param</i> As String</p> <p><i>Param</i> = app.SCPI.CALCulate(<i>Ch</i>).SELected.MARKer.BWIDth.TYPE</p> <p>app.SCPI.CALCulate(<i>Ch</i>).SELected.MARKer.BWIDth.TYPE = "notc"</p>
<i>Equivalent Softkeys</i>	Markers > Marker Math > Bandwidth Search > Type

SCPI.CALCulate(*Ch*).SELected.MARKer.COUPle

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Boolean
<i>Target</i>	All traces of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The ON/OFF state of the marker coupling function.
<i>Allowable Values</i>	True: Marker coupling ON False: Marker coupling OFF
<i>Preset Value</i>	True
<i>Syntax</i>	<p>Dim <i>Status</i> As Boolean</p> <p><i>Status</i> = app.SCPI.CALCulate(<i>Ch</i>).SELected.MARKer.COUPle</p> <p>app.SCPI.CALCulate(<i>Ch</i>).SELected.MARKer.COUPle = false</p>
<i>Equivalent Softkeys</i>	Marker > Properties > Marker Couple

SCPI.CALCulate(*Ch*).SELected.MARKer.COUNt

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Long
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The number of the turned ON markers.
<i>Range</i>	from 0 to 16
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	0
<i>Syntax</i>	<p>Dim <i>MarkerCnt</i> As Long</p> <p><i>MarkerCnt</i> = app.SCPI.CALCulate(<i>Ch</i>).SELected.MARKer.COUNt</p> <p>app.SCPI.CALCulate(<i>Ch</i>).SELected.MARKer.COUNt = 5</p>
<i>Equivalent Softkeys</i>	None

SCPI.CALCulate(*Ch*).SESelected.MARKer(*Mk*).Y

<i>Object Type</i>	Property (read only)
<i>Data Type</i>	Variant (array of double)
<i>Target</i>	Marker <i>Mk</i> of the active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Mk</i> : marker number 1–15, or reference marker number 16 (see Table 4 on page 78)
<i>Description</i>	The response and stimulus value of the marker. If the reference marker is turned ON, the values of the markers from 1 to 15 are read out as relative values to the reference marker. The array includes 3 elements: <i>Data(0)</i> real number in rectangular format, real part in polar and Smith chart formats; <i>Data(1)</i> 0 in rectangular format, imaginary part in polar and Smith chart formats. <i>Data(2)</i> Stimulus value at the marker position.
<i>Syntax</i>	Dim <i>Data</i> As Variant <i>Data</i> = app.SCPI.CALCulate(<i>Ch</i>).SESelected.MARKer(<i>Mk</i>).DATA
<i>Equivalent Softkeys</i>	None

SCPI.CALCulate(*Ch*).SESelected.MARKer.FUNCTion.DOMain.COUPLE

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Boolean
<i>Target</i>	All traces of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The ON/OFF state of the marker search range coupling for different traces.
<i>Allowable Values</i>	True: Marker search range coupling ON False: Marker search range coupling OFF

<i>Preset Value</i>	True
<i>Syntax</i>	<p>Dim <i>Status</i> As Boolean <i>Status</i> = app.SCPI.CALCulate(<i>Ch</i>).SELected.MARKer.FUNCtion.DOMain.COUPle app.SCPI.CALCulate(<i>Ch</i>).SELected.MARKer.FUNCtion.DOMain.COUPle = false</p>
<i>Equivalent Softkeys</i>	Markers > Marker Search > Couple

SCPI.CALCulate(*Ch*).SELected.MARKer.FUNCtion.DOMain.START

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double
<i>Target</i>	All traces of channel <i>Ch</i> (if the marker search range coupling is set to OFF by the SCPI.CALCulate(<i>Ch</i>).SELected.FUNCtion.DOMain.COUPLE property), the active trace of channel <i>Ch</i> (if otherwise), <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The start value of the marker search range.
<i>Range</i>	From the stimulus current start value to the stimulus current stop value.
<i>Out of Range</i>	No limitation
<i>Preset Value</i>	3e5
<i>Unit</i>	Hz (Hertz) s (second) dBm (decibels above 1 milliwatt)
<i>Syntax</i>	<p>Dim <i>Value</i> As Double</p> <p><i>Value</i> = app.SCPI.CALCulate(<i>Ch</i>).SELected.MARKer.FUNCtion.DOMain.START</p> <p>app.SCPI.CALCulate(<i>Ch</i>).SELected.MARKer.FUNCtion.DOMain.START = 1e6</p>
<i>Equivalent Softkeys</i>	Markers > Marker Search > Search Start

SCPI.CALCulate(*Ch*).SELected.MARKer.FUNCtion.DOMain.STATE

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Boolean
<i>Target</i>	All traces of channel <i>Ch</i> (if the marker search range coupling is set to OFF by the SCPI.CALCulate(<i>Ch</i>).SELected.MARKer.FUNCtion.DOMain.COUPLE property), the active trace of channel <i>Ch</i> (if otherwise), <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The ON/OFF state of the arbitrary range when executing the marker search.

<i>Allowable Values</i>	True: Marker search range ON False: Marker search range OFF (entire sweep range)
<i>Preset Value</i>	False
<i>Syntax</i>	Dim <i>Status</i> As Boolean <i>Status</i> = app.SCPI.CALCulate(<i>Ch</i>).SELEcted.MARKer.FUNCtion.DOMain.STATE app.SCPI.CALCulate(<i>Ch</i>).SELEcted.MARKer.FUNCtion.DOMain.STATE = true
<i>Equivalent Softkeys</i>	Markers > Marker Search > Search Range

SCPI.CALCulate(*Ch*).SELEcted.MARKer.FUNCtion.DOMain.STOP

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double
<i>Target</i>	All traces of channel <i>Ch</i> (if the marker search range coupling is set to OFF by the SCPI.CALCulate(<i>Ch</i>).SELEcted.MARKer.FUNCtion.DOMain.COUPLE property), the active trace of channel <i>Ch</i> (if otherwise), <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The stop value of the marker search range.
<i>Range</i>	From the stimulus current start value to the stimulus current stop value.
<i>Out of Range</i>	No limitation
<i>Unit</i>	Hz (Hertz) s (second) dBm (decibels above 1 milliwatt)
<i>Syntax</i>	Dim <i>Value</i> As Double <i>Value</i> = app.SCPI.CALCulate(<i>Ch</i>).SELEcted.MARKer.FUNCtion.DOMain.STOP app.SCPI.CALCulate(<i>Ch</i>).SELEcted.MARKer.FUNCtion.DOMain.STOP = 1e6
<i>Equivalent Softkeys</i>	Markers > Marker Search > Search Stop

SCPI.CALCulate(*Ch*).SELEcted.MARKer(*Mk*).FUNCtion.EXECute

<i>Object Type</i>	Method
<i>Target</i>	Marker <i>Mk</i> of the active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Mk</i> : marker number 1–15, or reference marker number 16 (see Table 4 on page 78)
<i>Description</i>	Executes the marker search according to the specified criterion. The type of the marker search is set by the SCPI.CALCulate(<i>Ch</i>).SElected.MARKer(<i>Mk</i>).FUNCTION.TYPE property.
<i>Syntax</i>	<i>app</i> .SCPI.CALCulate(<i>Ch</i>).SElected.MARKer(<i>Mk</i>).FUNCTION.EXECute
<i>Equivalent Softkeys</i>	Markers > Marker Search > Maximum Minimum Markers > Marker Search > Peak > Search Peak Search Max Peak Search Peak Left Search Peak Right Markers > Marker Search > Target > Search Target Search Target Left Search Target Right

SCPI.CALCulate(*Ch*).SElected.MARKer(*Mk*).FUNCTION.PEXcursion

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double
<i>Target</i>	Marker <i>Mk</i> of the active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Mk</i> : marker number 1–15, or reference marker number 16 (see Table 4 on page 78)
<i>Description</i>	The peak excursion value, when the marker search for peak is performed by the SCPI.CALCulate(<i>Ch</i>).SElected.MARKer(<i>Mk</i>).FUNCTION.EXECute method.
<i>Range</i>	Varies depending on the trace format.
<i>Out of Range</i>	No limitation
<i>Preset Value</i>	1
<i>Unit</i>	dB (decibel) ° (degree) s (second)

<i>Syntax</i>	Dim <i>Value</i> As Double <i>Value</i> = app.SCPI.CALCulate(<i>Ch</i>).SELected.MARKer(<i>Mk</i>).FUNCtion.PEXCursion <i>app.SCPI.CALCulate(Ch).SELected.MARKer(Mk).FUNCtion.PEXCursion</i> = 3.0
<i>Equivalent Softkeys</i>	Markers > Marker Search > Peak > Peak Excursion

SCPI.CALCulate(*Ch*).SELected.MARKer(*Mk*).FUNCtion.PPOLarity

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	String
<i>Target</i>	Marker <i>Mk</i> of the active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Mk</i> : marker number 1–15, or reference marker number 16 (see Table 4 on page 78)
<i>Description</i>	The peak polarity selection, when the marker search for peak is performed by the SCPI.CALCulate(<i>Ch</i>).SELected.MARKer(<i>Mk</i>).FUNCtion.EXECute method.
<i>Range</i>	"POSitive" : Positive polarity "NEGative" : Negative polarity "BOTH" : Both positive polarity and negative polarity
<i>Notes</i>	The short format of the parameter is indicated by upper case letters. There is no distinction between upper and lower case letters when the property is written. When the property is read out, the short format is indicated by upper case letters.
<i>Out of Range</i>	The value is ignored.
<i>Preset Value</i>	"POS"
<i>Syntax</i>	Dim <i>Param</i> As String <i>Param</i> = app.SCPI.CALCulate(<i>Ch</i>).SELected.MARKer(<i>Mk</i>).FUNCtion.PPOLarity <i>app.SCPI.CALCulate(Ch).SELected.MARKer(Mk).FUNCtion.PPOLarity</i> = "neg"
<i>Equivalent Softkeys</i>	Markers > Marker Search > Peak > Peak Polarity > Positive Negative Both

SCPI.CALCulate(*Ch*).SELected.MARKer(*Mk*).FUNCtion.TARGet

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double
<i>Target</i>	Marker <i>Mk</i> of the active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Mk</i> : marker number 1–15, or reference marker number 16 (see Table 4 on page 78)
<i>Description</i>	The target value, when the marker search for target is performed by the SCPI.CALCulate(<i>Ch</i>).SElected.MARKer(<i>Mk</i>).FUNCTION.EXECute method.
<i>Range</i>	Varies depending on the trace format.
<i>Out of Range</i>	No limitation
<i>Preset Value</i>	0
<i>Unit</i>	dB (decibel) ° (degree) s (second)
<i>Syntax</i>	Dim <i>Value</i> As Double <i>Value</i> = app.SCPI.CALCulate(<i>Ch</i>).SElected.MARKer(<i>Mk</i>).FUNCTION.TARGet <i>app.SCPI.CALCulate(<i>Ch</i>).SElected.MARKer(<i>Mk</i>).FUNCTION.TARGet</i> = -10
<i>Equivalent Softkeys</i>	Markers > Marker Search > Target > Target Value

SCPI.CALCulate(*Ch*).SElected.MARKer(*Mk*).FUNCTION.TRACKing

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Boolean
<i>Target</i>	Marker <i>Mk</i> of the active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Mk</i> : marker number 1–15, or reference marker number 16 (see Table 4 on page 78)
<i>Description</i>	The ON/OFF state of the marker search tracking function.
<i>Allowable Values</i>	True: Marker search tracking ON False: Marker search tracking OFF
<i>Preset Value</i>	False

<i>Syntax</i>	Dim <i>Status</i> As Boolean <i>Status</i> = app.SCPI.CALCulate(<i>Ch</i>).SELected.MARKer(<i>Mk</i>).FUNCtion.TRACKing app.SCPI.CALCulate(<i>Ch</i>).SELected.MARKer(<i>Mk</i>).FUNCtion.TRACKing = true
<i>Equivalent Softkeys</i>	Markers > Marker Search > Tracking

SCPI.CALCulate(*Ch*).SELected.MARKer(*Mk*).FUNCtion.TTRansition

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	String
<i>Target</i>	Marker <i>Mk</i> of the active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Mk</i> : marker number 1–15, or reference marker number 16 (see Table 4 on page 78)
<i>Description</i>	The selection of the type of the target transition, when the marker search for transition is performed by the SCPI.CALCulate(<i>Ch</i>).SELected.MARKer(<i>Mk</i>).FUNCtion.EXECute method.
<i>Range</i>	"POSitive" : Positive target transition "NEGative" : Negative target transition "BOTH" : Both positive target transition and negative target transition
<i>Notes</i>	The short format of the parameter is indicated by upper case letters. There is no distinction between upper and lower case letters when the property is written. When the property is read out, the short format is indicated by upper case letters.
<i>Out of Range</i>	The value is ignored.
<i>Preset Value</i>	"POS"
<i>Syntax</i>	Dim <i>Param</i> As String <i>Param</i> = app.SCPI.CALCulate(<i>Ch</i>).SELected.MARKer(<i>Mk</i>).FUNCtion.TTRansition app.SCPI.CALCulate(<i>Ch</i>).SELected.MARKer(<i>Mk</i>).FUNCtion.TTRansition = "neg"
<i>Equivalent Softkeys</i>	Marker > Marker Search > Target > Target Transition

SCPI.CALCulate(*Ch*).SELected.MARKer(*Mk*).FUNCtion.TYPE

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	String
<i>Target</i>	Marker <i>Mk</i> of the active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Mk</i> : marker number 1–15, or reference marker number 16 (see Table 4 on page 78)
<i>Description</i>	The selection of the type of the marker search, which is performed by the SCPI.CALCulate(<i>Ch</i>).SELected.MARKer(<i>Mk</i>).FUNCtion.EXECute method.
<i>Range</i>	"MAXimum" : Maximum value search "MINimum" : Minimum value search "PEAK" : Peak search "LPEak" : Peak search to the left from the marker "RPEak" : Peak search to the right from the marker "TARGet" : Target search "LTARGet" : Target search to the left from the marker "RTARGet" : Target search to the right from the marker
<i>Notes</i>	The short format of the parameter is indicated by upper case letters. There is no distinction between upper and lower case letters when the property is written. When the property is read out, the short format is indicated by upper case letters.
<i>Out of Range</i>	The value is ignored.
<i>Preset Value</i>	"MAX"
<i>Syntax</i>	Dim <i>Param</i> As String <i>Param</i> = app.SCPI.CALCulate(<i>Ch</i>).SELected.MARKer(<i>Mk</i>).FUNCtion.TYPE app.SCPI.CALCulate(<i>Ch</i>).SELected.MARKer(<i>Mk</i>).FUNCtion.TYPE = "MIN"
<i>Equivalent Softkeys</i>	Markers > Marker Search > Maximum Minimum Markers > Marker Search > Peak > Search Peak Search Max Peak Search Peak Left Search Peak Right Markers > Marker Search > Target > Search Target Search Target Left Search Target Right

SCPI.CALCulate(*Ch*).SELected.MARKer.MATH.FLATness.DATA

<i>Object Type</i>	Property (read only)								
<i>Data Type</i>	Variant (array of double)								
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)								
<i>Description</i>	<p>The FLATNESS function data array. The FLATNESS function is applied within the range determined by two markers (see SCPI.CALCulate(<i>Ch</i>).SELected.MARKer.MATH.FLATness.DOMain.START and SCPI.CALCulate(<i>Ch</i>).SELected.MARKer.MATH.FLATness.DOMain.STOP properties).</p> <p>The array includes 4 elements:</p> <table style="margin-left: 40px;"> <tr><td><i>Data(0)</i></td><td>Span;</td></tr> <tr><td><i>Data(1)</i></td><td>Gain;</td></tr> <tr><td><i>Data(2)</i></td><td>Slope;</td></tr> <tr><td><i>Data(3)</i></td><td>Flatness.</td></tr> </table>	<i>Data(0)</i>	Span;	<i>Data(1)</i>	Gain;	<i>Data(2)</i>	Slope;	<i>Data(3)</i>	Flatness.
<i>Data(0)</i>	Span;								
<i>Data(1)</i>	Gain;								
<i>Data(2)</i>	Slope;								
<i>Data(3)</i>	Flatness.								
<i>Syntax</i>	<p>Dim <i>Data</i> As Variant</p> <p><i>Data</i> = app.SCPI.CALCulate(<i>Ch</i>).SELected.MARKer.MATH.FLATness.DATA</p>								
<i>Equivalent Softkeys</i>	None								

SCPI.CALCulate(*Ch*).SELected.MARKer.MATH.FLATness.DOMain.START

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Long
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The number of the marker, which specifies the start frequency of the FLATNESS function range.
<i>Range</i>	from 1 to 16
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	1
<i>Syntax</i>	<pre>Dim MkrNum As Long MkrNum = app.SCPI.CALCulate(<i>Ch</i>).SELected.MARKer.MATH.FLATness.DOMain.START app.SCPI.CALCulate(<i>Ch</i>).SELected.MARKer.MATH.FLATness.DOMain.START = 1</pre>
<i>Equivalent Softkeys</i>	Markers > Marker Math > Flatness > Flatness Start

SCPI.CALCulate(*Ch*).SELected.MARKer.MATH.FLATness.DOMain.STOP

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Long
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The number of the marker, which specifies the stop frequency of the FLATNESS function range.
<i>Range</i>	from 1 to 16
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	1
<i>Syntax</i>	<pre>Dim MkrNum As Long MkrNum = app.SCPI.CALCulate(<i>Ch</i>).SELected.MARKer.MATH.FLATness.DOMain.STOP app.SCPI.CALCulate(<i>Ch</i>).SELected.MARKer.MATH.FLATness.DOMain.STOP = 1</pre>
<i>Equivalent Softkeys</i>	Markers > Marker Math > Flatness > Flatness Stop

SCPI.CALCulate(*Ch*).SELected.MARKer.MATH.FLATness.STATE

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Boolean
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The ON/OFF state of the FLATNESS function.
<i>Allowable Values</i>	True: FLATNESS function ON False: FLATNESS function OFF
<i>Preset Value</i>	False
<i>Syntax</i>	<p>Dim <i>Status</i> As Boolean</p> <p><i>Status</i> =</p> <pre>app.SCPI.CALCulate(<i>Ch</i>).SELected.MARKer.MATH.FLATness.STATE app.SCPI.CALCulate(<i>Ch</i>).SELected.MARKer.MATH.FLATness.STATE = true</pre>
<i>Equivalent Softkeys</i>	Markers > Marker Math > Flatness > Flatness

SCPI.CALCulate(*Ch*).SELected.MARKer.REFerence.STATE

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Boolean
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The ON/OFF state of the reference marker. When the reference marker is turned ON, all the values of the other markers turn to relative values.
<i>Allowable Values</i>	True: Reference marker ON False: Reference marker OFF
<i>Preset Value</i>	False
<i>Syntax</i>	Dim <i>Status</i> As Boolean <i>Status</i> = app.SCPI.CALCulate(<i>Ch</i>).SELected.MARKer.REFerence.STATE app.SCPI.CALCulate(<i>Ch</i>).SELected.MARKer.REFerence.STATE = true
<i>Equivalent Softkeys</i>	Markers > Reference Marker

SCPI.CALCulate(*Ch*).SELected.MARKer(*Mk*).SET

<i>Object Type</i>	Property (write only)
<i>Data Type</i>	String
<i>Target</i>	Marker <i>Mk</i> of the active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Mk</i> : marker number 1–15, or reference marker number 16 (see Table 4 on page 78)
<i>Description</i>	The setting of the value of the specified item to the value of the position of the marker.

<i>Range</i>	"STARt" : Sweep start value set to the stimulus value of the marker position. "STOP" : Sweep stop value set to the stimulus value of the marker position. "CENTer" : Sweep center value set to the stimulus value of the marker position. "RLEVel" : Reference value set to the response value of the marker position. "DELay" : Delay value set to the response value of the marker position.
<i>Notes</i>	The short format of the parameter is indicated by upper case letters. There is no distinction between upper and lower case letters when the property is written. When the property is read out, the short format is indicated by upper case letters.
<i>Out of Range</i>	The value is ignored.
<i>Syntax</i>	<code>app.SCPI.CALCulate(<i>Ch</i>).SELected.MARKer(<i>Mk</i>)._SET = "STOP"</code>
<i>Equivalent Softkeys</i>	Markers > Marker Functions > Marker->Start Marker->Stop Marker->Center Marker->Ref Value Marker->Delay

SCPI.CALCulate(*Ch*).SELected.MARKer(*Mk*).STATE

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Boolean
<i>Target</i>	Marker <i>Mk</i> of the active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Mk</i> : marker number 1–15, or reference marker number 16 (see Table 4 on page 78)
<i>Description</i>	The ON/OFF state of a marker. Turning ON a marker with the number from 1 to 15 will turn ON all the markers of smaller numbers. Turning OFF a marker with the number from 1 to 15 will turn OFF all the markers of greater numbers (except for the reference marker). Turning ON/OFF the reference marker with number 16 does not turn ON/OFF the markers with the numbers from 1 to 15, but switches these markers to the relative measurement mode.
<i>Allowable Values</i>	True: Marker ON False: Marker OFF
<i>Preset Value</i>	False

<i>Syntax</i>	Dim <i>Status</i> As Boolean <i>Status</i> = app.SCPI.CALCulate(<i>Ch</i>).SELected.MARKer(<i>Mk</i>).STATe app.SCPI.CALCulate(<i>Ch</i>).SELected.MARKer(<i>Mk</i>).STATe = true
<i>Equivalent Softkeys</i>	Markers > Add Marker Remove Marker Markers > Reference Marker

SCPI.CALCulate(*Ch*).SELected.MARKer(*Mk*).X

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double
<i>Target</i>	Marker <i>Mk</i> of the active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Mk</i> : marker number 1–15, or reference marker number 16 (see Table 4 on page 78)
<i>Description</i>	The stimulus value of the marker.
<i>Range</i>	From the stimulus current start value to the stimulus current stop value.
<i>Out of Value</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	Stimulus center value
<i>Unit</i>	Hz (Hertz) s (second) dBm (decibels above 1 milliwatt)
<i>Syntax</i>	Dim <i>Value</i> As Double <i>Value</i> = app.SCPI.CALCulate(<i>Ch</i>).SELected.MARKer(<i>Mk</i>).X app.SCPI.CALCulate(<i>Ch</i>).SELected.MARKer(<i>Mk</i>).X = 1e9
<i>Equivalent Softkeys</i>	Markers > Edit Stimulus

SCPI.CALCulate(*Ch*).SELected.MARKer(*Mk*).Y

<i>Object Type</i>	Property (read only)
--------------------	----------------------

<i>Data Type</i>	Variant (array of double)				
<i>Target</i>	Marker Mk of the active trace of channel Ch , Ch : channel number 1–16 (see Table 1 on page 25) Mk : marker number 1–15, or reference marker number 16 (see Table 4 on page 78)				
<i>Description</i>	The response value of the marker. If the reference marker is turned ON, the values of the markers from 1 to 15 are read out as relative values to the reference marker. The array includes 2 elements: <table style="margin-left: 40px;"> <tr> <td><i>Data(0)</i></td> <td>real number in rectangular format, real part in polar and Smith chart formats;</td> </tr> <tr> <td><i>Data(1)</i></td> <td>0 in rectangular format, imaginary part in polar and Smith chart formats.</td> </tr> </table>	<i>Data(0)</i>	real number in rectangular format, real part in polar and Smith chart formats;	<i>Data(1)</i>	0 in rectangular format, imaginary part in polar and Smith chart formats.
<i>Data(0)</i>	real number in rectangular format, real part in polar and Smith chart formats;				
<i>Data(1)</i>	0 in rectangular format, imaginary part in polar and Smith chart formats.				
<i>Syntax</i>	Dim <i>Data</i> As Variant <i>Data</i> = app.SCPI.CALCulate(<i>Ch</i>).SELected.MARKer(<i>Mk</i>).Y				
<i>Equivalent Softkeys</i>	None				

SCPI.CALCulate(*Ch*).SELected.MATH.FUNCtion

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	String
<i>Target</i>	The active trace of channel Ch , Ch : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The selection of the math operation between the measurement data and the memory trace data. The math result replaces the data trace. If the data trace is not saved, the command is ignored.
<i>Range</i>	"DIVide" : Division <i>Data / Mem.</i> "MULTiply" : Multiplication <i>Data x Mem.</i> "ADD" : Addition <i>Data + Mem.</i> "SUBTract" : Subtraction <i>Data - Mem.</i> "NORMal" : No math

<i>Notes</i>	The short format of the parameter is indicated by upper case letters. There is no distinction between upper and lower case letters when the property is written. When the property is read out, the short format is indicated by upper case letters.
<i>Out of Range</i>	An error occurs. Error code 210.
<i>Preset Value</i>	"NORM"
<i>Syntax</i>	<pre>Dim Param As String Param = app.SCPI.CALCulate(<i>Ch</i>).SELected.MATH.FUNCtion app.SCPI.CALCulate(<i>Ch</i>).SELected.MATH.FUNCtion= "DIV"</pre>
<i>Equivalent Softkeys</i>	Display > Data Math > Data/Mem Data*Mem Data+Mem Data-Mem OFF

SCPI.CALCulate(*Ch*).SELected.MATH.MEMorize

<i>Object Type</i>	Method
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	Saves the measurement data to the memory trace. Automatically turns on the display of the memory trace.
<i>Syntax</i>	<i>app.SCPI.CALCulate(Ch).SELected.MATH.MEMorize</i>
<i>Equivalent Softkeys</i>	Display > Data->Memory

SCPI.CALCulate(*Ch*).SELected.MSTatistics.DATA

<i>Object Type</i>	Property (read only)
<i>Data Type</i>	Variant (array of double)
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)

<p><i>Description</i></p> <p>The math statistics data array. The statistics function is applied either over the whole range (for all the trace), or within the range specified by the SCPI.CALCulate(<i>Ch</i>).SElected.MStatistics.DOMain.STATE property (the range limits are determined by two markers).</p> <p>The array includes 3 elements:</p> <table style="margin-left: 40px;"><tr><td><i>Data(0)</i></td><td>Mean value;</td></tr><tr><td><i>Data(1)</i></td><td>Standard deviation;</td></tr><tr><td><i>Data(2)</i></td><td>Peak-to-peak (difference between the maximum value and the minimum value).</td></tr></table>		<i>Data(0)</i>	Mean value;	<i>Data(1)</i>	Standard deviation;	<i>Data(2)</i>	Peak-to-peak (difference between the maximum value and the minimum value).
<i>Data(0)</i>	Mean value;						
<i>Data(1)</i>	Standard deviation;						
<i>Data(2)</i>	Peak-to-peak (difference between the maximum value and the minimum value).						
<p><i>Syntax</i></p> <p>Dim <i>Data</i> As Variant <i>Data</i> = app.SCPI.CALCulate(<i>Ch</i>).SElected.MStatistics.DATA</p>							
<p><i>Equivalent Softkeys</i></p> <p>None</p>							

SCPI.CALCulate(*Ch*).SElected.MStatistics.DOMain.MARKer.START

<p><i>Object Type</i></p>	Property (read/write)
<p><i>Data Type</i></p>	Long
<p><i>Target</i></p>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<p><i>Description</i></p>	The number of the marker, which specifies the start frequency of the math statistics range.
<p><i>Range</i></p>	from 1 to 16
<p><i>Out of Range</i></p>	Sets the value of the limit, which is closer to the specified value.
<p><i>Preset Value</i></p>	1
<p><i>Syntax</i></p>	Dim <i>MkrNum</i> As Long <i>MkrNum</i> = app.SCPI.CALCulate(<i>Ch</i>).SElected. MStatistics.DOMain.MARKer.START <i>app.SCPI.CALCulate(<i>Ch</i>).SElected. MStatistics.DOMain.MARKer.START</i> = 3
<p><i>Equivalent Softkeys</i></p>	Markers > Marker Math > Statistics > Statistics Start

SCPI.CALCulate(*Ch*).SELected.MStatistics.DOMain.MARKer.STOP

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Long
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The number of the marker, which specifies the stop frequency of the math statistics range.
<i>Range</i>	from 1 to 16
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	2
<i>Syntax</i>	<pre>Dim MarkerNum As Long MarkerNum = app.SCPI.CALCulate(<i>Ch</i>).SELected. MStatistics.DOMain.MARKer.STOP app.SCPI.CALCulate(<i>Ch</i>).SELected. MStatistics.DOMain.MARKer.STOP = 4</pre>
<i>Equivalent Softkeys</i>	Markers > Marker Math > Statistics > Statistics Stop

SCPI.CALCulate(*Ch*).SELected.MStatistics.DOMain.STATE

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Boolean
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The ON/OFF state of the math statistics range.
<i>Allowable Values</i>	True: Statistics range ON False: Statistics range OFF
<i>Preset Value</i>	False

<i>Syntax</i>	Dim <i>Status</i> As Boolean <i>Status</i> = app.SCPI.CALCulate(<i>Ch</i>).SELected. MSTatistics.DOMain.STATE app.SCPI.CALCulate(<i>Ch</i>).SELected. MSTatistics.DOMain.STATE = true
<i>Equivalent Softkeys</i>	Markers > Marker Math > Statistics > Statistics Range

SCPI.CALCulate(*Ch*).SELected.MSTatistics.STATE

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Boolean
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The ON/OFF state of the math statistics display.
<i>Allowable Values</i>	True: Statistics display ON False: Statistics display OFF
<i>Preset Value</i>	False
<i>Syntax</i>	Dim <i>Status</i> As Boolean <i>Status</i> = app.SCPI.CALCulate(<i>Ch</i>).SELected.MSTatistics.STATE app.SCPI.CALCulate(<i>Ch</i>).SELected.MSTatistics.STATE = true
<i>Equivalent Softkeys</i>	Markers > Marker Math > Statistics > Statistics

SCPI.CALCulate(*Ch*).SELected.RLIMit.DATA

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Variant (array of double)
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)

<i>Description</i>	<p>The data array, which is the limit line for the ripple limit function. The array size is $1 + 4N$, where N is the number of limit line segments.</p> <p>For the n-th point, where n from 1 to N:</p> <ul style="list-style-type: none"> $Data(0)$ the number of limit line segments N is the integer from 0 to 12. Setting 0 clears the limit line; $Data(4n-3)$ type of the n-th limit line segment; 0: Off 1: On $Data(4n-2)$ the stimulus value in the beginning point of the n-th segment; $Data(4n-1)$ the stimulus value in the end point of the n-th segment; $Data(4n-0)$ the ripple limit value of the n-th segment.
<i>Notes</i>	<p>If the array size is not $1 + 4N$, where N is $Data(0)$, an error occurs (error code 214). If $Data(4n - 3)$ is less than 0 or more than 1, an error occurs (error code 214). When $Data(4n-2)$, $Data(4n-1)$, and $Data(4n-0)$ elements are out of allowable range, the value is set to the limit, which is closer to the specified value.</p>
<i>Syntax</i>	<pre>Dim Data As Variant Data = app.SCPI.CALCulate(<i>Ch</i>).SELected.RLIMit.DATA app.SCPI.CALCulate(<i>Ch</i>).SELected.RLIMit.DATA = Array(1,1,800,900,10)</pre>
<i>Equivalent Softkeys</i>	Analysis > Ripple Limit > Edit Ripple Limit

SCPI.CALCulate(*Ch*).SELected.RLIMit.DISPlay.LINE

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Boolean
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The ON/OFF state of the ripple limit line display.
<i>Allowable Values</i>	True: Ripple limit line ON False: Ripple limit line OFF
<i>Preset Value</i>	False

<i>Syntax</i>	Dim <i>Status</i> As Boolean <i>Status</i> = app.SCPI.CALCulate(<i>Ch</i>).SELected.RLIMit.DISPlay.LINE app.SCPI.CALCulate(<i>Ch</i>).SELected.RLIMit.DISPlay.LINE = true
<i>Equivalent Softkeys</i>	Analysis > Ripple Limit > Ripple Limit

SCPI.CALCulate(*Ch*).SELected.RLIMit.DISPlay.SElect

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Long
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The number of the ripple limit test band selected for the ripple value display.
<i>Range</i>	from 1 to 12
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	1
<i>Syntax</i>	Dim <i>Value</i> As Long <i>Value</i> = app.SCPI.CALCulate(<i>Ch</i>).SELected.RLIMit.DISPlay.SElect app.SCPI.CALCulate(<i>Ch</i>).SELected.RLIMit.DISPlay.SESelect = 2
<i>Equivalent Softkeys</i>	Analysis > Ripple Limit > Ripple Value Band

SCPI.CALCulate(*Ch*).SELected.RLIMit.DISPlay.VALUE

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	String
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)

<i>Description</i>	The selection of the display type of the ripple value in the specified band.
<i>Range</i>	"OFF" : Ripple value display OFF "ABSolute" : Absolute value "MARgin" : Margin (difference between the ripple limit and the absolute value)
<i>Notes</i>	The short format of the parameter is indicated by upper case letters. There is no distinction between upper and lower case letters when the property is written. When the property is read out, the short format is indicated by upper case letters.
<i>Out of Range</i>	The value is ignored.
<i>Preset Value</i>	"OFF"
<i>Syntax</i>	Dim <i>Param</i> As String <i>Param</i> = app.SCPI.CALCulate(<i>Ch</i>).SELected.RLIMit.DISPlay.VALue app.SCPI.CALCulate(<i>Ch</i>).SELected.RLIMit.DISPlay.VALue = "ABS"
<i>Equivalent Softkeys</i>	Analysis > Ripple Limit > Ripple Value

SCPI.CALCulate(*Ch*).SELected.RLIMit.FAIL

<i>Object Type</i>	Property (read only)
<i>Data Type</i>	Boolean
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	Ripple limit test result.
<i>Allowable Values</i>	True: Fail False: Pass
<i>Syntax</i>	Dim <i>Status</i> As Boolean <i>Status</i> = app.SCPI.CALCulate(<i>Ch</i>).SELected.RLIMit.FAIL
<i>Equivalent Softkeys</i>	None

SCPI.CALCulate(*Ch*).SELected.RLIMit.REPort.DATA

<i>Object Type</i>	Property (read only)								
<i>Data Type</i>	Variant (array of double)								
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)								
<i>Description</i>	<p>The data array, which is the ripple limit test results. The array size is 1+3N, where N is the number of ripple limit bands.</p> <p>For the n-th point, where n from 1 to N:</p> <table style="margin-left: 40px;"> <tr><td><i>Data(0)</i></td><td>N total number of the bands;</td></tr> <tr><td><i>Data(3n-2)</i></td><td>n number of the band;</td></tr> <tr><td><i>Data(3n-1)</i></td><td>Ripple value in the n-th band;</td></tr> <tr><td><i>Data(3n-0)</i></td><td>Ripple limit test result in the n-th band: 0: Pass 1: Fail</td></tr> </table>	<i>Data(0)</i>	N total number of the bands;	<i>Data(3n-2)</i>	n number of the band;	<i>Data(3n-1)</i>	Ripple value in the n-th band;	<i>Data(3n-0)</i>	Ripple limit test result in the n-th band: 0: Pass 1: Fail
<i>Data(0)</i>	N total number of the bands;								
<i>Data(3n-2)</i>	n number of the band;								
<i>Data(3n-1)</i>	Ripple value in the n-th band;								
<i>Data(3n-0)</i>	Ripple limit test result in the n-th band: 0: Pass 1: Fail								
<i>Syntax</i>	<pre>Dim Data As Variant Data = app.SCPI.CALCulate(<i>Ch</i>).SELected.RLIMit.REPort.DATA</pre>								
<i>Equivalent Softkeys</i>	None								

SCPI.CALCulate(*Ch*).SELected.RLIMit.STATE

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Boolean
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The ON/OFF state of the ripple limit test.
<i>Allowable Values</i>	True: Ripple limit test ON False: Ripple limit test OFF
<i>Preset Value</i>	False

<i>Syntax</i>	Dim <i>Status</i> As Boolean <i>Status</i> = app.SCPI.CALCulate(<i>Ch</i>).SELected.RLIMit.STATE app.SCPI.CALCulate(<i>Ch</i>).SELected.RLIMit.STATE = true
<i>Equivalent Softkeys</i>	Analysis > Ripple Limit > Ripple Test

SCPI.CALCulate(*Ch*).SELected.SMOothing.APERture

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The smoothing aperture for the smoothing function.
<i>Range</i>	from 0.01 to 20
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	1
<i>Unit</i>	%
<i>Syntax</i>	Dim <i>Value</i> As Double <i>Value</i> = app.SCPI.CALCulate(<i>Ch</i>).SELected.SMOothing.APERture app.SCPI.CALCulate(<i>Ch</i>).SELected.SMOothing.APERture = 1.5
<i>Equivalent Softkeys</i>	Average > Smo Aperture

SCPI.CALCulate(*Ch*).SELected.SMOothing.STATE

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Boolean
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)

<i>Description</i>	The ON/OFF state of the trace smoothing function.
<i>Allowable Values</i>	True: Trace smoothing ON False: Trace smoothing OFF
<i>Preset Value</i>	False
<i>Syntax</i>	Dim <i>Status</i> As Boolean <i>Status</i> = app.SCPI.CALCulate(<i>Ch</i>).SELected.SMOothing.STATE app.SCPI.CALCulate(<i>Ch</i>).SELected.SMOothing.STATE = true
<i>Equivalent Softkeys</i>	Average > Smoothing

SCPI.CALCulate(*Ch*).SELected.TRANSform.TIME.CENTer

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The time domain center value, when the time domain transformation function is turned ON.
<i>Range</i>	Varies depending on the specified frequency range and the number of points.
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	0
<i>Unit</i>	s (second)
<i>Syntax</i>	Dim <i>Value</i> As Double <i>Value</i> = app.SCPI.CALCulate(<i>Ch</i>).SELected.TRANSform.TIME.CENTer app.SCPI.CALCulate(<i>Ch</i>).SELected.TRANSform.TIME.CENTer = 1e-8
<i>Equivalent Softkeys</i>	Analysis > Time Domain > Center

SCPI.CALCulate(*Ch*).SELected.TRANSform.TIME.IMPulse.WIDTh

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The impulse width (time domain transformation resolution), coupled with the Kaiser–Bessel window shape β parameter. The impulse width setting changes the β parameter, and setting of β parameter changes the impulse width.
<i>Range</i>	Varies depending on the specified frequency range and the number of points.
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	None
<i>Unit</i>	s (second)
<i>Syntax</i>	Dim Value As Double Value = app.SCPI.CALCulate(<i>Ch</i>).SELected.TRANSform.TIME.IMPulse.WIDTh app.SCPI.CALCulate(<i>Ch</i>).SELected.TRANSform.TIME.IMPulse.WIDTh = 1e–8
<i>Equivalent Softkeys</i>	Analysis > Time Domain > Window > Impulse Width (when the transformation type is set to Bandpass or Lowpass Impulse)

SCPI.CALCulate(*Ch*).SELected.TRANSform.TIME.KBESsel

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The β parameter, which controls the Kaiser–Bessel window shape, when performing time domain transformation.
<i>Range</i>	from 0 to 13
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.

<i>Preset Value</i>	6
<i>Unit</i>	s (second)
<i>Syntax</i>	<p>Dim <i>Value</i> As Double</p> <p><i>Value</i> = app.SCPI.CALCulate(<i>Ch</i>).SELected.TRANSform.TIME.KBESsel</p> <p>app.SCPI.CALCulate(<i>Ch</i>).SELected.TRANSform.TIME.KBESsel = 13</p>
<i>Equivalent Softkeys</i>	Analysis > Time Domain > Window > Kaiser Beta

SCPI.CALCulate(*Ch*).SELected.TRANSform.TIME.LPFRequency

<i>Object Type</i>	Method
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	Changes the frequency range to match with the lowpass type of the time domain transformation function.
<i>Syntax</i>	app.SCPI.CALCulate(<i>Ch</i>).SELected.TRANSform.TIME.LPFRequency
<i>Equivalent Softkeys</i>	Analysis > Time Domain > Set Frequency Low Pass

SCPI.CALCulate(*Ch*).SELected.TRANSform.TIME.SPAN

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The time domain span value, when the time domain transformation function is turned ON.
<i>Range</i>	Varies depending on the specified frequency range and the number of points.
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.

<i>Preset Value</i>	2e-8
<i>Unit</i>	s (second)
<i>Syntax</i>	<p>Dim <i>Value</i> As Double</p> <p><i>Value</i> = app.SCPI.CALCulate(<i>Ch</i>).SELected.TRANSform.TIME.SPAN</p> <p>app. SCPI.CALCulate(<i>Ch</i>).SELected.TRANSform.TIME.SPAN = 1e-8</p>
<i>Equivalent Softkeys</i>	Analysis > Time Domain > Span

SCPI.CALCulate(*Ch*).SELected.TRANSform.TIME.START

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The start value used for the transformation function of the time domain function.
<i>Range</i>	Varies depending on the specified frequency range and the number of points.
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	-1e-8
<i>Unit</i>	s (second)
<i>Syntax</i>	<p>Dim <i>Value</i> As Double</p> <p><i>Value</i> = app.SCPI.CALCulate(<i>Ch</i>).SELected.TRANSform.TIME.START</p> <p>app. SCPI.CALCulate(<i>Ch</i>).SELected.TRANSform.TIME.START = 1e-8</p>
<i>Equivalent Softkeys</i>	Analysis > Time Domain > Start

SCPI.CALCulate(*Ch*).SELected.TRANSform.TIME.STATE

<i>Object Type</i>	Property (read/write)
--------------------	-----------------------

<i>Data Type</i>	Boolean
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The ON/OFF state of the time domain transformation function.
<i>Allowable Values</i>	True: Time domain transformation ON False: Time domain transformation OFF
<i>Preset Value</i>	False
<i>Syntax</i>	Dim <i>Status</i> As Boolean <i>Status</i> = app.SCPI.CALCulate(<i>Ch</i>).SElected.TRANSform.TIME.STATE app.SCPI.CALCulate(<i>Ch</i>).SElected.TRANSform.TIME.STATE = true
<i>Equivalent Softkeys</i>	Analysis > Time Domain > Time Domain

SCPI.CALCulate(*Ch*).SElected.TRANSform.TIME.STEP.RTIME

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The rise time of the step signal (time domain transformation resolution), coupled with the Kaiser–Bessel window shape β parameter. The impulse width setting changes the β parameter, and setting of β parameter changes the impulse width.
<i>Range</i>	Varies depending on the specified frequency range and the number of points.
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	None
<i>Unit</i>	s (second)

<i>Syntax</i>	<p>Dim <i>Value</i> As Double <i>Value</i> = app.SCPI.CALCulate(<i>Ch</i>).SELected.TRANSform.TIME.IMPulse.WIDTh <i>app.SCPI.CALCulate(Ch).SELected.TRANSform.TIME.IMPulse.WIDTh</i> = 1e-8</p>
<i>Equivalent Softkeys</i>	Analysis > Time Domain > Window > Impulse Width (when the transformation type is set to Lowpass Step)

SCPI.CALCulate(*Ch*).SELected.TRANSform.TIME.STIMulus

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	String
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The selection of the stimulus type for the time domain transformation function: impulse or step.
<i>Range</i>	"IMPulse" Impulse "STEP" Step
<i>Notes</i>	The short format of the parameter is indicated by upper case letters. There is no distinction between upper and lower case letters when the property is written. When the property is read out, the short format is indicated by upper case letters.
<i>Out of Range</i>	The value is ignored.
<i>Preset Value</i>	"IMP"
<i>Syntax</i>	<p>Dim <i>Param</i> As String <i>Param</i> = app.SCPI.CALCulate(<i>Ch</i>).SELected.TRANSform.TIME.STIMulus <i>app.SCPI.CALCulate(Ch).SELected.TRANSform.TIME.STIMulus</i> = "STEP"</p>
<i>Equivalent Softkeys</i>	Analysis > Time Domain > Type > Bandpass Lowpass Step Lowpass Impulse

SCPI.CALCulate(*Ch*).SELected.TRANSform.TIME.STOP

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The time domain stop value, when the time domain transformation function is turned ON.
<i>Range</i>	Varies depending on the specified frequency range and the number of points.
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	1e–8
<i>Unit</i>	s (second)
<i>Syntax</i>	<p>Dim <i>Value</i> As Double</p> <p><i>Value</i> = app.SCPI.CALCulate(<i>Ch</i>).SELected.TRANSform.TIME.STOP</p> <p>app.SCPI.CALCulate(<i>Ch</i>).SELected.TRANSform.TIME.STOP = 2e–8</p>
<i>Equivalent Softkeys</i>	Analysis > Time Domain > Stop

SCPI.CALCulate(*Ch*).SELected.TRANSform.TIME.TYPE

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	String
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The selection of the transformation type for the time domain transformation function: bandpass response or direct current circuit.
<i>Range</i>	<p>"BPAsS" Bandpass</p> <p>"LPAsS" Lowpass</p>

<i>Notes</i>	The short format of the parameter is indicated by upper case letters. There is no distinction between upper and lower case letters when the property is written. When the property is read out, the short format is indicated by upper case letters.
<i>Out of Range</i>	The value is ignored.
<i>Preset Value</i>	"BPASS"
<i>Syntax</i>	<pre>Dim Param As String Param = app.SCPI.CALCulate(Ch).SELected.TRANSform.TIME.TYPE app.SCPI.CALCulate(Ch).SELected.TRANSform.TIME.TYPE = "STEP"</pre>
<i>Equivalent Softkeys</i>	Analysis > Time Domain > Type > Bandpass Lowpass Step Lowpass Impulse

SCPI.CALCulate(*Ch*).TRACe(*Tr*).DATA.FDATA

<i>Object Type</i>	Property (read only)
<i>Data Type</i>	Variant (array of double)
<i>Target</i>	<p>The specified trace <i>Tr</i> of channel <i>Ch</i>,</p> <p><i>Tr</i>: trace number 1–16 (see Table 3 on page 36) <i>Ch</i>: channel number 1–16 (see Table 1 on page 25)</p>
<i>Description</i>	<p>The formatted data array. The array elements contain measurements in the current format, for example, in logarithmic magnitude format (Log Mag). Also, see section “Measurement Data Arrays” on page 20.</p> <p>The array size is 2N, where N is the number of measurement points.</p> <p>For the n-th point, where n from 1 to N:</p> <ul style="list-style-type: none"> <i>Data</i>(2n–2) real number in rectangular format, real part in polar and Smith chart formats; <i>Data</i>(2n–1) 0 in rectangular format, imaginary part in polar and Smith chart formats. <p>The index of the array starts from 0.</p>
<i>Syntax</i>	<pre>Dim Data As Variant Data = app.SCPI.CALCulate(Ch).Trace(Tr).DATA.FDATA</pre>
<i>Equivalent Softkeys</i>	None

SCPI.CALCulate(*Ch*).TRACe(*Tr*).DATA.FMEMORY

<i>Object Type</i>	Property (read only)				
<i>Data Type</i>	Variant (array of double)				
<i>Target</i>	The specified trace <i>Tr</i> of channel <i>Ch</i> , <i>Tr</i> : trace number 1–16 (see Table 3 on page 36) <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)				
<i>Description</i>	<p>The formatted memory array. The array elements contain saved measurements in the current format, for example, in logarithmic magnitude format (Log Mag). Also, see section “Measurement Data Arrays” on page 20.</p> <p>The array size is 2N, where N is the number of measurement points.</p> <p>For the n-th point, where n from 1 to N:</p> <table style="margin-left: 40px;"> <tr> <td><i>Data</i>(2n–2)</td> <td>real number in rectangular format, real part in polar and Smith chart formats;</td> </tr> <tr> <td><i>Data</i>(2n–1)</td> <td>0 in rectangular format, imaginary part in polar and Smith chart formats.</td> </tr> </table> <p>The index of the array starts from 0.</p>	<i>Data</i> (2n–2)	real number in rectangular format, real part in polar and Smith chart formats;	<i>Data</i> (2n–1)	0 in rectangular format, imaginary part in polar and Smith chart formats.
<i>Data</i> (2n–2)	real number in rectangular format, real part in polar and Smith chart formats;				
<i>Data</i> (2n–1)	0 in rectangular format, imaginary part in polar and Smith chart formats.				
<i>Syntax</i>	<pre>Dim <i>Data</i> As Variant <i>Data</i> = app.SCPI.CALCulate(<i>Ch</i>).Trace(<i>Tr</i>).DATA.FMEMORY</pre>				
<i>Equivalent Softkeys</i>	None				

SCPI.CALCulate(*Ch*). TRACe(*Tr*).DATA.SDATA

<i>Object Type</i>	Property (read only)
<i>Data Type</i>	Variant (array of double)
<i>Target</i>	The specified trace <i>Tr</i> of channel <i>Ch</i> , <i>Tr</i> : trace number 1–16 (see Table 3 on page 36) <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)

<i>Description</i>	<p>The corrected data array. The corrected measurements are complex numbers. Also, see section “Measurement Data Arrays” on page 20.</p> <p>The array size is $2N$, where N is the number of measurement points.</p> <p>For the n-th point, where n from 1 to N:</p> <p style="padding-left: 40px;"><i>Data</i>($2n-2$) the real part of corrected measurement;</p> <p style="padding-left: 40px;"><i>Data</i>($2n-1$) the imaginary part of corrected measurement.</p> <p>The index of the array starts from 0.</p>
<i>Syntax</i>	<p>Dim <i>Data</i> As Variant</p> <p><i>Data</i> = app.SCPI.CALCulate(<i>Ch</i>). Trace(<i>Tr</i>).DATA.SDATA</p>
<i>Equivalent Softkeys</i>	None

SCPI.CALCulate(*Ch*). TRACe(*Tr*).DATA.SMEMory

<i>Object Type</i>	Property (read only)
<i>Data Type</i>	Variant (array of double)
<i>Target</i>	<p>The specified trace <i>Tr</i> of channel <i>Ch</i>,</p> <p style="padding-left: 40px;"><i>Tr</i>: trace number 1–16 (see Table 1 on page 32)</p> <p style="padding-left: 40px;"><i>Ch</i>: channel number 1–16 (see Table 1 on page 25)</p>
<i>Description</i>	<p>The corrected memory array. The corrected measurements are complex numbers. Also, see section “Measurement Data Arrays” on page 20.</p> <p>The array size is $2N$, where N is the number of measurement points.</p> <p>For the n-th point, where n from 1 to N:</p> <p style="padding-left: 40px;"><i>Data</i>($2n-2$) the real part of corrected measurement memory;</p> <p style="padding-left: 40px;"><i>Data</i>($2n-1$) the imaginary part of corrected measurement memory.</p> <p>The index of the array starts from 0.</p>
<i>Syntax</i>	<p>Dim <i>Data</i> As Variant</p> <p><i>Data</i> = app.SCPI.CALCulate(<i>Ch</i>). Trace(<i>Tr</i>).DATA.SMEMory</p>
<i>Equivalent Softkeys</i>	None

SCPI.CALCulate(*Ch*).TRACe(*Tr*).DATA.XAXis

<i>Object Type</i>	Property (read only)
<i>Data Type</i>	Variant (array of double)
<i>Target</i>	The specified trace <i>Tr</i> of channel <i>Ch</i> , <i>Tr</i> : trace number 1–16 (see Table 1 on page 32) <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The specified trace X axis data array. The array size is N, where N is the number of measurement points. For the n-th point, where n from 0 to N–1: $Data(n)$ the X axis value;
<i>Syntax</i>	Dim <i>Data</i> As Variant <i>Data</i> = app.SCPI.CALCulate(<i>Ch</i>).Trace(<i>Tr</i>).DATA.XAXis
<i>Equivalent Softkeys</i>	None

SCPI.DISPlay.COLor.BACK

<i>Object Type</i>	Property (read/write)						
<i>Data Type</i>	Variant (array of long)						
<i>Target</i>	Instrument						
<i>Description</i>	<p>The background color for trace display.</p> <p>The array contains 3 elements:</p> <table style="margin-left: 40px;"> <tr> <td><i>Data(0)</i></td> <td>Red value R;</td> </tr> <tr> <td><i>Data(1)</i></td> <td>Green value G;</td> </tr> <tr> <td><i>Data(2)</i></td> <td>Blue value B.</td> </tr> </table>	<i>Data(0)</i>	Red value R;	<i>Data(1)</i>	Green value G;	<i>Data(2)</i>	Blue value B.
<i>Data(0)</i>	Red value R;						
<i>Data(1)</i>	Green value G;						
<i>Data(2)</i>	Blue value B.						
<i>Range</i>	For all the array elements from 0 to 255.						
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.						
<i>Preset Value</i>	0, 0, 0						
<i>Syntax</i>	<pre>Dim Data As Variant Data = app.SCPI.DISPlay.COLor.BACK app.SCPI.DISPlay.COLor.BACK = Array(0, 0, 0)</pre>						
<i>Equivalent Softkeys</i>	Display > Properties > Color > Background > Red Green Blue						

SCPI.DISPlay.COLor.GRAticule

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Variant (array of long)
<i>Target</i>	Instrument

<i>Description</i>	The grid and the graticule label color for trace display. The array contains 3 elements: <i>Data(0)</i> Red value R; <i>Data(1)</i> Green value G; <i>Data(2)</i> Blue value B.
<i>Range</i>	For all array elements from 0 to 255.
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	<i>Data(0)</i> 160; <i>Data(1)</i> 160; <i>Data(2)</i> 164.
<i>Syntax</i>	Dim <i>Data</i> As Variant <i>Data</i> = app.SCPI.DISPlay.COLor.GRATicule app.SCPI.DISPlay.COLor.GRATicule = Array(128, 128, 128)
<i>Equivalent Softkeys</i>	Display > Properties > Color > Grid > Red Green Blue

SCPI.DISPlay.COLor.RESet

<i>Object Type</i>	Method
<i>Target</i>	Instrument
<i>Description</i>	Restores the display settings to the default values.
<i>Syntax</i>	app.SCPI.DISPlay.COLor.RESet
<i>Equivalent Softkeys</i>	Display > Properties > Set Defaults

SCPI.DISPlay.COLor.TRACe(*Tr*).DATA

<i>Object Type</i>	Property (read/write)
--------------------	-----------------------

<i>Data Type</i>	Variant (array of long)
<i>Target</i>	Trace number <i>Tr</i> in all channels, <i>Tr</i> : trace number 1–16 (see Table 3 on page 36)
<i>Description</i>	The data trace color. The array contains 3 elements: <i>Data(0)</i> Red value R; <i>Data(1)</i> Green value G; <i>Data(2)</i> Blue value B.
<i>Range</i>	For all array elements from 0 to 255.
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	Varies depending on the trace number.
<i>Syntax</i>	Dim <i>Data</i> As Variant <i>Data</i> = app.SCPI.DISPlay.COLor.TRACe(<i>Tr</i>).DATA app.SCPI.DISPlay.COLor.TRACe(<i>Tr</i>).DATA = Array(255, 255, 0)
<i>Equivalent Softkeys</i>	Display > Properties > Color > Data Trace > Red Green Blue

SCPI.DISPlay.COLor.TRACe(*Tr*).MEMORY

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Variant (array of long)
<i>Target</i>	Trace number <i>Tr</i> in all channels <i>Tr</i> : trace number 1–16 (see Table 3 on page 36)
<i>Description</i>	The memory trace color. The array contains 3 elements: <i>Data(0)</i> Red value R; <i>Data(1)</i> Green value G; <i>Data(2)</i> Blue value B.
<i>Range</i>	For all array elements from 0 to 255.

<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	Varies depending on the trace number.
<i>Syntax</i>	<p>Dim <i>Data</i> As Variant <i>Data</i> = app.SCPI.DISPlay.COLOR.TRACe(<i>Tr</i>).MEMory <i>app.SCPI.DISPlay.COLOR.TRACe(Tr).MEMory</i> = Array(255, 255, 0)</p>
<i>Equivalent Softkeys</i>	Display > Properties > Color > Data Trace > Red Green Blue

SCPI.DISPlay.ENABLE

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Boolean
<i>Target</i>	Instrument
<i>Description</i>	The ON/OFF state of the display update function.
<i>Allowable Values</i>	True: Display update ON False: Display update OFF
<i>Preset Value</i>	True
<i>Syntax</i>	<p>Dim <i>Status</i> As Boolean <i>Status</i> = app.SCPI.DISPlay.ENABLE <i>app.SCPI.DISPlay.ENABLE</i> = true</p>
<i>Equivalent Softkeys</i>	Display > Update

SCPI.DISPlay.FSIGN

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Boolean
<i>Target</i>	Instrument

<i>Description</i>	The ON/OFF state of the <i>Fail</i> sign display, when performing limit test or ripple limit test.
<i>Allowable Values</i>	True: <i>Fail</i> sign display ON False: <i>Fail</i> sign display OFF
<i>Preset Value</i>	False
<i>Syntax</i>	<i>Dim Status As Boolean</i> <i>Status = app.SCPI.DISPlay.FSIGN</i> <i>app.SCPI.DISPlay.FSIGN = true</i>
<i>Equivalent Softkeys</i>	Analysis > Limit Test > Fail Sign Analysis > Ripple Limit > Fail Sign

SCPI.DISPlay.IMAGe

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	String
<i>Target</i>	Instrument
<i>Description</i>	The inverted color display of the data traces.
<i>Range</i>	"NORMAl" : Normal display "INVert" : Inverted color display
<i>Notes</i>	The short format of the parameter is indicated by upper case letters. There is no distinction between upper and lower case letters when the property is written. When the property is read out, the short format is indicated by upper case letters.
<i>Out of Range</i>	The value is ignored.
<i>Preset Value</i>	"NORM"
<i>Syntax</i>	<i>Dim Param As String</i> <i>Param = app.SCPI.DISPlay.IMAGe</i> <i>app.SCPI.DISPlay.IMAGe = "INV"</i>

<i>Equivalent Softkeys</i>	Display > Properties > Invert Color
----------------------------	--------------------------------------------------

SCPI.DISPlay.MAXimize

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Boolean
<i>Target</i>	The active channel window
<i>Description</i>	The ON/OFF state of the maximization the active channel window.
<i>Allowable Values</i>	True: maximization ON False: maximization OFF
<i>Preset Value</i>	True
<i>Syntax</i>	<p><i>Dim Status As Boolean</i></p> <p><i>Status = app.SCPI.DISPlay.MAXimize</i></p> <p><i>app.SCPI.DISPlay.MAXimize = true</i></p>
<i>Equivalent Softkeys</i>	Display > Active Trace/Channel > Maximize Channel

SCPI.DISPlay.SPLit

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Long
<i>Target</i>	Instrument
<i>Description</i>	The number and layout of the channel windows on the screen. The channel window layout is in Table 5 below.
<i>Range</i>	from 1 to 16
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	1

<i>Syntax</i>	Dim <i>Value As Long</i> <i>Value</i> = app.SCPI.DISPlay.SPLit app.SCPI.DISPlay.SPLit = 2
<i>Equivalent Softkeys</i>	Display > Allocate channels

Table 5. Channel Window Layout on the Screen

1:	2:	3:	4:
5:	6:	7:	8:
9:	10:	11:	12:
13:	14:	15:	16:

SCPI.DISPlay.UPDate.IMMEDIATE

<i>Object Type</i>	Method
<i>Target</i>	Instrument
<i>Description</i>	Updates the display once, when the display update is set to OFF (SCPI.DISPlay.ENable property is set to False).
<i>Syntax</i>	app.SCPI.DISPlay._UPDate.IMMEDIATE
<i>Equivalent Softkeys</i>	None

SCPI.DISPlay.WINDOW(*Ch*).ACTivate

<i>Object Type</i>	Method
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)

<i>Description</i>	Sets the active channel.
<i>Notes</i>	The channel window must be displayed. At attempt to set to the active channel the channel, which is not displayed, an error occurs.
<i>Syntax</i>	<code>app.SCPI.DISPlay.WINDOW(Ch).ACTivate</code>
<i>Equivalent Softkeys</i>	Display > Active Trace / Channel > Active Channel

SCPI.DISPlay.WINDOW(*Ch*).ANNotation.MARKer.ALIGn.TYPE

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	String
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The alignment mode of the marker display position of each trace, when the only active trace display feature is turned OFF (SCPI.DISPlay.WINDOW(<i>Ch</i>).ANNotation.MARKer.SINGle.STATE property is set to False).
<i>Range</i>	"VERTical" : Vertical alignment "HORizontal" : Horizontal alignment "NONE" : No alignment
<i>Notes</i>	The short format of the parameter is indicated by upper case letters. There is no distinction between upper and lower case letters when the property is written. When the property is read out, the short format is indicated by upper case letters.
<i>Out of Range</i>	The value is ignored.
<i>Preset Value</i>	"NONE"
<i>Syntax</i>	<pre>Dim Param As String Param = app.SCPI.DISPlay.WINDOW(Ch).ANNotation.MARKer.ALIGn.TYPE app.SCPI.DISPlay.WINDOW(Ch).ANNotation.MARKer.ALIGn.TYPE = "VERT"</pre>
<i>Equivalent Softkeys</i>	Markers > Properties > Align > Vertical Horizontal OFF

SCPI.DISPlay.WINDoW(*Ch*).ANNotation.MARKer.SINGle.STATE

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Boolean
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The ON/OFF state of the marker display for the active trace only.
<i>Allowable Values</i>	True: Only active trace markers display ON False: Only active trace markers display OFF
<i>Preset Value</i>	True
<i>Syntax</i>	Dim <i>Status</i> As Boolean <i>Status</i> = app.SCPI SCPI.DISPlay.WINDoW(<i>Ch</i>).ANNotation.MARKer.SINGle.STATE <i>app.SCPI SCPI.DISPlay.WINDoW(<i>Ch</i>).ANNotation.MARKer.SINGle.STATE</i> = true
<i>Equivalent Softkeys</i>	Markers > Properties > Active Only

SCPI.DISPlay.WINDow(*Ch*).MAXimize

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Boolean
<i>Target</i>	The active trace of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The ON/OFF state of the maximization the active trace
<i>Allowable Values</i>	True: maximization ON False: maximization OFF
<i>Preset Value</i>	True
<i>Syntax</i>	<p>Dim <i>Status</i> As Boolean</p> <p><i>Status</i> = app.SCPI.DISPlay.WINDow(<i>Ch</i>).MAXimize</p> <p>app.SCPI.DISPlay.WINDow(<i>Ch</i>).MAXimize = true</p>
<i>Equivalent Softkeys</i>	Display > Active Trace/Channel > Maximize Trace

SCPI.DISPlay.WINDow(*Ch*).SPLit

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Long
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The code of the graph layout of channels. The channel window layout is in Table 5 on page 148.
<i>Range</i>	from 1 to 16
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	1

<i>Notes</i>	This property does not define the number of traces in the channel window, the number of traces is defined by the SCPI.CALCulate(<i>Ch</i>).PARameter.COUNt property.
<i>Syntax</i>	<p>Dim <i>Value</i> As Long <i>Value</i> = app.SCPI.DISPlay.WINDOW(<i>Ch</i>).SPLit <i>app.SCPI.DISPlay.WINDOW(Ch).SPLit</i> = 2</p>
<i>Equivalent Softkeys</i>	Display > Allocate Traces

SCPI.DISPlay.WINDOW(*Ch*).TITLE.DATA

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	String
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The channel title label.
<i>Range</i>	up to 254 characters
<i>Preset Value</i>	""
<i>Syntax</i>	<p>Dim <i>Text</i> As String <i>Text</i> = app.SCPI.DISPlay.WINDOW(<i>Ch</i>).TITLE.DATA <i>app.SCPI.DISPlay.WINDOW(Ch).TITLE.DATA</i> = "Example1"</p>
<i>Equivalent Softkeys</i>	Display > Edit Title Label

SCPI.DISPlay.WINDOW(*Ch*).TITLE.STATE

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Boolean
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)

<i>Description</i>	The ON/OFF state of the title label display.
<i>Allowable Values</i>	True: Title label display ON False: Title label display OFF
<i>Preset Value</i>	False
<i>Syntax</i>	Dim <i>Status</i> As Boolean <i>Status</i> = app.SCPI.DISPlay.WINDoW(<i>Ch</i>).TITLE.STATE app.SCPI.DISPlay.WINDoW(<i>Ch</i>).TITLE.STATE = true
<i>Equivalent Softkeys</i>	Display > Title Label

SCPI.DISPlay.WINDoW(*Ch*).TRACe(*Tr*).ANNotation.MARKer.POSition.X

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double
<i>Target</i>	Trace <i>Tr</i> of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Tr</i> : trace number 1–16 (see Table 3 on page 36)
<i>Description</i>	The display position of the marker value on the X–axis by a percentage of the display width.
<i>Range</i>	from 0 to 100
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	0
<i>Unit</i>	%
<i>Syntax</i>	Dim <i>Value</i> As Double <i>Value</i> = app.SCPI.DISPlay.WINDoW(<i>Ch</i>).TRACe(<i>Tr</i>).ANNotation.MARKer.POSition.X app.SCPI.DISPlay.WINDoW(<i>Ch</i>).TRACe(<i>Tr</i>).ANNotation.MARKer.POSition.X = 50
<i>Equivalent Softkeys</i>	Markers > Properties > Data X Position

SCPI.DISPlay.WINDOW(*Ch*).TRACe(*Tr*).ANNotation.MARKer.POSition.Y

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double
<i>Target</i>	Trace <i>Tr</i> of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Tr</i> : trace number 1–16 (see Table 3 on page 36)
<i>Description</i>	The display position of the marker value on the Y-axis by a percentage of the display height.
<i>Range</i>	from 0 to 100
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	0
<i>Unit</i>	%
<i>Syntax</i>	Dim <i>Value</i> As Double <i>Value</i> = app.SCPI.DISPlay.WINDOW(<i>Ch</i>).TRACe(<i>Tr</i>).ANNotation.MARKer.POSition.Y <i>app.SCPI.DISPlay.WINDOW(Ch).TRACe(Tr).ANNotation.MARKer.POSition.Y</i> = 50
<i>Equivalent Softkeys</i>	Markers > Properties > Data Y Position

SCPI.DISPlay.WINDOW(*Ch*).TRACe(*Tr*).MEMORY. STATE

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Boolean
<i>Target</i>	Trace <i>Tr</i> of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Tr</i> : trace number 1–16 (see Table 3 on page 36)
<i>Description</i>	The ON/OFF state of the memory trace display.
<i>Allowable Values</i>	True: Memory trace display ON False: Memory trace display OFF

<i>Preset Value</i>	False
<i>Notes</i>	If the memory is empty, an error occurs and the object is ignored.
<i>Syntax</i>	<p>Dim <i>Status</i> As Boolean</p> <p><i>Status</i> = app.SCPI.DISPlay.WINDoW(<i>Ch</i>).TRACe(<i>Tr</i>).MEMory.STATE</p> <p>app.SCPI.DISPlay.WINDoW(<i>Ch</i>).TRACe(<i>Tr</i>).MEMory.STATE = true</p>
<i>Equivalent Softkeys</i>	<p>Display > Display > Memory Data & Memory (ON)</p> <p>Display > Display > Data OFF (OFF)</p>

SCPI.DISPlay.WINDoW(*Ch*).TRACe(*Tr*).STATE

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Boolean
<i>Target</i>	<p>Trace <i>Tr</i> of channel <i>Ch</i>,</p> <p><i>Ch</i>: channel number 1–16 (see Table 1 on page 25)</p> <p><i>Tr</i>: trace number 1–16 (see Table 3 on page 36)</p>
<i>Description</i>	The ON/OFF state of the data trace display.
<i>Allowable Values</i>	<p>True: Data trace display ON</p> <p>False: Data trace display OFF</p>
<i>Preset Value</i>	True
<i>Syntax</i>	<p>Dim <i>Status</i> As Boolean</p> <p><i>Status</i> = app.SCPI.DISPlay.WINDoW(<i>Ch</i>).TRACe(<i>Tr</i>).STATE</p> <p>app.SCPI.DISPlay.WINDoW(<i>Ch</i>).TRACe(<i>Tr</i>).STATE = false</p>
<i>Equivalent Softkeys</i>	<p>Display > Display > Data Data & Memory (ON)</p> <p>Display > Display > Memory OFF (OFF)</p>

SCPI.DISPlay.WINDoW(*Ch*).TRACe(*Tr*).Y.SCALE.AUTO

<i>Object Type</i>	Method
--------------------	--------

<i>Target</i>	Trace <i>Tr</i> of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Tr</i> : trace number 1–16 (see Table 3 on page 36)
<i>Description</i>	Executes the auto scale function for the trace.
<i>Syntax</i>	<i>app.SCPI.DISPlay.WINDOW(Ch).TRACe(Tr).Y.SCALE.AUTO</i>
<i>Equivalent Softkeys</i>	Scale > Auto Scale

SCPI.DISPlay.WINDOW(*Ch*).TRACe(*Tr*).Y.SCALE.PDIVision

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double
<i>Target</i>	Trace <i>Tr</i> of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Tr</i> : trace number 1–16 (see Table 3 on page 36)
<i>Description</i>	The trace scale. Sets the scale per division, when the data format is the rectangular format. Sets the full scale value, when the data format is the Smith chart format or the polar format.
<i>Range</i>	from 10E–18 to 1E18
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	Varies depending on the format. Logarithmic Magnitude: 10 dB/Div Phase: 40 °/Div Expand Phase: 100 °/Div Group Delay: 10e–9 s/Div Smith Chart, Polar, SWR: 1 /Div Linear Magnitude: 0.1 /Div Real part, Imaginary part: 0.2 /Div
<i>Unit</i>	dB/Div (decibel per division), °/Div (degree per division), s/Div (second per division)
<i>Syntax</i>	Dim <i>Value</i> As Double <i>Value</i> = <i>app.SCPI.DISPlay.WINDOW(Ch).TRACe(Tr).Y.SCALE.PDIVision</i> <i>app.SCPI.DISPlay.WINDOW(Ch).TRACe(Tr).Y.SCALE.PDIVision</i> = 20

<i>Equivalent Softkeys</i>	Scale > Scale
----------------------------	-------------------------

SCPI.DISPlay.WINDOW(*Ch*).TRACe(*Tr*).Y.SCALE.RLEVel

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double
<i>Target</i>	Trace <i>Tr</i> of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Tr</i> : trace number 1–16 (see Table 3 on page 36)
<i>Description</i>	The value of the reference line (response value on the reference line). For the rectangular format only.
<i>Range</i>	from –1E–18 to 1E18
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	0 (except for SWR: 1)
<i>Unit</i>	dB (decibel) ° (degree) s (second)
<i>Syntax</i>	Dim <i>Value</i> As Double <i>Value</i> = app.SCPI.DISPlay.WINDOW(<i>Ch</i>).TRACe(<i>Tr</i>).Y.SCALE.RLEVel <i>app.SCPI.DISPlay.WINDOW(<i>Ch</i>).TRACe(<i>Tr</i>).Y.SCALE.RLEVel</i> = 10
<i>Equivalent Softkeys</i>	Scale > Ref Value

SCPI.DISPlay.WINDOW(*Ch*).TRACe(*Tr*).Y.SCALE.RPOSITION

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Long
<i>Target</i>	Trace <i>Tr</i> of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Tr</i> : trace number 1–16 (see Table 3 on page 36)
<i>Description</i>	The position of the reference line. For the rectangular format only.

<i>Range</i>	From 0 to the number of the scale divisions (set by the SCPI.DISPlay.WINDOW(<i>Ch</i>).Y.SCALE.DIVisions property, 10 by default).
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	5 (except for SWR: 0)
<i>Syntax</i>	<p>Dim <i>Value</i> As Long</p> <p><i>Value</i> = app.SCPI.DISPlay.WINDOW(<i>Ch</i>).TRACe(<i>Tr</i>).Y.SCALE.RPOSITION</p> <p>app.SCPI.DISPlay.WINDOW(<i>Ch</i>).TRACe(<i>Tr</i>).Y.SCALE.RPOSITION = 10</p>
<i>Equivalent Softkeys</i>	Scale > Ref Position

SCPI.DISPlay.WINDOW(*Ch*).X.SPACing

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	String
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25).
<i>Description</i>	The selection of the display method of the graph horizontal axis for the segment sweep.
<i>Range</i>	<p>"LINear" : Frequency base (linear frequency axis)</p> <p>"OBAS" : Order base (linear axis of the point numbers)</p>
<i>Notes</i>	The short format of the parameter is indicated by upper case letters. There is no distinction between upper and lower case letters when the property is written. When the property is read out, the short format is indicated by upper case letters.
<i>Out of Range</i>	The value is ignored.
<i>Preset Value</i>	"LIN"
<i>Syntax</i>	<p>Dim <i>Param</i> As String</p> <p><i>Param</i> = app.SCPI.DISPlay.WINDOW(<i>Ch</i>).X.SPACing</p> <p>app.SCPI.DISPlay.WINDOW(<i>Ch</i>).X.SPACing = "OBAS"</p>
<i>Equivalent Softkeys</i>	Stimulus > Segment Table > Segment Display

SCPI.DISPlay.WINDOW(*Ch*).Y.SCALE.DIVisions

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Long
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25).
<i>Description</i>	The number of the vertical scale divisions. For the rectangular format only.
<i>Range</i>	from 4 to 30
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	10
<i>Resolution</i>	2
<i>Syntax</i>	<p>Dim <i>Value</i> As Long</p> <p><i>Value</i> = app.SCPI.DISPlay.WINDOW(<i>Ch</i>).Y.SCALE.DIVisions</p> <p>app.SCPI.DISPlay.WINDOW(<i>Ch</i>).Y.SCALE.DIVisions = 12</p>
<i>Equivalent Softkeys</i>	Scale > Divisions

SCPI.HCOPy.ABORT

<i>Object Type</i>	Method
<i>Target</i>	Instrument
<i>Description</i>	Aborts the printout.
<i>Syntax</i>	app.SCPI.HCOPy.ABORT
<i>Equivalent Softkeys</i>	None

SCPI.HCOPy.DATE.STAMp

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Boolean
<i>Target</i>	Instrument
<i>Description</i>	The ON/OFF state of the current date and time printout in the upper right corner.
<i>Allowable Values</i>	True: Date & time printout ON False: Date & time printout OFF
<i>Preset Value</i>	True
<i>Syntax</i>	<p>Dim <i>Status</i> As Boolean</p> <p><i>Status</i> = app.SCPI.HCOPy.DATE.STAMp</p> <p>app.SCPI.HCOPy.DATE.STAMp = False</p>
<i>Equivalent Softkeys</i>	System > Print > Print Date & Time

SCPI.HCOPy.IMAGE

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	String
<i>Target</i>	Instrument
<i>Description</i>	The inverted color image printout.
<i>Range</i>	<p>"NORMAl" : Normal printout</p> <p>"INVert" : Inverted color printout</p>
<i>Notes</i>	The short format of the parameter is indicated by upper case letters. There is no distinction between upper and lower case letters when the property is written. When the property is read out, the short format is indicated by upper case letters.
<i>Out of Range</i>	The value is ignored.

<i>Preset Value</i>	"NORM"
<i>Syntax</i>	<pre>Dim Param As String Param = app.SCPI.HCOPy.IMAGe app.SCPI.HCOPy.IMAGe = "INV"</pre>
<i>Equivalent Softkeys</i>	System > Print > Invert Image

SCPI.HCOPy.IMMEDIATE

<i>Object Type</i>	Method
<i>Target</i>	Instrument
<i>Description</i>	Prints out the image displayed on the screen without previewing.
<i>Syntax</i>	<code>app.SCPI.HCOPy.IMMEDIATE</code>
<i>Equivalent Softkeys</i>	System > Print > Print Embedded

SCPI.HCOPy.PAINT

<i>Object Type</i>	Property (read/write)									
<i>Data Type</i>	String									
<i>Target</i>	Instrument									
<i>Description</i>	The color chart for the image printout.									
<i>Range</i>	<table style="margin-left: 20px;"> <tr> <td>"COLOR"</td> <td>:</td> <td>Color printout</td> </tr> <tr> <td>"GRAY"</td> <td>:</td> <td>Grayscale printout</td> </tr> <tr> <td>"BW"</td> <td>:</td> <td>Black&white printout</td> </tr> </table>	"COLOR"	:	Color printout	"GRAY"	:	Grayscale printout	"BW"	:	Black&white printout
"COLOR"	:	Color printout								
"GRAY"	:	Grayscale printout								
"BW"	:	Black&white printout								
<i>Notes</i>	The short format of the parameter is indicated by upper case letters. There is no distinction between upper and lower case letters when the property is written. When the property is read out, the short format is indicated by upper case letters.									

<i>Out of Range</i>	The value is ignored.
<i>Preset Value</i>	"BW"
<i>Syntax</i>	<p>Dim <i>Param</i> As String <i>Param</i> = app.SCPI.HCOPy.PAINt <i>app.SCPI.HCOPy.PAINt</i> = "COL"</p>
<i>Equivalent Softkeys</i>	System > Print > Print Color

SCPI.IEEE4882.CLS

<i>Object Type</i>	Method
<i>Target</i>	Status Reporting System
<i>Description</i>	<p>Clears the following:</p> <ul style="list-style-type: none"> • Error Queue • Status Byte Register • Standard Event Status Register • Operation Status Event Register • Questionable Status Event Register • Questionable Limit Status Event Register • Questionable Limit Channel Status Event Register
<i>Syntax</i>	<i>app.SCPI.IEEE4882.CLS</i>
<i>Equivalent Softkeys</i>	None

SCPI.IEEE4882.IDN

<i>Object Type</i>	Property (read only)
<i>Data Type</i>	String
<i>Target</i>	Instrument
<i>Description</i>	The instrument information string. The string format: "{manufacturer}, {model}, {serial number}, {software version/firmware version}".

<i>Range</i>	up to 40 characters
<i>Syntax</i>	Dim <i>ID</i> As String <i>ID</i> = app.NAME
<i>Equivalent Softkeys</i>	None

SCPI.IEEE4882.OPC

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Long
<i>Target</i>	Status Reporting System
<i>Description</i>	<p>Read 1 when all pending operations are complete. Note: since COM server executes commands sequentially and any operation is complete before COM server returns control the OPC read command doesn't wait anything.</p> <p>Write form of the command sets 1 the OPC bit (bit 0) of the Standard Event Status Register when all of pending operations complete. In the COM programming this is dummy operation.</p>
<i>Syntax</i>	$Value = app.\text{SCPI.IEEE4882.OPC}$ $app.\text{SCPI.IEEE4882.OPC} = \text{Dummy}$
<i>Equivalent Softkeys</i>	None

SCPI.IEEE4882.RST

<i>Object Type</i>	Method
<i>Target</i>	Instrument
<i>Description</i>	Restores the default settings of the instrument. There is difference from presetting the instrument with the SCPI.SYSTem.PRESet method – in this case the trigger mode is set to <i>Hold</i> .
<i>Syntax</i>	$app.\text{SCPI.IEEE4882.RST}$
<i>Equivalent Softkeys</i>	None

SCPI.IEEE4882.TRG

<i>Object Type</i>	Method
<i>Target</i>	Instrument
<i>Description</i>	If the trigger source is set to GPIB/LAN (SCPI.TRIGger.SEQuence.SOURce property is set to "BUS"), triggers a sweep. If the trigger source is not set to the bus (SCPI.TRIGger.SEQuence.SOURce property is not set to "BUS") or the instrument is not waiting for a trigger, the method is ignored.
<i>Syntax</i>	<i>app.SCPI.IEEE4882.TRG</i>
<i>Related Commands</i>	SCPI.TRIGger.SEQuence.SOURce SCPI.INITiate(<i>Ch</i>).CONTinuous SCPI.INITiate(<i>Ch</i>).IMMEDIATE
<i>Equivalent Softkeys</i>	None

SCPI.IEEE4882.WAI

<i>Object Type</i>	Method
<i>Target</i>	Instrument
<i>Description</i>	Waits for the execution of all commands sent before this command. Note: since COM server executes commands sequentially and any operation is complete before COM server returns control the WAI command doesn't wait anything.
<i>Syntax</i>	<i>app.SCPI.IEEE4882.WAI</i>
<i>Equivalent Softkeys</i>	None

SCPI.INITiate(*Ch*).CONTinuous

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Boolean
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)

<i>Description</i>	The ON/OFF state of the continuous trigger initiation mode. If the continuous trigger initiation mode is set to OFF, the channel turns to the hold state.
<i>Allowable Values</i>	True: Continuous trigger initiation mode ON False: Continuous trigger initiation mode OFF
<i>Preset Value</i>	True
<i>Syntax</i>	Dim <i>Status</i> As Boolean <i>Status</i> = app.SCPI.INITiate(<i>Ch</i>).CONTinuous app.SCPI.INITiate(<i>Ch</i>).CONTinuous = False
<i>Notes</i>	The sweep start in continuous trigger initiation mode depends on the trigger source. If the trigger is set to internal, the sweeps will go immediately one after another. If the trigger is set otherwise, the sweep will start when the trigger signal is received.
<i>Equivalent Softkeys</i>	Stimulus > Trigger > Continuous Stimulus > Trigger > Hold

SCPI.INITiate(*Ch*).IMMEDIATE

<i>Object Type</i>	Method
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	Sets the channel to the single trigger mode. Before this method is called, the channel must be in hold state, otherwise an error occurs (error code 213) and the method is ignored. On completion of the sweep, the channel goes back into the hold state. The method returns control before the end of the sweep.
<i>Syntax</i>	app.SCPI.INITiate(<i>Ch</i>).IMMEDIATE
<i>Notes</i>	The sweep start in the single trigger mode depends on the trigger source. If the trigger is set to internal, the sweep will start immediately after the method is called. If the trigger is set otherwise, the sweep will start when the trigger signal is received.
<i>Equivalent Softkeys</i>	Stimulus > Trigger > Single

SCPI.MMEMORY.CATalog(*Dir*)

<i>Object Type</i>	Property (read only)
<i>Data Type</i>	String
<i>Description</i>	<p>This command reads out the following information on the hard drive:</p> <ul style="list-style-type: none"> • Space in use • Available space • Name and size of all files (including directories) in the specified directory <p>Format: ("{A},{B},{Name 1},,{Size 1},{Name 2},,{Size 2}, ... ,{Name N},,{Size N}")</p> <p>Where N is the number of all files in the specified directory and n is an integer between 1 and N.</p> <p>{A}: Space in use of the hard drive (byte). {B}: Available space of the hard drive (byte). {Name n}: Name of the n-th file (directory). {Size n}: Size (byte) of the n-th file (directory). Always 0 for directories.</p>
<i>Parameter</i>	<i>Dir</i> – Directory name whose information you want to read out
<i>Syntax</i>	<p><i>Dim Cat as String</i></p> <pre>Cat = app.SCPI.MMEMORY.CATalog("\.")</pre>
<i>Equivalent Softkeys</i>	None

SCPI.MMEMORY.COPY(*Src*, *Dst*)

<i>Object Type</i>	Method
<i>Target</i>	Instrument
<i>Description</i>	Copies a file.
<i>Syntax</i>	<i>app.SCPI.MMEMORY.COPY(<i>Src</i>, <i>Dst</i>)</i>
<i>Parameter</i>	<i>Src</i> – Source file name. String data type. <i>Dst</i> – Destination file name. String data type.
<i>Equivalent Softkeys</i>	None

SCPI.MMEMORY.DELETE(*File*)

<i>Object Type</i>	Method
<i>Target</i>	Instrument
<i>Description</i>	Deletes a file.
<i>Syntax</i>	<i>app.SCPI.MMEMORY.DELETE(<i>File</i>)</i>
<i>Parameter</i>	<i>File</i> – File name. String data type.
<i>Equivalent Softkeys</i>	None

SCPI.MMEMORY.LOAD.CHANNEL.STATE

<i>Object Type</i>	Property (write only)
--------------------	-----------------------

<i>Data Type</i>	String
<i>Target</i>	Active channel
<i>Description</i>	Recalls the instrument state for the active channel, saved in one of the four memory registers by the SCPI.MMEMORY.STORE.CHANNEL.STATE property.
<i>Range</i>	"A" : Recall from register A "B" : Recall from register B "C" : Recall from register C "D" : Recall from register D
<i>Out of Range</i>	The value is ignored.
<i>Syntax</i>	<i>app.SCPI.MMEMORY.LOAD.CHANNEL.STATE = "A"</i>
<i>Equivalent Softkeys</i>	Save/Recall > Recall Channel > State A B C D

SCPI.MMEMORY.LOAD.CKIT(Ck)

<i>Object Type</i>	Property (write only)
<i>Data Type</i>	String
<i>Target</i>	Calibration kit Ck, Ck: calibration kit number 1–11 (see Table 6 on page 179)
<i>Description</i>	Recalls the definition file for the calibration kit. The file must be saved by the SCPI.MMEMORY.STORE.CKIT(Ck) property.
<i>Range</i>	up to 254 characters
<i>Syntax</i>	<i>app.SCPI.MMEMORY.LOAD.CKIT(Ck) = File</i>
<i>Notes</i>	If the full path to the file is not specified, the <i>\CalKit</i> subdirectory of the main directory will be searched for the file. The calibration kit definition file has <i>*.ckd</i> extension by default.
<i>Equivalent Softkeys</i>	None

Table 6. Ck: Calibration Kit Number

<i>Data Type</i>	Long
<i>Description</i>	Calibration kit number.
<i>Range</i>	from 1 to 11
<i>Out of Range</i>	An error occurs. Error code: 114.
<i>Notes</i>	If the calibration kit number is not specified, it is taken as equal to 1.

SCPI.MMEMORY.LOAD.LIMit

<i>Object Type</i>	Property (write only)
<i>Data Type</i>	String
<i>Target</i>	Active trace of the active channel.
<i>Description</i>	Recalls the specified limit table file. The file must be saved by the SCPI.MMEMORY.STORE.LIMit property.
<i>Range</i>	up to 254 characters
<i>Syntax</i>	<i>app.SCPI.MMEMORY.LOAD.LIMit = File</i>
<i>Notes</i>	If the full path to the file is not specified, the <i>\Limit</i> subdirectory of the main directory will be searched for the file. The limit table files have <i>*.lim</i> extension by default.
<i>Equivalent Softkeys</i>	Analysis > Limit Test > Edit Limit Line > Restore Limit Table

SCPI.MMEMORY.LOAD.PLOSS(Pt)

<i>Object Type</i>	Property (write only)
<i>Data Type</i>	String

<i>Target</i>	Port Pt of the active channel, Pt : port number 1–2 (see Table 2 on page 25).
<i>Description</i>	Recalls the specified loss compensation table file. The file must be saved by the SCPI.MMEMory.STORe.PLOSS(Pt) property.
<i>Range</i>	up to 254 characters
<i>Syntax</i>	$app.SCPI.MMEMory.LOAD.PLOSS(Pt) = File$
<i>Notes</i>	If the full path to the file is not specified, the \CalKit subdirectory of the main directory will be searched for the file. The loss compensation file has *.lct extension by default.
<i>Equivalent Softkeys</i>	Calibration > Power Calibration > Loss Compen > Import Loss Table

SCPI.MMEMory.LOAD.RLIMit

<i>Object Type</i>	Property (write only)
<i>Data Type</i>	String
<i>Target</i>	Active trace of the active channel.
<i>Description</i>	Recalls the ripple limit table file. The file must be saved by the SCPI.MMEMory.STORe.RLIMit property.
<i>Range</i>	up to 254 characters
<i>Syntax</i>	$app.SCPI.MMEMory.LOAD.RLIMit = File$
<i>Notes</i>	If the full path to the file is not specified, the \Limit subdirectory of the main directory will be searched for the file. The ripple limit files have *.rlm extension by default.
<i>Equivalent Softkeys</i>	Analysis > Ripple Limit > Edit Ripple Limit > Restore Ripple Limit Table

SCPI.MMEMory.LOAD.SEGMent

<i>Object Type</i>	Property (write only)
<i>Data Type</i>	String

<i>Target</i>	Active channel
<i>Description</i>	Recalls the segment table file. The file must be saved by the SCPI.MMEMORY.STORE.SEGMENT property.
<i>Range</i>	up to 254 characters
<i>Syntax</i>	<i>app</i> .SCPI.MMEMORY.LOAD.SEGMENT = <i>File</i>
<i>Notes</i>	If the full path to the file is not specified, the \Segment subdirectory of the main directory will be searched for the file. The segment files have *.seg extension by default.
<i>Equivalent Softkeys</i>	Stimulus > Segment Table > Recall...

SCPI.MMEMORY.LOAD.SNP.DATA

<i>Object Type</i>	Property (write only)
<i>Data Type</i>	String
<i>Target</i>	Active channel
<i>Description</i>	Loads the Touchstone file with the specified name to the measured S-parameters of the active channel. The Touchstone file types s1p, s2p, s3p and s4p are supported. On completion of the command, the channel goes to the hold state.
<i>Range</i>	up to 254 characters
<i>Syntax</i>	<i>app.SCPI.MMEMORY.LOAD.SNP.DATA = File</i>
<i>Equivalent Softkeys</i>	Save/Recall > Load Data From Touchstone File > To S-parameters...

SCPI.MMEMORY.LOAD.SNP.TRACe(*Tr*).MMEMORY

<i>Object Type</i>	Property (write only)
<i>Data Type</i>	String
<i>Target</i>	The specified memory trace <i>Tr</i> of active channel, <i>Tr</i> : trace number 1–16 (see Table 3 on page 36) Active channel set by command SCPI.DISPlay.WINDow(Ch).ACTivate
<i>Description</i>	Loads the Touchstone file with the specified name to the memory trace. The Touchstone file types s1p, s2p, s3p and s4p are supported. After successful load the display of memory trace is automatically switched on.
<i>Range</i>	up to 254 characters
<i>Syntax</i>	<i>app.SCPI.MMEMORY.LOAD.SNP.TRACe(Tr).MMEMORY = File</i>
<i>Equivalent Softkeys</i>	Save/Recall > Load Data From Touchstone File > To Active Trace...

SCPI.MMEMORY.LOAD.STATE

<i>Object Type</i>	Property (write only)
<i>Data Type</i>	String
<i>Target</i>	Instrument
<i>Description</i>	Recalls the specified instrument state file. The file must be saved by the SCPI.MMEMORY.STORE.STATE property.
<i>Range</i>	up to 254 characters
<i>Syntax</i>	<i>app.SCPI.MMEMORY.LOAD.STATE = File</i>
<i>Notes</i>	If the full path to the file is not specified, the \State subdirectory of the main directory will be searched for the file. The instrument state files have *.sta extension by default.
<i>Equivalent Softkeys</i>	Save/Recall > Recall State > State...

SCPI.MMEMORY.MDIRECTORY

<i>Object Type</i>	Property (write only)
<i>Data Type</i>	String
<i>Target</i>	Instrument
<i>Description</i>	Creates a new directory (folder). Contains the full path to the folder being created.
<i>Range</i>	up to 254 characters
<i>Syntax</i>	<i>app.SCPI.MMEMORY.MDIRECTORY = Path</i>
<i>Equivalent Softkeys</i>	None

SCPI.MMEMORY.STORE.CHANNEL.CLEAR

<i>Object Type</i>	Method
<i>Target</i>	Instrument
<i>Description</i>	Clears the memory of the channel state saved by the SCPI.MMEMORY.STORE.CHANNEL.STATE property.
<i>Syntax</i>	<i>app.SCPI.MMEMORY.STORE.CHANNEL.CLEAR</i>
<i>Equivalent Softkeys</i>	Save/Recall > Save Channel > Clear States

SCPI.MMEMORY.STORE.CHANNEL.STATE

<i>Object Type</i>	Property (write only)
<i>Data Type</i>	String
<i>Target</i>	Active channel
<i>Description</i>	Saves the instrument state of the items set for the active channel into one of the four memory registers.
<i>Range</i>	"A" : Save to register A "B" : Save to register B "C" : Save to register C "D" : Save to register D
<i>Out of Range</i>	The value is ignored.
<i>Syntax</i>	<i>app.SCPI.MMEMORY.STORE.CHANNEL.STATE = "A"</i>
<i>Equivalent Softkeys</i>	Save/Recall > Save Channel > State A B C D

SCPI.MMEMORY.STORE.CKIT(Ck)

<i>Object Type</i>	Property (write only)
<i>Data Type</i>	String
<i>Target</i>	Calibration kit Ck, Ck: calibration kit number 1–11 (see Table 6 on page 179)
<i>Description</i>	Saves the definition file for the calibration kit parameters.
<i>Range</i>	up to 254 characters
<i>Syntax</i>	<i>app.SCPI.MMEMORY.STORE.CKIT(Ck) = File</i>

<i>Notes</i>	If the full path to the file is not specified, the file will be saved to the <code>\CalKit</code> subdirectory of the main directory. The calibration kit definition file has <code>*.ckd</code> extension by default.
<i>Equivalent Softkeys</i>	None

SCPI.MMEMORY.STORE.FDATA

<i>Object Type</i>	Property (write only)
<i>Data Type</i>	String
<i>Target</i>	Active trace of the active channel
<i>Description</i>	Saves the CSV formatted data into a file.
<i>Range</i>	up to 254 characters
<i>Syntax</i>	<code>app.SCPI.MMEMORY.STORE.FDATA = File</code>
<i>Notes</i>	If the full path to the file is not specified, the file will be saved to the <code>\CSV</code> subdirectory of the main directory. The files have <code>*.csv</code> extension by default.
<i>Equivalent Softkeys</i>	Save/Recall > Save Trace Data

SCPI.MMEMORY.STORE.IMAGE

<i>Object Type</i>	Property (write only)
<i>Data Type</i>	String
<i>Target</i>	Instrument
<i>Description</i>	Saves the display image in BMP or PNG format into a file.
<i>Range</i>	up to 254 characters
<i>Syntax</i>	<code>app.SCPI.MMEMORY.STORE.IMAGE = File</code>
<i>Notes</i>	If the full path to the file is not specified, the file will be saved to the <code>\Image</code> subdirectory of the main directory. If the file has <code>*.png</code> extension, the file has PNG format, in all the other cases the file has BMP format.

<i>Equivalent Softkeys</i>	System > Print > Print Windows > Save as...
----------------------------	-------------------------------------------------------------

SCPI.MMEMORY.STORE.LIMIT

<i>Object Type</i>	Property (write only)
<i>Data Type</i>	String
<i>Target</i>	Active trace of the active channel
<i>Description</i>	Saves the limit table into a file with the specified name.
<i>Range</i>	up to 254 characters
<i>Syntax</i>	<i>app.SCPI.MMEMORY.STORE.LIMIT = File</i>
<i>Notes</i>	If the full path to the file is not specified, the file will be saved to the <i>\Limit</i> subdirectory of the main directory. The files have <i>*.lim</i> extension by default.
<i>Equivalent Softkeys</i>	Analysis > Limit Test > Edit Limit Line > Save Limit Table

SCPI.MMEMORY.STORE.PLOSS(Pt)

<i>Object Type</i>	Property (write only)
<i>Data Type</i>	String
<i>Target</i>	Port <i>Pt</i> of the active channel, <i>Pt:</i> port number 1–4 (see Table 2 on page 25)
<i>Description</i>	Saves the loss compensation table into a file with the specified name.
<i>Range</i>	up to 254 characters
<i>Syntax</i>	<i>app.SCPI.MMEMORY.STORE.PLOSS(Pt) = File</i>
<i>Notes</i>	If the full path to the file is not specified, the file will be saved to the <i>\CalKit</i> subdirectory of the main directory. The loss compensation files have <i>*.lct</i> extension by default.

<i>Equivalent Softkeys</i>	Calibration > Power Calibration > Loss Compen > Export Loss Table
----------------------------	-----------------------------------------------------------------------------------

SCPI.MMEMORY.STORE.RLIMIT

<i>Object Type</i>	Property (write only)
<i>Data Type</i>	String
<i>Target</i>	Active trace of the active channel
<i>Description</i>	Saves the ripple limit table into a file with the specified name.
<i>Range</i>	up to 254 characters
<i>Syntax</i>	<i>app.SCPI.MMEMORY.STORE.RLIMIT = File</i>
<i>Notes</i>	If the full path to the file is not specified, the file will be saved to the \Limit subdirectory of the main directory. The ripple limit files have *.rlm extension by default.
<i>Equivalent Softkeys</i>	Analysis > Ripple Limit > Edit Ripple Limit > Save Ripple Limit Table

SCPI.MMEMORY.STORE.SEGMENT

<i>Object Type</i>	Property (write only)
<i>Data Type</i>	String
<i>Target</i>	Active channel
<i>Description</i>	Saves the segment table in a file with the specified name.
<i>Range</i>	up to 254 characters
<i>Syntax</i>	<i>app.SCPI.MMEMORY.STORE.SEGMENT = File</i>
<i>Notes</i>	If the full path to the file is not specified, the file will be saved to the \Segment subdirectory of the main directory. The segment files have *.seg extension by default.

<i>Equivalent Softkeys</i>	Stimulus > Segment Table > Save...
----------------------------	-------------------------------------------------

SCPI.MMEMORY.STORE.SNP.DATA

<i>Object Type</i>	Property (write only)
<i>Data Type</i>	String
<i>Target</i>	Active channel
<i>Description</i>	Saves the measured S-parameters of the active channel into a Touchstone file with the specified name. The file type (s1p, s2p, s3p or s4p) is set by the SCPI.MMEMORY.STORE.SNP.TYPE.S1P to SCPI.MMEMORY.STORE.SNP.TYPE.S4P properties.
<i>Range</i>	up to 254 characters
<i>Syntax</i>	<i>app.SCPI.MMEMORY.STORE.SNP.DATA = File</i>
<i>Notes</i>	If the full path to the file is not specified, the file will be saved to the \FixtureSim subdirectory of the main directory.
<i>Equivalent Softkeys</i>	Save/Recall > Save Data to Touchstone File > Save File...

SCPI.MMEMORY.STORE.SNP.FORMAT

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	String
<i>Target</i>	Active channel
<i>Description</i>	The data format for the S-parameters saving by the SCPI.MMEMORY.STORE.SNP.DATA property.
<i>Range</i>	" MA" : Logarithmic Magnitude / Angle format " DB" : Linear Magnitude / Angle format " RI" : Real part /Imaginary part format
<i>Out of Range</i>	The value is ignored.

<i>Preset Value</i>	"RI"
<i>Syntax</i>	<p>Dim <i>Param</i> As String <i>Param</i> = app.SCPI.MMEMory.STORe.SNP.FORMat <i>app.SCPI.MMEMory.STORe.SNP.FORMat</i> = "DB"</p>
<i>Equivalent Softkeys</i>	Save/Recall > Save Data to Touchstone File > Format

SCPI.MMEMORY.STORe.SNP.TYPE.S1P

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Long
<i>Target</i>	Active channel
<i>Description</i>	Selects s1p save type and sets port numbers (selects S11, S22, S33 or S44 parameter) when saving the measured S-parameters by the SCPI.MMEMORY.STORe.SNP.DATA property.
<i>Range</i>	from 1 to 4
<i>Out of Range</i>	An error occurs. Error code 222.
<i>Preset Value</i>	1
<i>Syntax</i>	<p>Dim <i>Value</i> As Long <i>Value</i> = app.SCPI.MMEMORY.STORe.SNP.TYPE.S1P <i>app.SCPI.MMEMORY.STORe.SNP.TYPE.S1P</i> = 2</p>
<i>Equivalent Softkeys</i>	Save/Recall > Save Data to Touchstone File > Type > 1-Port (s1p) Save/Recall > Save Data to Touchstone File > Select Port (s1p)

SCPI.MMEMORY.STORe.SNP.TYPE.S2P

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Variant (array of long)

<i>Target</i>	Active channel
<i>Description</i>	Selects s2p save type and sets port numbers when saving the measured S-parameters by the SCPI.MMEMory.STORe.SNP.DATA property. The array contains 2 elements: <i>Data(0)</i> First port number; <i>Data(1)</i> Second port number.
<i>Syntax</i>	Dim <i>Data</i> As Variant <i>Data</i> = app.SCPI.MMEMory.STORe.SNP.TYPE.S2P app.SCPI.MMEMory.STORe.SNP.TYPE.S2P = Array(1, 2)
<i>Equivalent Softkeys</i>	Save/Recall > Save Data to Touchstone File > Type > 2-Port (s2p) Save/Recall > Save Data to Touchstone File > Select Ports (s2p)

SCPI.MMEMORY.STORE.SNP.TYPE.S3P

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Variant (array of long)
<i>Target</i>	Active channel
<i>Description</i>	Selects s3p save type and sets port numbers when saving the measured S-parameters by the SCPI.MMEMORY.STORE.SNP.DATA property. The array contains 3 elements: $Data(0)$ First port number; $Data(1)$ Second port number; $Data(2)$ Third port number.
<i>Syntax</i>	Dim <i>Data</i> As Variant <i>Data</i> = app.SCPI.MMEMORY.STORE.SNP.TYPE.S3P <i>app.SCPI.MMEMORY.STORE.SNP.TYPE.S3P</i> = Array(1, 2, 3)
<i>Equivalent Softkeys</i>	Save/Recall > Save Data to Touchstone File > Type > 2-Port (s3p) Save/Recall > Save Data to Touchstone File > Select Ports (s3p)

SCPI.MMEMORY.STORE.SNP.TYPE.S4P

<i>Object Type</i>	Property (read/write)								
<i>Data Type</i>	Variant (array of long)								
<i>Target</i>	Active channel								
<i>Description</i>	<p>Selects s4p save type and sets port numbers when saving the measured S-parameters by the SCPI.MMEMORY.STORE.SNP.DATA property.</p> <p>The array contains 3 elements:</p> <table style="margin-left: 40px;"> <tr><td><i>Data(0)</i></td><td>First port number;</td></tr> <tr><td><i>Data(1)</i></td><td>Second port number;</td></tr> <tr><td><i>Data(2)</i></td><td>Third port number;</td></tr> <tr><td><i>Data(3)</i></td><td>Forth port number.</td></tr> </table>	<i>Data(0)</i>	First port number;	<i>Data(1)</i>	Second port number;	<i>Data(2)</i>	Third port number;	<i>Data(3)</i>	Forth port number.
<i>Data(0)</i>	First port number;								
<i>Data(1)</i>	Second port number;								
<i>Data(2)</i>	Third port number;								
<i>Data(3)</i>	Forth port number.								
<i>Syntax</i>	<pre>Dim Data As Variant Data = app.SCPI.MMEMORY.STORE.SNP.TYPE.S4P app.SCPI.MMEMORY.STORE.SNP.TYPE.S4P = Array(1, 2, 3, 4)</pre>								
<i>Equivalent Softkeys</i>	Save/Recall > Save Data to Touchstone File > Type > 2-Port (s4p)								

SCPI.MMEMORY.STORE.STATE

<i>Object Type</i>	Property (write only)
<i>Data Type</i>	String
<i>Target</i>	Instrument
<i>Description</i>	Saves the instrument state into a file with the specified name.
<i>Range</i>	up to 254 characters
<i>Syntax</i>	<i>app.SCPI.MMEMORY.STORE.STATE = File</i>

<i>Notes</i>	If the full path to the file is not specified, the file will be saved to the \State subdirectory of the main directory. The state files have *.sta extension by default.
<i>Equivalent Softkeys</i>	Save/Recall > Save State > State...

SCPI.MMEMORY.STORE.STYPE

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	String
<i>Target</i>	Instrument
<i>Description</i>	Selects the type of the instrument or channel state saving by the SCPI.MMEMORY.STORE.STATE or SCPI.MMEMORY.STORE.CHANNEL.STATE property.
<i>Range</i>	"STATE" : Measurement conditions "CState" : Measurement conditions and calibration tables "DState" : Measurement conditions and data traces "CDState" : Measurement conditions, calibration tables and data traces
<i>Notes</i>	The short format of the parameter is indicated by upper case letters. There is no distinction between upper and lower case letters when the property is written. When the property is read out, the short format is indicated by upper case letters.
<i>Out of Range</i>	An error occurs. Error code 205.
<i>Preset Value</i>	"CST"
<i>Syntax</i>	<pre>Dim Param As String Param = app.SCPI.MMEMORY.STORE.STYPE app.SCPI.MMEMORY.STORE.STYPE = "STATE"</pre>
<i>Equivalent Softkeys</i>	Save/Recall > Save Type

SCPI.OUTPUT.STATE

<i>Object Type</i>	Property (read/write)
--------------------	-----------------------

<i>Data Type</i>	Boolean
<i>Target</i>	Instrument
<i>Description</i>	Sets the ON/OFF state of the stimulus signal output. Measurements cannot be performed when the stimulus signal output is set to OFF.
<i>Allowable Values</i>	True: Stimulus signal output ON False: Stimulus signal output OFF
<i>Preset Value</i>	True
<i>Syntax</i>	<i>Dim Status As Boolean</i> <i>Status = app.SCPI.OUTPUT.STATE</i> <i>app.SCPI.OUTPUT.STATE = False</i>
<i>Equivalent Softkeys</i>	Stimulus > Power > RF Out

SCPI.SENSe(*Ch*).AVERage.CLEar

<i>Object Type</i>	Method
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	Resets the averaging data count to 0. Restarts the averaging process.
<i>Syntax</i>	<i>app.SCPI.SENSe(Ch).AVERage.CLEar</i>
<i>Equivalent Softkeys</i>	None

SCPI.SENSe(*Ch*).AVERage.COUNT

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Long
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The averaging factor, when the averaging function is set to ON by the SCPI.SENSe(<i>Ch</i>).AVERage.STATE property.

<i>Range</i>	from 1 to 999
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	10
<i>Syntax</i>	<p>Dim <i>Value</i> As Long</p> <p><i>Value</i> = app.SCPI.SENSe(<i>Ch</i>).AVERage.COUNt</p> <p>app.SCPI.SENSe(<i>Ch</i>).AVERage.COUNt = 2</p>
<i>Equivalent Softkeys</i>	Average > Avg Factor

SCPI.SENSe(*Ch*).AVERage.STATE

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Boolean
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The ON/OFF state of the averaging function.
<i>Allowable Values</i>	True: Averaging ON False: Averaging OFF
<i>Preset Value</i>	False
<i>Syntax</i>	<p>Dim <i>Status</i> As Boolean</p> <p><i>Status</i> = app.SCPI.SENSe(<i>Ch</i>).AVERage.STATE</p> <p>app.SCPI.SENSe(<i>Ch</i>).AVERage.STATE = False</p>
<i>Equivalent Softkeys</i>	Average > Averaging

SCPI.SENSe(*Ch*).BANDwidth.RESolution

<i>Object Type</i>	Property (read/write)
--------------------	-----------------------

<i>Data Type</i>	Double
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The IF bandwidth value.
<i>Range</i>	from 1 to 30000
<i>Resolution</i>	In steps of 1, 1.5, 2, 3, 5, 7.
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	10000
<i>Unit</i>	Hz (Hertz)
<i>Syntax</i>	Dim <i>Value</i> As Double <i>Value</i> = app.SCPI.SENSe(<i>Ch</i>).BANDwidth.RESolution <i>app.SCPI.SENSe(Ch).BANDwidth.RESolution</i> = 100
<i>Equivalent Softkeys</i>	Average > IF Bandwidth

SCPI.SENSe(*Ch*).CORRection.CLEar

<i>Object Type</i>	Method
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	Clears the calibration coefficient table.
<i>Syntax</i>	<i>app.SCPI.SENSe(Ch).CORRection.CLEAR</i>
<i>Equivalent Softkeys</i>	None

SCPI.SENSe(*Ch*).CORRection.COEfficient.DATA(*Str*, *Pt_r*, *Pt_s*)

<i>Object Type</i>	Property (read/write)
--------------------	-----------------------

<i>Data Type</i>	Variant (array of double)
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	<p>The calibration coefficient data array set by the type of the corrected error <i>Str</i>, the number of the receiver port <i>Pt_r</i> and the number of the source port <i>Pt_s</i>,</p> <p><i>Str</i> : error type (see below) <i>Pt_r</i> : the number of the receiver port 1–4 (see Table 2 on page 25) <i>Pt_s</i> : the number of the source port 1–4 (see Table 2 on page 25)</p> <p>The array size is 2N, where N is the number of measurement points.</p> <p>For the n-th point, where n from 1 to N:</p> <p style="padding-left: 40px;"><i>Data</i>(2n–2) real part of the calibration coefficients <i>Data</i>(2n–1) imaginary part of the calibration coefficients</p>
<i>Parameter</i>	<p>String <i>Str</i> – corrected error type: "ES": Source match "ER": Reflection tracking "ED": Directivity "EL": Load match "ET": Transmission tracking "EX": Isolation</p> <p>When ES, ER, or ED is used, the numbers of the ports <i>Pt_r</i> and <i>Pt_s</i> must be the same. When EL, ET, or EX is used, the numbers of the ports <i>Pt_r</i> and <i>Pt_s</i> must be different.</p>
<i>Syntax</i>	<p>Dim <i>Data</i> As Variant</p> <pre>Data = app.SCPI.SENSe(<i>Ch</i>).CORRection.COEFficient.DATA (<i>Str</i>, <i>Pt_r</i>, <i>Pt_s</i>) app.SCPI.SENSe(<i>Ch</i>).CORRection.COEFficient.DATA (<i>Str</i>, <i>Pt_r</i>, <i>Pt_s</i>) = <i>Data</i></pre>
<i>Notes</i>	The written calibration coefficients become effective only after the SCPI.SENSe(<i>Ch</i>).CORRection.COEFficient.SAVE method is invoked.
<i>Equivalent Softkeys</i>	None

SCPI.SENSe(Ch).CORRection.COEfficient.METHOD.ERESponse

<i>Object Type</i>	Property (write only)
<i>Data Type</i>	Variant (array of long)
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	Selects the port numbers and sets the <i>1-path 2-port calibration</i> type, when the written calibration coefficients are made effective by the SCPI.SENSe(Ch).CORRection.COEfficient.SAVE method. The array contains 2 elements: <i>Data(0)</i> the number of the receiver port; <i>Data(1)</i> the number of the source port.
<i>Range</i>	Port number is 1 to 4. Array elements can not contain the same port numbers.
<i>Out of Range</i>	If an incorrect port number is specified, an error occurs (error code: 222). If the same port numbers are specified, an error occurs (error code: 220).
<i>Syntax</i>	Dim Ports As Variant Ports = Array(2, 1) <i>app.SCPI.SENSe(Ch).CORRection.COEfficient.METHOD.ERESponse = Ports</i>
<i>Equivalent Softkeys</i>	None

SCPI.SENSe(*Ch*).CORRection.COEfficient.METHOD.RESPonse.OPEN

<i>Object Type</i>	Property (write only)
<i>Data Type</i>	Long
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	Selects the port and sets the <i>response calibration (Open)</i> type, when the written calibration coefficients are made effective by the SCPI.SENSe(Ch).CORRection.COEfficient.SAVE method.

<i>Range</i>	from 1 to 4
<i>Out of Range</i>	An error occurs. Error code: 222.
<i>Syntax</i>	Dim Port As Long $Port = 1$ $app.SCPI.SENSe(Ch).CORRection.COEFFficient.METHod.RESPonse.OPEN = Port$
<i>Equivalent Softkeys</i>	None

SCPI.SENSe(*Ch*).CORRection.COEFFficient.METHod.RESPonse.SHOrt

<i>Object Type</i>	Property (write only)
<i>Data Type</i>	Long
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	Selects the port and sets the <i>response calibration (Short)</i> type, when the written calibration coefficients are made effective by the SCPI.SENSe(<i>Ch</i>).CORRection.COEFFficient.SAVE method.
<i>Range</i>	from 1 to 4
<i>Out of Range</i>	An error occurs. Error code: 222.
<i>Syntax</i>	Dim Port As Long $Port = 1$ $app.SCPI.SENSe(Ch).CORRection.COEFFficient.METHod.RESPonse.SHOrt = Port$
<i>Equivalent Softkeys</i>	None

SCPI.SENSe(*Ch*).CORRection.COEFFficient.METHod.RESPonse.THRU

<i>Object Type</i>	Property (write only)
<i>Data Type</i>	Variant (array of long)

<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	Selects the ports and sets the <i>response calibration (Thru)</i> type, when the written calibration coefficients are made effective by the SCPI.SENSe(<i>Ch</i>).CORRection.COEFficient.SAVE method. The array contains 2 elements: <i>Data(0)</i> the number of the receiver port; <i>Data(1)</i> the number of the source port.
<i>Range</i>	Port number is 1 to 4. The array elements can not contain the same port numbers.
<i>Out of Range</i>	If an incorrect port number is specified, an error occurs (error code: 222). If the same port numbers are specified, an error occurs (error code: 220).
<i>Syntax</i>	Dim <i>Ports</i> As Variant <i>Ports</i> = Array(2, 1) <i>app</i> .SCPI.SENSe(<i>Ch</i>).CORRection.COEFficient.METHod.RESPonse.THRU = <i>Ports</i>
<i>Equivalent Softkeys</i>	None

SCPI.SENSe(*Ch*).CORRection.COEFficient.METHod.SOLT1

<i>Object Type</i>	Property (write only)
<i>Data Type</i>	Long
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	Selects the port and sets the <i>full 1-port calibration</i> type, when the written calibration coefficients are made effective by the SCPI.SENSe(<i>Ch</i>).CORRection.COEFficient.SAVE method.
<i>Range</i>	from 1 to 4
<i>Out of Range</i>	An error occurs. Error code: 222.
<i>Syntax</i>	Dim <i>Port</i> As Long <i>Port</i> = 1 <i>app</i> .SCPI.SENSe(<i>Ch</i>).CORRection.COEFficient.METHod.SOLT1= <i>Port</i>

<i>Equivalent Softkeys</i>	None
----------------------------	-------------

SCPI.SENSe(*Ch*).CORRection.COEFficient.METHod.SOLT2

<i>Object Type</i>	Property (write only)
<i>Data Type</i>	Variant (array of long)
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	Selects the ports and sets the <i>full 2-port calibration</i> type, when the written calibration coefficients are made effective by the SCPI.SENSe(<i>Ch</i>).CORRection.COEFficient.SAVE method. The array contains 2 elements: <i>Data(0)</i> specifies a port for full 2-port calibration; <i>Data(1)</i> specifies a port for full 2-port calibration.
<i>Range</i>	Port number is 1 to 4. The array elements can not contain the same port numbers.
<i>Out of Range</i>	If an incorrect port number is specified, an error occurs (error code: 222). If the same port numbers are specified, an error occurs (error code: 220).
<i>Syntax</i>	Dim <i>Ports</i> As Variant <i>Ports</i> = Array(1,2) <i>app.SCPI.SENSe(Ch).CORRection.COEFficient.METHod.SOLT2</i> = <i>Ports</i>
<i>Equivalent Softkeys</i>	None

SCPI.SENSe(*Ch*).CORRection.COEfficient.METHod.SOLT3

<i>Object Type</i>	Property (write only)
<i>Data Type</i>	Variant (array of long)
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	Selects the ports and sets the <i>full 3-port calibration</i> type, when the written calibration coefficients are made effective by the SCPI.SENSe(<i>Ch</i>).CORRection.COEfficient.SAVE method. The array contains 3 elements: <i>Data(0)</i> specifies a port for full 3-port calibration; <i>Data(1)</i> specifies a port for full 3-port calibration; <i>Data(2)</i> specifies a port for full 3-port calibration.
<i>Range</i>	Port number is 1 to 4. The array elements can not contain the same port numbers.
<i>Out of Range</i>	If an incorrect port number is specified, an error occurs (error code: 222). If the same port numbers are specified, an error occurs (error code: 220).
<i>Syntax</i>	Dim <i>Ports</i> As Variant <i>Ports</i> = Array(1,2,4) <i>app.SCPI.SENSe(Ch).CORRection.COEfficient.METHod.SOLT2 = Ports</i>
<i>Equivalent Softkeys</i>	None

SCPI.SENSe(*Ch*).CORRection.COEfficient.METHOD.SOLT4

<i>Object Type</i>	Property (write only)
<i>Data Type</i>	Variant (array of long)
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	Selects the ports and sets the <i>full 4-port calibration</i> type, when the written calibration coefficients are made effective by the SCPI.SENSe(<i>Ch</i>).CORRection.COEfficient.SAVE method. The array contains 4 elements: <ul style="list-style-type: none"> <i>Data(0)</i> specifies a port for full 4-port calibration; <i>Data(1)</i> specifies a port for full 4-port calibration; <i>Data(2)</i> specifies a port for full 4-port calibration; <i>Data(3)</i> specifies a port for full 4-port calibration.
<i>Range</i>	Port number is 1 to 4. The array elements can not contain the same port numbers.
<i>Out of Range</i>	If an incorrect port number is specified, an error occurs (error code: 222). If the same port numbers are specified, an error occurs (error code: 220).
<i>Syntax</i>	Dim Ports As Variant <i>Ports</i> = Array(1,2,3,4) <i>app.SCPI.SENSe(Ch).CORRection.COEfficient.METHOD.SOLT2 = Ports</i>
<i>Equivalent Softkeys</i>	None

SCPI.SENSe(*Ch*).CORRection.COEfficient.SAVE

<i>Object Type</i>	Method
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)

<i>Description</i>	Enables the written calibration coefficients depending on the selected calibration type. On completion of the method the written calibration coefficients are cleared, the error correction automatically turns ON. At the attempt to execute this method before all the needed calibration coefficients are written, an error occurs and the method is ignored.
<i>Syntax</i>	<code>app.SCPI.SENSe(Ch).CORRection.COEFficient.SAVE</code>
<i>Related Commands</i>	<p>Calibration type selection:</p> <p>SCPI.SENSe(<i>Ch</i>).CORRection.COEFficient.METHod.ERESponse SCPI.SENSe(<i>Ch</i>).CORRection.COEFficient.METHod.RESPonse.OPEN SCPI.SENSe(<i>Ch</i>).CORRection.COEFficient.METHod.RESPonse.SHORt SCPI.SENSe(<i>Ch</i>).CORRection.COEFficient.METHod.RESPonse.THRU SCPI.SENSe(<i>Ch</i>).CORRection.COEFficient.METHod.SOLT1 SCPI.SENSe(<i>Ch</i>).CORRection.COEFficient.METHod.SOLT2 SCPI.SENSe(<i>Ch</i>).CORRection.COEFficient.METHod.SOLT3 SCPI.SENSe(<i>Ch</i>).CORRection.COEFficient.METHod.SOLT4</p> <p>Calibration coefficient writing:</p> <p>SCPI.SENSe(<i>Ch</i>).CORRection.COEFficient.DATA (<i>Str</i>, <i>Pt_r</i>, <i>Pt_s</i>)</p>
<i>Equivalent Softkeys</i>	None

SCPI.SENSe(*Ch*).CORRection.COLlect.ACQuire.ISOLation

<i>Object Type</i>	Property (write only)
<i>Data Type</i>	Variant (array of long)
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	<p>Measures the isolation calibration data between the source port and the receiver port.</p> <p>The array contains 2 elements:</p> <p style="padding-left: 40px;"><i>Data(0)</i> the number of the receiver port; <i>Data(1)</i> the number of the source port.</p>
<i>Range</i>	Port number is 1 to 4 The array elements can not contain the same port numbers.
<i>Out of Range</i>	If an incorrect port number is specified, an error occurs (error code: 222). If the same port numbers are specified, an error occurs (error code: 220).

<i>Syntax</i>	<code>app.SCPI.SENSE(Ch).CORRection.COLLect.ACQuire.ISOLation = Array(1, 2)</code>
<i>Notes</i>	The property writing starts the measurement for the channel independently of the trigger initiation and trigger source settings. The function of the property writing waits for the completion of the measurement.
<i>Equivalent Softkeys</i>	<p>Calibration > Calibrate > Response (Thru) > Isolation (Optional)</p> <p>Calibration > Calibrate > One Path 2–Port Cal > Isolation (Optional)</p> <p>Calibration > Calibrate > 2–Port SOLT Cal > Port x-y Isol (Optional)</p> <p>Calibration > Calibrate > 3–Port SOLT Cal > Port x-y Isol (Optional)</p> <p>Calibration > Calibrate > 4–Port SOLT Cal > Port x-y Isol (Optional)</p>

SCPI.SENSE(*Ch*).CORRection.COLLect.ACQuire.LOAD

<i>Object Type</i>	Property (write only)
<i>Data Type</i>	Long
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	Measures the calibration data of the <i>load</i> standard for the specified port.
<i>Range</i>	Port number is 1 to 4.
<i>Out of Range</i>	An error occurs (error code: 222).
<i>Syntax</i>	<code>app.SCPI.SENSE(Ch).CORRection.COLLect.ACQuire.LOAD = 1</code>
<i>Notes</i>	The property writing starts the measurement for the channel independently of the trigger initiation and trigger source settings. The function of the property writing waits for the completion of the measurement.

	Calibration > Calibrate > Response (Open) > Load (Optional) Calibration > Calibrate > Response (Short) > Load (Optional) Calibration > Calibrate > 1-Port SOL Cal > Load Calibration > Calibrate > One Path 2-Port Cal > Load Calibration > Calibrate > 2-Port SOLT Cal > Port n Load Calibration > Calibrate > 3-Port SOLT Cal > Reflection Port n > Load Calibration > Calibrate > 4-Port SOLT Cal > Reflection Port n > Load
<i>Equivalent Softkeys</i>	

SCPI.SENSE(*Ch*).CORRection.COLLect.ACQuire.OPEN

<i>Object Type</i>	Property (write only)
<i>Data Type</i>	Long
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	Measures the calibration data of the <i>open</i> standard for the specified port.
<i>Range</i>	Port number is 1 to 4.
<i>Out of Range</i>	An error occurs (error code: 222).
<i>Syntax</i>	<i>app.SCPI.SENSE(Ch).CORRection.COLLect.ACQuire.OPEN= 1</i>
<i>Notes</i>	The property writing starts the measurement for the channel independently of the trigger initiation and trigger source settings. The function of the property writing waits for the completion of the measurement.
<i>Equivalent Softkeys</i>	Calibration > Calibrate > Response (Open) > Open Calibration > Calibrate > 1-Port SOL Cal > Open Calibration > Calibrate > One Path 2-Port Cal > Open Calibration > Calibrate > 2-Port SOLT Cal > Port n Open Calibration > Calibrate > 3-Port SOLT Cal > Reflection Port n > Open Calibration > Calibrate > 4-Port SOLT Cal > Reflection Port n > Open

SCPI.SENSe(*Ch*).CORRection.COLLect.ACQuire.SHORt

<i>Object Type</i>	Property (write only)
<i>Data Type</i>	Long
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	Measures the calibration data of the <i>short</i> standard for the specified port.
<i>Range</i>	Port number is 1 to 4.
<i>Out of Range</i>	An error occurs (error code: 222).
<i>Syntax</i>	<i>app.SCPI.SENSe(Ch).CORRection.COLLect.ACQuire.SHORt = 1</i>
<i>Notes</i>	The property writing starts the measurement for the channel independently of the trigger initiation and trigger source settings. The function of the property writing waits for the completion of the measurement.
<i>Equivalent Softkeys</i>	Calibration > Calibrate > Response (Short) > Short Calibration > Calibrate > 1-Port SOL Cal > Short Calibration > Calibrate > One Path 2-Port Cal > Short Calibration > Calibrate > 2-Port SOLT Cal > Port n Short Calibration > Calibrate > 3-Port SOLT Cal > Reflection Port n > Short Calibration > Calibrate > 4-Port SOLT Cal > Reflection Port n > Short

SCPI.SENSE(*Ch*).CORRection.COLLect.ACQuire.SUBClass

<i>Object Type</i>	Property (write only)
<i>Data Type</i>	Long
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The subclass number which is used for the calibration of the selected channel (Ch). For example, if two different subclasses are set in advance, say Thru 1 & Thru 2, which are visible at the calibration softkey, this command can select either Thru1 or Thru2. When performing Thru cal, either Thru 1 or Thru 2 set with this command is used for the calibration.
<i>Range</i>	1 to 8.
<i>Syntax</i>	<i>app.SCPI.SENSE(Ch).CORRection.COLLect.ACQuire.SUBClass = 2</i> <i>Subclass = app.SCPI.SENSE(Ch).CORRection.COLLect.ACQuire.SUBClass</i>
<i>Equivalent Softkeys</i>	None

SCPI.SENSE(*Ch*).CORRection.COLLect.ACQuire.THRU

<i>Object Type</i>	Property (write only)
<i>Data Type</i>	Variant (array of long)
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	Measures the calibration data of the <i>thru</i> standard between the source port and the receiver port. The array contains 2 elements: <i>Data(0)</i> the number of the receiver port; <i>Data(1)</i> the number of the source port.
<i>Range</i>	Port number is 1 to 4. The array elements can not contain the same port numbers.

<i>Out of Range</i>	If an incorrect port number is specified, an error occurs (error code: 222). If the same port numbers are specified, an error occurs (error code: 220).
<i>Syntax</i>	<code>app.SCPI.SENSe(Ch).CORRection.COLLect.ACQuire.THRU= Array(1, 2)</code>
<i>Notes</i>	The property writing starts the measurement for the channel independently of the trigger initiation and trigger source settings. The function of the property writing waits for the completion of the measurement.
<i>Equivalent Softkeys</i>	<p>Calibration > Calibrate > Response (Thru) > Thru</p> <p>Calibration > Calibrate > One Path 2-Port Cal > Thru</p> <p>Calibration > Calibrate > 2-Port SOLT Cal > Port x-y Thru</p> <p>Calibration > Calibrate > 3-Port SOLT Cal > x-y Thru</p> <p>Calibration > Calibrate > 4-Port SOLT Cal > Transmission > x-y Thru</p>

SCPI.SENSe(*Ch*).CORRection.COLLect.ACQuire.TRLLine

<i>Object Type</i>	Property (write only)
<i>Data Type</i>	Variant (array of long)
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	<p>Measures the calibration data of the <i>TRL Line/Match</i> standard between the source port and the receiver port.</p> <p>The array contains 2 elements:</p> <p style="padding-left: 40px;"><i>Data(0)</i> the number of the receiver port;</p> <p style="padding-left: 40px;"><i>Data(1)</i> the number of the source port.</p>
<i>Range</i>	Port number is 1 to 4. The array elements can not contain the same port numbers.
<i>Out of Range</i>	If an incorrect port number is specified, an error occurs (error code: 222). If the same port numbers are specified, an error occurs (error code: 220).
<i>Syntax</i>	<i>app.SCPI.SENSe(Ch).CORRection.COLLect.ACQuire.TRLLine= Array(1, 2)</i>
<i>Notes</i>	The property writing starts the measurement for the channel independently of the trigger initiation and trigger source settings. The function of the property writing waits for the completion of the measurement.
<i>Equivalent Softkeys</i>	<p>Calibration > Calibrate > 2–Port TRL Cal > x–y Line/Match</p> <p>Calibration > Calibrate > 3–Port TRL Cal > Line/Match > x–y Line/Match</p> <p>Calibration > Calibrate > 4–Port TRL Cal > Line/Match > x–y Line/Match</p>

SCPI.SENSe(*Ch*).CORRection.COLLect.ACQuire.TRLReflect

<i>Object Type</i>	Property (write only)
<i>Data Type</i>	Long
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	Measures the calibration data of the <i>TRL Reflect</i> standard for the specified port.
<i>Range</i>	Port number is 1 to 4.
<i>Out of Range</i>	An error occurs (error code: 222).
<i>Syntax</i>	<i>app.SCPI.SENSe(Ch).CORRection.COLLect.ACQuire.TRLReflect = 1</i>
<i>Notes</i>	The property writing starts the measurement for the channel independently of the trigger initiation and trigger source settings. The function of the property writing waits for the completion of the measurement.
<i>Equivalent Softkeys</i>	Calibration > Calibrate > 2-Port TRL Cal > Port x Reflect Calibration > Calibrate > 3-Port TRL Cal > Reflect > Port x Calibration > Calibrate > 4-Port TRL Cal > Reflect > Port x

SCPI.SENSE(*Ch*).CORRection.COLlect.ACQuireTRLThru

<i>Object Type</i>	Property (write only)
<i>Data Type</i>	Variant (array of long)
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	Measures the calibration data of the <i>TRL Thru/Line</i> standard between the source port and the receiver port. The array contains 2 elements: <i>Data(0)</i> the number of the receiver port; <i>Data(1)</i> the number of the source port.
<i>Range</i>	Port number is 1 to 4. The array elements can not contain the same port numbers.
<i>Out of Range</i>	If an incorrect port number is specified, an error occurs (error code: 222). If the same port numbers are specified, an error occurs (error code: 220).
<i>Syntax</i>	<i>app.SCPI.SENSE(Ch).CORRection.COLlect.ACQuireTRLThru= Array(1, 2)</i>
<i>Notes</i>	The property writing starts the measurement for the channel independently of the trigger initiation and trigger source settings. The function of the property writing waits for the completion of the measurement.
<i>Equivalent Softkeys</i>	Calibration > Calibrate > 2-Port TRL Cal > x-y Thru/Line Calibration > Calibrate > 3-Port TRL Cal > Thru/Line > x-y Thru/Line Calibration > Calibrate > 4-Port TRL Cal > Thru/Line > x-y Thru/Line

SCPI.SENSE(*Ch*).CORRection.COLlect.CKIT.LABel

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	String
<i>Target</i>	Calibration kit, selected for channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)

<i>Description</i>	The calibration kit label.
<i>Range</i>	up to 254 characters
<i>Preset Value</i>	Varies depending on the number of the calibration kit.
<i>Syntax</i>	<p>Dim <i>Lab</i> As String <i>Lab</i> = app.SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.CKIT.LABel <i>app.SCPI.SENSe(Ch).CORRection.COLLect.CKIT.LABel</i> = "User1"</p>
<i>Equivalent Softkeys</i>	Calibration > Cal Kit > Label

SCPI.SENSe(*Ch*).CORRection.COLLect.CKIT.ORDer.LOAD(*Pt*)

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Long
<i>Target</i>	Calibration kit, selected for channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The number of the calibration standard of the load type, used for the measurement of the specified port <i>Pt</i> , <i>Pt</i> : port number 1–4 (see Table 1 on page 25)
<i>Range</i>	From 1 to the number of standards in the calibration kit.
<i>Out of Range</i>	If the specified standard number is greater than the number of standards in the kit, an error occurs (error code: 222). If the specified standard number is not the load standard number, an error occurs (error code: 220).
<i>Syntax</i>	<p>Dim <i>Num</i> As Long <i>Num</i> = app.SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.CKIT.ORDer.LOAD(<i>Pt</i>) <i>app.SCPI.SENSe(Ch).CORRection.COLLect.CKIT.ORDer.LOAD(Pt)</i> = 1</p>
<i>Equivalent Softkeys</i>	Calibration > Cal Kit > Specify CLSs > Load Port n (Row)

SCPI.SENSe(*Ch*).CORRection.COLLect.CKIT.ORDer.OPEN(*Pt*)

<i>Object Type</i>	Property (read/write)
--------------------	-----------------------

<i>Data Type</i>	Long
<i>Target</i>	Calibration kit, selected for channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The number of the calibration standard of the open type, used for the measurement of the specified port <i>Pt</i> , <i>Pt</i> : port number 1–4 (see Table 1 on page 25)
<i>Range</i>	From 1 to the number of standards in the calibration kit.
<i>Out of Range</i>	If the specified standard number is greater than the number of standards in the kit, an error occurs (error code: 222). If the specified standard number is not the open standard number, an error occurs (error code: 220).
<i>Syntax</i>	Dim <i>Num</i> As Long <i>Num</i> = app.SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.CKIT.ORDer.OPEN(<i>Pt</i>) app.SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.CKIT.ORDer.OPEN(<i>Pt</i>) = 1
<i>Equivalent Softkeys</i>	Calibration > Cal Kit > Specify CLSs > Open Port x (Row)

SCPI.SENSe(*Ch*).CORRection.COLLect.CKIT.ORDer.SElect

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Long
<i>Target</i>	Calibration kit, selected for channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The subclass used to specify classes of calibration standards by the commands SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.CKIT.ORDer.XXXX.
<i>Range</i>	1 to 8.
<i>Out of Range</i>	If the specified standard number is greater than the number of standards in the kit, an error occurs (error code: 222). If the specified standard number is not the short standard number, an error occurs (error code: 220).
<i>Syntax</i>	Dim <i>Num</i> As Long <i>Num</i> = app.SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.CKIT.ORDer.SElect app.SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.CKIT.ORDer.SESelect = 1
<i>Equivalent Softkeys</i>	Calibration > Cal Kit > Specify CLSs > Subclass n (Column)

SCPI.SENSe(*Ch*).CORRection.COLLect.CKIT.ORDer.SHORt(*Pt*)

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Long
<i>Target</i>	Calibration kit, selected for channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The number of the calibration standard of the short type, used for the measurement of the specified port <i>Pt</i> , <i>Pt</i> : port number 1–4 (see Table 1 on page 25)
<i>Range</i>	From 1 to the number of standards in the calibration kit.
<i>Out of Range</i>	If the specified standard number is greater than the number of standards in the kit, an error occurs (error code: 222). If the specified standard number is not the short standard number, an error occurs (error code: 220).
<i>Syntax</i>	Dim <i>Num</i> As Long <i>Num</i> = app.SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.CKIT.ORDer.SHORt(<i>Pt</i>) <i>app.SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.CKIT.ORDer.SHORt(<i>Pt</i>)</i> = 1
<i>Equivalent Softkeys</i>	Calibration > Cal Kit > Specify CLSs > Short Port x (Row)

SCPI.SENSe(*Ch*).CORRection.COLLect.CKIT.ORDer.THRU(*Pt_m*, *Pt_n*)

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Long
<i>Target</i>	Calibration kit, selected for channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The number of the calibration standard of the thru type, used for the measurement between the <i>Pt_m</i> and <i>Pt_n</i> ports, <i>Pt_m</i> : port number 1–4 (see Table 2 on page 25) <i>Pt_n</i> : port number 1–4 (see Table 2 on page 25)
<i>Range</i>	From 1 to the number of standards in the calibration kit.

<i>Out of Range</i>	If the specified standard number is greater than the number of standards in the kit, an error occurs (error code: 222). If the specified standard number is not the thru standard number, an error occurs (error code: 220).
<i>Syntax</i>	<p>Dim <i>Num</i> As Long</p> <p><i>Num</i> = app.SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.CKIT.ORDer.THRU(1, 2)</p> <p>app.SCPL.SENSe(<i>Ch</i>).CORRection.COLLect.CKIT.ORDer.THRU(1, 2) = 1</p>
<i>Equivalent Softkeys</i>	Calibration > Cal Kit > Specify CLSs > Thru Port x-y (Row)

SCPI.SENSe(*Ch*).CORRection.COLLect.CKIT.ORDer.TRLLine(*Pt_m*, *Pt_n*)

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Long
<i>Target</i>	Calibration kit, selected for channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The number of the calibration standard of the TRL Line/Match type, used for the measurement between the <i>Pt_m</i> and <i>Pt_n</i> ports, <i>Pt_m</i> : port number 1–4 (see Table 2 on page 25) <i>Pt_n</i> : port number 1–4 (see Table 2 on page 25)
<i>Range</i>	From 1 to the number of standards in the calibration kit.
<i>Out of Range</i>	If the specified standard number is greater than the number of standards in the kit, an error occurs (error code: 222). If the specified standard number is not the thru standard number, an error occurs (error code: 220).
<i>Syntax</i>	<pre>Dim Num As Long Num = app.SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.CKIT.ORDer.TRLLine(1, 2) app.SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.CKIT.ORDer.TRLLine(1, 2) = 1</pre>
<i>Equivalent Softkeys</i>	Calibration > Cal Kit > Specify CLSs > TRL Line/Match Port x-y (Row)

SCPI.SENSe(*Ch*).CORRection.COLLect.CKIT.ORDerTRLReflect(*Pt*)

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Long
<i>Target</i>	Calibration kit, selected for channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The number of the calibration standard of the TRL Reflect type, used for the measurement of the specified port <i>Pt</i> , <i>Pt</i> : port number 1–4 (see Table 1 on page 25)
<i>Range</i>	From 1 to the number of standards in the calibration kit.
<i>Out of Range</i>	If the specified standard number is greater than the number of standards in the kit, an error occurs (error code: 222). If the specified standard number is not the short standard number, an error occurs (error code: 220).
<i>Syntax</i>	<pre>Dim Num As Long Num = app.SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.CKIT.ORDerTRLReflect(<i>Pt</i>) app.SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.CKIT.ORDerTRLReflect (<i>Pt</i>) = 1</pre>
<i>Equivalent Softkeys</i>	Calibration > Cal Kit > Specify CLSs > TRL Reflect Port x (Row)

SCPI.SENSe(*Ch*).CORRection.COLLect.CKIT.ORDerTRLThru(*Pt_m*, *Pt_n*)

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Long
<i>Target</i>	Calibration kit, selected for channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The number of the calibration standard of the TRL Thru type, used for the measurement between the <i>Pt_m</i> and <i>Pt_n</i> ports, <i>Pt_m</i> : port number 1–4 (see Table 2 on page 25) <i>Pt_n</i> : port number 1–4 (see Table 2 on page 25)
<i>Range</i>	From 1 to the number of standards in the calibration kit.
<i>Out of Range</i>	If the specified standard number is greater than the number of standards in the kit, an error occurs (error code: 222). If the specified standard number is not the thru standard number, an error occurs (error code: 220).
<i>Syntax</i>	<pre>Dim Num As Long Num = app.SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.CKIT.ORDerTRLThru(1, 2) app.SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.CKIT.ORDerTRLThru(1, 2) = 1</pre>
<i>Equivalent Softkeys</i>	Calibration > Cal Kit > Specify CLSs > TRL Thru Port x-y (Row)

SCPI.SENSe(*Ch*).CORRection.COLLect.CKIT.RESet

<i>Object Type</i>	Method
<i>Target</i>	Calibration kit, selected for channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	Resets the calibration kit to the factory settings.
<i>Syntax</i>	<code>app.SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.CKIT.RESet</code>
<i>Equivalent Softkeys</i>	Calibration > Cal Kit > Restore Cal Kit

SCPI.SENSE(*Ch*).CORRection.COLLect.CKIT.SElect

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Long
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The selected calibration kit for the channel.
<i>Range</i>	from 1 to 50
<i>Out of Range</i>	An error occurs. Error code: 222.
<i>Preset Value</i>	1
<i>Syntax</i>	<p>Dim <i>Value</i> As Long</p> <p><i>Value</i> = app.SCPI.SENSE(<i>Ch</i>).CORRection.COLLect.CKIT.SElect</p> <p>app.SCPI.SENSE(<i>Ch</i>).CORRection.COLLect.CKIT.SElect = 3</p>
<i>Equivalent Softkeys</i>	Calibration > Cal Kit > Select

SCPI.SENSE(*Ch*).CORRection.COLLect.CKIT.STAN(*Std*).ARBitrary

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double
<i>Target</i>	Standard <i>Std</i> of the calibration kit specified for channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Std</i> : standard number (see Table 7 on page 239)
<i>Description</i>	The value of the arbitrary impedance for the load standard.
<i>Range</i>	from –1E18 to 1E18
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	50 or 75, depending on the selected calibration kit.
<i>Unit</i>	Ω (Ohm)
<i>Syntax</i>	Dim <i>Value</i> As Double <i>Value</i> = app.SCPI.SENSE(<i>Ch</i>).CORRection.COLLect.CKIT.STAN(<i>Std</i>).ARBitrary <i>app.SCPI.SENSE(<i>Ch</i>).CORRection.COLLect.CKIT.STAN(<i>Std</i>).ARBitrary</i> = 50
<i>Equivalent Softkeys</i>	Calibration > Cal Kit > Define STDs > Terminal Impedance

Table 7. *Std*: Calibration Standard Number

<i>Data Type</i>	Long
<i>Description</i>	The number of the standard.
<i>Range</i>	Varies depending on the number of the standards in the calibration kit.
<i>Out of Range</i>	If the specified standard number is greater than the number of standards in the kit, an error occurs (error code: 222).

<i>Notes</i>	If the standard number is not specified, it is taken as equal to 1.
--------------	---------------------------------------------------------------------

SCPI.SENSe(*Ch*).CORRection.COLLect.CKIT.STAN(*Std*).C0

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double
<i>Target</i>	Standard <i>Std</i> of the calibration kit specified for channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Std</i> : standard number (see Table 7 on page 239)
<i>Description</i>	The C0 value of the open calibration standard.
<i>Range</i>	from –1E18 to 1E18
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	Varies depending on the selected calibration kit and the standard.
<i>Unit</i>	1E–15 F (Farad)
<i>Syntax</i>	Dim <i>Value</i> As Double <i>Value</i> = app.SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.CKIT.STAN(<i>Std</i>).C0 <i>app.SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.CKIT.STAN(<i>Std</i>).C0</i> = 100
<i>Equivalent Softkeys</i>	Calibration > Cal Kit > Define STDs > C0 10⁻¹⁵ F

SCPI.SENSe(*Ch*).CORRection.COLLect.CKIT.STAN(*Std*).C1

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double
<i>Target</i>	Standard <i>Std</i> of the calibration kit specified for channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Std</i> : standard number (see Table 7 on page 239)
<i>Description</i>	The C1 value of the open calibration standard.

<i>Range</i>	from -1E18 to 1E18
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	Varies depending on the selected calibration kit and the standard.
<i>Unit</i>	1E-27 F/Hz (Farad/Hertz)
<i>Syntax</i>	<p>Dim <i>Value</i> As Double <i>Value</i> = app.SCPI.SENSE(<i>Ch</i>).CORRection.COLLect.CKIT.STAN(<i>Std</i>).C1 <i>app.SCPI.SENSE(Ch).CORRection.COLLect.CKIT.STAN(Std).C1 = 100</i></p>
<i>Equivalent Softkeys</i>	Calibration > Cal Kit > Define STDs > C1 10⁻²⁷ F/Hz

SCPI.SENSE(*Ch*).CORRection.COLLect.CKIT.STAN(*Std*).C2

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double
<i>Target</i>	Standard <i>Std</i> of the calibration kit specified for channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Std</i> : standard number (see Table 7 on page 239)
<i>Description</i>	The C2 value of the open calibration standard.
<i>Range</i>	from -1E18 to 1E18
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	Varies depending on the selected calibration kit and the standard.
<i>Unit</i>	1E-36 F/Hz ² (Farad/Hertz ²)
<i>Syntax</i>	<p>Dim <i>Value</i> As Double <i>Value</i> = app.SCPI.SENSE(<i>Ch</i>).CORRection.COLLect.CKIT.STAN(<i>Std</i>).C2 <i>app.SCPI.SENSE(Ch).CORRection.COLLect.CKIT.STAN(Std).C2 = 100</i></p>
<i>Equivalent Softkeys</i>	Calibration > Cal Kit > Define STDs > C2 10⁻³⁶ F/Hz²

SCPI.SENSE(*Ch*).CORRection.COLLect.CKIT.STAN(*Std*).C3

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double
<i>Target</i>	Standard <i>Std</i> of the calibration kit specified for channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Std</i> : standard number (see Table 7 on page 239)
<i>Description</i>	The C3 value of the open calibration standard.
<i>Range</i>	from –1E18 to 1E18
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	Varies depending on the selected calibration kit and the standard.
<i>Unit</i>	1E–45 F/Hz ³ (Farad/Hertz ³)
<i>Syntax</i>	Dim <i>Value</i> As Double <i>Value</i> = app.SCPI.SENSE(<i>Ch</i>).CORRection.COLLect.CKIT.STAN(<i>Std</i>).C3 <i>app.SCPI.SENSE(<i>Ch</i>).CORRection.COLLect.CKIT.STAN(<i>Std</i>).C3</i> = 100
<i>Equivalent Softkeys</i>	Calibration > Cal Kit > Define STDs > C3 10^{–45} F/Hz³

SCPI.SENSE(*Ch*).CORRection.COLLect.CKIT.STAN(*Std*).DElAy

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double
<i>Target</i>	Standard <i>Std</i> of the calibration kit specified for channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Std</i> : standard number (see Table 7 on page 239)
<i>Description</i>	The offset delay value of the calibration standard.
<i>Range</i>	from –1E18 to 1E18
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	Varies depending on the selected calibration kit and the standard.

<i>Unit</i>	s (second)
<i>Syntax</i>	<p>Dim <i>Value</i> As Double <i>Value</i> = app.SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.CKIT.STAN(<i>Std</i>).DELay app.SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.CKIT.STAN(<i>Std</i>).DELay = 93E-12</p>
<i>Equivalent Softkeys</i>	Calibration > Cal Kit > Define STDs > Offset Delay

SCPI.SENSe(*Ch*).CORRection.COLLect.CKIT.STAN(*Std*).FMAXimum

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double
<i>Target</i>	Standard <i>Std</i> of the calibration kit specified for channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Std</i> : standard number (see Table 7 on page 239)
<i>Description</i>	The maximum value of the calibration standard.
<i>Range</i>	from 0 to 1E18
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	999GHz
<i>Unit</i>	Hz (Hertz)
<i>Syntax</i>	Dim <i>Value</i> As Double <i>Value</i> = app.SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.CKIT.STAN(<i>Std</i>).FMAXimum <i>app.SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.CKIT.STAN(<i>Std</i>).FMAXimum</i> = 3E9
<i>Equivalent Softkeys</i>	Calibration > Cal Kit > Define STDs > Frequency max

SCPI.SENSe(*Ch*).CORRection.COLLect.CKIT.STAN(*Std*).FMINimum

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double
<i>Target</i>	Standard <i>Std</i> of the calibration kit specified for channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Std</i> : standard number (see Table 7 on page 239)
<i>Description</i>	The minimum value of the calibration standard.
<i>Range</i>	from 0 to 1E18
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	0 Hz
<i>Unit</i>	Hz (Hertz)
<i>Syntax</i>	Dim <i>Value</i> As Double <i>Value</i> = app.SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.CKIT.STAN(<i>Std</i>).FMINimum <i>app.SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.CKIT.STAN(<i>Std</i>).FMINimum</i> = 3E9
<i>Equivalent Softkeys</i>	Calibration > Cal Kit > Define STDs > Frequency min

SCPI.SENSe(*Ch*).CORRection.COLLect.CKIT.STAN(*Std*).L0

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double
<i>Target</i>	Standard <i>Std</i> of the calibration kit specified for channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Std</i> : standard number (see Table 7 on page 239)
<i>Description</i>	The L0 value of the short calibration standard.
<i>Range</i>	from –1E18 to 1E18

<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	Varies depending on the selected calibration kit and the standard.
<i>Unit</i>	1E–12 H (Henry)
<i>Syntax</i>	<p>Dim <i>Value</i> As Double</p> <p><i>Value</i> = app.SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.CKIT.STAN(<i>Std</i>).L0</p> <p>app.SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.CKIT.STAN(<i>Std</i>).L0 = 100</p>
<i>Equivalent Softkeys</i>	Calibration > Cal Kit > Define STDs > L0 10⁻¹² H

SCPI.SENSe(*Ch*).CORRection.COLLect.CKIT.STAN(*Std*).L1

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double
<i>Target</i>	Standard <i>Std</i> of the calibration kit specified for channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Std</i> : standard number (see Table 7 on page 239)
<i>Description</i>	The L1 value of the short calibration standard.
<i>Range</i>	from –1E18 to 1E18
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	Varies depending on the selected calibration kit and the standard.
<i>Unit</i>	1E–24 H/Hz (Henry/Hertz)
<i>Syntax</i>	<p>Dim <i>Value</i> As Double</p> <p><i>Value</i> = app.SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.CKIT.STAN(<i>Std</i>).L1</p> <p>app.SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.CKIT.STAN(<i>Std</i>).L1 = 100</p>
<i>Equivalent Softkeys</i>	Calibration > Cal Kit > Define STDs > L1 10⁻²⁴ H/Hz

SCPI.SENSe(*Ch*).CORRection.COLLect.CKIT.STAN(*Std*).L2

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double
<i>Target</i>	Standard <i>Std</i> of the calibration kit specified for channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Std</i> : standard number (see Table 7 on page 239)
<i>Description</i>	The L2 value of the short calibration standard.
<i>Range</i>	from –1E18 to 1E18
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	Varies depending on the selected calibration kit and the standard.
<i>Unit</i>	1E–33 H/Hz ² (Henry/Hertz ²)
<i>Syntax</i>	Dim <i>Value</i> As Double <i>Value</i> = app.SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.CKIT.STAN(<i>Std</i>).L2 <i>app.SCPI.SENSe(Ch).CORRection.COLLect.CKIT.STAN(Std).L2 = 100</i>
<i>Equivalent Softkeys</i>	Calibration > Cal Kit > Define STDs > L2 10⁻³³ H/Hz²

SCPI.SENSe(*Ch*).CORRection.COLLect.CKIT.STAN(*Std*).L3

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double
<i>Target</i>	Standard <i>Std</i> of the calibration kit specified for channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Std</i> : standard number (see Table 7 on page 239)
<i>Description</i>	The L3 value of the short calibration standard.
<i>Range</i>	from –1E18 to 1E18
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	Varies depending on the selected calibration kit and the standard.
<i>Unit</i>	1E–42 H/Hz ³ (Henry/Hertz ³)

<i>Syntax</i>	Dim <i>Value</i> As Double <i>Value</i> = app.SCPI.SENSE(<i>Ch</i>).CORRection.COLLect.CKIT.STAN(<i>Std</i>).L3 <i>app.SCPI.SENSE(Ch).CORRection.COLLect.CKIT.STAN(Std).L3</i> = 100
<i>Equivalent Softkeys</i>	Calibration > Cal Kit > Define STDs > L3 10⁻⁴² H/Hz³

SCPI.SENSE(*Ch*).CORRection.COLLect.CKIT.STAN(*Std*).LABEL

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	String
<i>Target</i>	Standard <i>Std</i> of the calibration kit specified for channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Std</i> : standard number (see Table 7 on page 239)
<i>Description</i>	The label of the calibration standard.
<i>Range</i>	up to 254 characters
<i>Preset Value</i>	Varies depending on the selected calibration kit and the standard.
<i>Syntax</i>	Dim <i>Lab</i> As String <i>Lab</i> = app.SCPI.SENSE(<i>Ch</i>).CORRection.COLLect.CKIT.STAN(<i>Std</i>).LABEL <i>app.SCPI.SENSE(Ch).CORRection.COLLect.CKIT.STAN(Std).LABEL</i> = "Open"
<i>Equivalent Softkeys</i>	Calibration > Cal Kit > Define STDs > Standard Label

SCPI.SENSE(*Ch*).CORRection.COLLect.CKIT.STAN(*Std*).LOSS

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double
<i>Target</i>	Standard <i>Std</i> of the calibration kit specified for channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Std</i> : standard number (see Table 7 on page 239)
<i>Description</i>	The offset loss value of the calibration standard.
<i>Range</i>	from -1E18 to 1E18

<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	Varies depending on the selected calibration kit and the standard.
<i>Unit</i>	Ω/s (Ohm/second)
<i>Syntax</i>	<p>Dim <i>Value</i> As Double <i>Value</i> = app.SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.CKIT.STAN(<i>Std</i>).LOSS <i>app.SCPI.SENSe(Ch).CORRection.COLLect.CKIT.STAN(Std).LOSS</i> = 700E6</p>
<i>Equivalent Softkeys</i>	Calibration > Cal Kit > Define STDs > Offset Loss

SCPI.SENSe(*Ch*).CORRection.COLLect.CKIT.STAN(*Std*).TYPE

<i>Object Type</i>	Property (read/write)																								
<i>Data Type</i>	String																								
<i>Target</i>	Standard <i>Std</i> of the calibration kit specified for channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Std</i> : standard number (see Table 7 on page 239)																								
<i>Description</i>	The type of the calibration standard.																								
<i>Range</i>	<table> <tr><td>"OPEN"</td><td>:</td><td>Open</td></tr> <tr><td>"SHORt"</td><td>:</td><td>Short</td></tr> <tr><td>"LOAD"</td><td>:</td><td>Load</td></tr> <tr><td>"THRU"</td><td>:</td><td>Thru</td></tr> <tr><td>"UTHRu"</td><td>:</td><td>Unknown Thru</td></tr> <tr><td>"SLID"</td><td>:</td><td>Sliding load</td></tr> <tr><td>"DATA"</td><td>:</td><td>Data based standard</td></tr> <tr><td>"NONE"</td><td>:</td><td>Not defined</td></tr> </table>	"OPEN"	:	Open	"SHORt"	:	Short	"LOAD"	:	Load	"THRU"	:	Thru	"UTHRu"	:	Unknown Thru	"SLID"	:	Sliding load	"DATA"	:	Data based standard	"NONE"	:	Not defined
"OPEN"	:	Open																							
"SHORt"	:	Short																							
"LOAD"	:	Load																							
"THRU"	:	Thru																							
"UTHRu"	:	Unknown Thru																							
"SLID"	:	Sliding load																							
"DATA"	:	Data based standard																							
"NONE"	:	Not defined																							
<i>Notes</i>	The short format of the parameter is indicated by upper case letters. There is no distinction between upper and lower case letters when the property is written. When the property is read out, the short format is indicated by upper case letters.																								
<i>Out of Range</i>	An error occurs. Error code: 216.																								

<i>Preset Value</i>	Varies depending on the selected calibration kit and the standard.
<i>Syntax</i>	<p>Dim <i>Param</i> As String <i>Param</i> = app.SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.CKIT.STAN(<i>Std</i>).TYPE <i>app.SCPI.SENSe(Ch).CORRection.COLLect.CKIT.STAN(Std).TYPE</i> = "OPEN"</p>
<i>Equivalent Softkeys</i>	Calibration > Cal Kit > Define STDs > Standard Type

SCPI.SENSe(*Ch*).CORRection.COLLect.CKIT.STAN(*Std*).Z0

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double
<i>Target</i>	Standard <i>Std</i> of the calibration kit specified for channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Std</i> : standard number (see Table 7 on page 239)
<i>Description</i>	The offset Z0 value of the calibration standard.
<i>Range</i>	from 0 to 1E18
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	50 or 75, depending on the selected calibration kit.
<i>Unit</i>	Ω (Ohm)
<i>Syntax</i>	<p>Dim <i>Value</i> As Double <i>Value</i> = app.SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.CKIT.STAN(<i>Std</i>).Z0 <i>app.SCPI.SENSe(Ch).CORRection.COLLect.CKIT.STAN(Std).Z0</i> = 50</p>
<i>Equivalent Softkeys</i>	Calibration > Cal Kit > Define STDs > Offset Z0

SCPI.SENSe(*Ch*).CORRection.COLLect.CLEAR

<i>Object Type</i>	Method
--------------------	--------

<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	Clears the measurement values of the calibration standards.
<i>Syntax</i>	<code>app.SCPI.SENSE(Ch).CORRection.COLlect.CLEar</code>
<i>Equivalent Softkeys</i>	Calibration > Calibrate > Response (Open) Response (Short) Response (Thru) One Path 2–Port Cal 1–Port SOL Cal 2–Port SOLT Cal 3–Port SOLT Cal 4–Port SOLT Cal 2–Port TRL Cal 3–Port TRL Cal 4–Port TRL Cal > Cancel > OK

SCPI.SENSE(*Ch*).CORRection.COLlect.DATA.ISOLation(*Pt_r*, *Pt_s*)

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Variant (array of double)
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	<p>The array of the isolation calibration measurements performed between the receiver port <i>Pt_r</i> and the source port <i>Pt_s</i>,</p> <p><i>Pt_r</i>: the number of the receiver port 1–4 (see Table 2 on page 25) <i>Pt_s</i>: the number of the source port 1–4 (see Table 2 on page 25)</p> <p>The array elements are complex numbers. Also see section “Measurement Data Arrays” on page 20.</p> <p>The array size is 2N, where N is the number of measurement points.</p> <p>For the n-th point, where n from 1 to N:</p> <p style="padding-left: 20px;"><i>Data</i>(2n–2) real part of the measurement; <i>Data</i>(2n–1) imaginary part of the measurement.</p>

<i>Syntax</i>	Dim <i>Data</i> As Variant <i>Data</i> = app.SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.DATa.ISOLation(<i>Pt_r</i> , <i>Pt_s</i>) app.SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.DATa.ISOLation(<i>Pt_r</i> , <i>Pt_s</i>) = <i>Data</i>
<i>Related Commands</i>	SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.ACQuire.ISOLation
<i>Equivalent Softkeys</i>	None

SCPI.SENSe(*Ch*).CORRection.COLLect.DATa.LOAD(*Pt*)

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Variant (array of double)
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The array of the <i>load</i> calibration standard measurements for the port <i>Pt</i> , <i>Pt</i> : port number 1–4 (see Table 2 on page 25) The array elements are complex numbers. Also see section “Measurement Data Arrays” on page 20. The array size is 2N, where N is the number of measurement points. For the n-th point, where n from 1 to N: <i>Data</i> (2n–2) real part of the measurement; <i>Data</i> (2n–1) imaginary part of the measurement.
<i>Syntax</i>	Dim <i>Data</i> As Variant <i>Data</i> = app.SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.DATa.LOAD(<i>Pt</i>) app.SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.DATa.LOAD(<i>Pt</i>) = <i>Data</i>
<i>Related Commands</i>	SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.ACQuire.LOAD
<i>Equivalent Softkeys</i>	None

SCPI.SENSe(*Ch*).CORRection.COLLect.DATa.OPEN(*Pt*)

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Variant (array of double)

<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	<p>The array of the <i>open</i> calibration standard measurements for the port <i>Pt</i>, <i>Pt</i>: port number 1–4 (see Table 2 on page 25)</p> <p>The array elements are complex numbers. Also see section “Measurement Data Arrays” on page 20.</p> <p>The array size is 2N, where N is the number of measurement points. For the n-th point, where n from 1 to N:</p> <p style="padding-left: 40px;"><i>Data</i>(2n–2) real part of the measurement;</p> <p style="padding-left: 40px;"><i>Data</i>(2n–1) imaginary part of the measurement.</p>
<i>Syntax</i>	<p>Dim <i>Data</i> As Variant</p> <p><i>Data</i> = app.SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.DATa.OPEN(<i>Pt</i>)</p> <p>app.SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.DATa.OPEN(<i>Pt</i>) = <i>Data</i></p>
<i>Related Commands</i>	SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.ACQuire.OPEN
<i>Equivalent Softkeys</i>	None

SCPI.SENSe(*Ch*).CORRection.COLLect.DATa.SHORt(*Pt*)

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Variant (array of double)
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	<p>The array of the <i>short</i> calibration standard measurements for the port <i>Pt</i>, <i>Pt</i>: port number 1–4 (see Table 2 on page 25)</p> <p>The array elements are complex numbers. Also see section “Measurement Data Arrays” on page 20.</p> <p>The array size is 2N, where N is the number of measurement points. For the n-th point, where n from 1 to N:</p> <p style="padding-left: 40px;"><i>Data</i>(2n–2) real part of the measurement;</p> <p style="padding-left: 40px;"><i>Data</i>(2n–1) imaginary part of the measurement.</p>
<i>Syntax</i>	<p>Dim <i>Data</i> As Variant</p> <p><i>Data</i> = app.SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.DATa.SHORt(<i>Pt</i>)</p> <p>app.SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.DATa.SHORt(<i>Pt</i>) = <i>Data</i></p>

<i>Related Commands</i>	SCPI.SENSE(<i>Ch</i>).CORRection.COLlect.ACQuire.SHORt
<i>Equivalent Softkeys</i>	None

SCPI.SENSE(*Ch*).CORRection.COLlect.DATA.THRU.MATCH(*Pt_r,Pt_s*)

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Variant (array of double)
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	<p>The array of the reflection measurements of the <i>thru</i> standard connected between the receiver port <i>Pt_r</i> and the source port <i>Pt_s</i>,</p> <p><i>Pt_r</i>: the number of the receiver port 1–4 (see Table 2 on page 25) <i>Pt_s</i>: the number of the source port 1–4 (see Table 2 on page 25)</p> <p>The array elements are complex numbers. Also see section “Measurement Data Arrays” on page 20.</p> <p>The array size is 2N, where N is the number of measurement points.</p> <p>For the n-th point, where n from 1 to N:</p> <p style="padding-left: 40px;"><i>Data</i>(2n–2) real part of the measurement;</p> <p style="padding-left: 40px;"><i>Data</i>(2n–1) imaginary part of the measurement.</p>
<i>Syntax</i>	<p>Dim <i>Data</i> As Variant</p> <p><i>Data</i> = app.SCPI.SENSE(<i>Ch</i>).CORRection.COLlect.DATA.THRU.MATCH(<i>Pt_r, Pt_s</i>)</p> <p>app.SCPI.SENSE(<i>Ch</i>).CORRection.COLlect.DATA.THRU.MATCH(<i>Pt_r, Pt_s</i>) = <i>Data</i></p>
<i>Related Commands</i>	SCPI.SENSE(<i>Ch</i>).CORRection.COLlect.ACQuire.THRU
<i>Equivalent Softkeys</i>	None

SCPI.SENSE(*Ch*).CORRection.COLlect.DATA.THRU. TRANsmision(*Pt_r, Pt_s*)

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Variant (array of double)

<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	<p>The array of the transmission measurements performed between the receiver port <i>Pt_r</i> and the source port <i>Pt_s</i>, using the <i>thru</i> standard,</p> <p><i>Pt_r</i>: the number of the receiver port 1–4 (see Table 2 on page 25) <i>Pt_s</i>: the number of the source port 1–4 (see Table 2 on page 25)</p> <p>The array elements are complex numbers. Also see section “Measurement Data Arrays” on page 20.</p> <p>The array size is 2N, where N is the number of measurement points.</p> <p>For the n-th point, where n from 1 to N:</p> <p style="padding-left: 40px;"><i>Data</i>(2n–2) real part of the measurement;</p> <p style="padding-left: 40px;"><i>Data</i>(2n–1) imaginary part of the measurement.</p>
<i>Syntax</i>	<pre>Dim <i>Data</i> As Variant <i>Data</i> = app.SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.DATa.THRU.TRANSmission(<i>Pt_r</i>, <i>Pt_s</i>) app.SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.DATa.THRU.TRANSmission(<i>Pt_r</i>, <i>Pt_s</i>) = <i>Data</i></pre>
<i>Related Commands</i>	SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.ACQuire.THRU
<i>Equivalent Softkeys</i>	None

SCPI.SENSe(*Ch*).CORRection.COLLect.ECAL.INFormation

<i>Object Type</i>	Property (read only)
<i>Data Type</i>	String
<i>Target</i>	AutoCal module (<i>Ch</i> – arbitrary number 1 to 16)
<i>Description</i>	<p>Gets information about the AutoCal Module connected to the Network Analyzer in a string with comma separated fields.</p> <p>Autocal Module Information:</p> <ul style="list-style-type: none"> Model Name, Serial Number, Current Temperature of AutoCal Module, <p>Selected Characterization Information:</p> <ul style="list-style-type: none"> Characterization Name, Characterization Date and Time, Min Frequency, Max Frequency, Number of Points, Characterization Temperature,

	PortA Connector, PortB Connector, PortA Adapter, PortB Adapter, Analyzer, Location, Operator.
<i>Syntax</i>	Dim <i>ID</i> As String <i>ID</i> = app.SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.ECAL.INFormation
<i>Equivalent Softkeys</i>	Calibration > AutoCal > Characterization Info...

SCPI.SENSE(*Ch*).CORRection.COLllect.ECAL.ORIenation.STATE

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Boolean
<i>Target</i>	AutoCal (<i>Ch</i> – arbitrary number 1 to 16)
<i>Description</i>	The ON/OFF state of the Auto-Orientation function used when executing AutoCal.
<i>Allowable Values</i>	True: Auto-Orientation function ON False: Auto-Orientation function OFF
<i>Preset Value</i>	False
<i>Syntax</i>	Dim <i>Status</i> As Boolean <i>Status</i> = app.SCPI.SENSE(<i>Ch</i>).CORRection.COLllect.ECAL.ORIenation.STATE app.SCPI.SENSE(<i>Ch</i>).CORRection.COLllect.ECAL.ORIenation.STATE = False
<i>Equivalent Softkeys</i>	Calibration > AutoCal > Orientation > Auto-Orientation

SCPI.SENSe(*Ch*).CORRection.COLLect.ECAL.PATH(*Pt*)

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Long
<i>Target</i>	AutoCal (<i>Ch</i> – arbitrary number 1 to 16)
<i>Description</i>	Sets or reads out the AutoCal module port number which is connected to a selected Network Analyzer port (<i>Pt</i>).
<i>Allowable Values</i>	1: Port A of AutoCal Module 2: Port B of AutoCal Module 3: Port C of AutoCal Module (4 port AutoCal module only) 4: Port D of AutoCal Module (4 port AutoCal module only)
<i>Syntax</i>	Dim <i>Value</i> As Long <i>Value</i> = app.SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.ECAL.PATH(<i>Pt</i>) app.SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.ECAL.PATH(<i>Pt</i>) = 2
<i>Equivalent Softkeys</i>	Calibration > AutoCal > Orientation > Port x

SCPI.SENSe(*Ch*).CORRection.COLLect.ECAL.SOLT1

<i>Object Type</i>	Property (write only)
<i>Data Type</i>	Long
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	Executes 1-port calibration of the specified port of selected channel (<i>Ch</i>) using the AutoCal module.
<i>Syntax</i>	Dim <i>Port</i> As Long <i>app.SCPI.SENSe(Ch).CORRection.COLLect.ECAL.SOLT1 = Port</i>
<i>Equivalent Softkeys</i>	Calibration > AutoCal > 1-Port Cal > Port x

SCPI.SENSe(*Ch*).CORRection.COLLect.ECAL.SOLT2

<i>Object Type</i>	Property (write only)
<i>Data Type</i>	Variant (array of long)
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	Executes full 2-port calibration between the specified 2 ports of selected channel (<i>Ch</i>) using the AutoCal module.
<i>Syntax</i>	<i>app.SCPI.SENSe(Ch).CORRection.COLLect.ECAL.SOLT2 = Array(2, 1)</i>
<i>Equivalent Softkeys</i>	Calibration > AutoCal > 2-Port Cal > Port x-y

SCPI.SENSe(*Ch*).CORRection.COLLect.ECAL.UChar

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	String
<i>Target</i>	AutoCal (<i>Ch</i> – arbitrary number 1 to 16)
<i>Description</i>	Sets or reads out the Characteristic used when executing AutoCal (factory or user characterization)..
<i>Range</i>	"CHAR0" : Factory characterization "CHAR1" : User characterization 1 "CHAR2" : User characterization 2 "CHAR3" : User characterization 3
<i>Preset Value</i>	CHAR0
<i>Syntax</i>	<pre>Dim Param As String Param = app.SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.ECAL.UChar app.SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.ECAL.UChar = "CHAR0"</pre>
<i>Equivalent Softkeys</i>	Calibration > AutoCal > Characterization

SCPI.SENSe(*Ch*).CORRection.COLLect.ECAL.UTHRu.STATE

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Boolean
<i>Target</i>	AutoCal (<i>Ch</i> – arbitrary number 1 to 16)
<i>Description</i>	The ON/OFF state of the Unknown Thru feature used when executing AutoCal.
<i>Allowable Values</i>	True: Unknown Thru feature ON False: Unknown Thru feature OFF
<i>Preset Value</i>	False
<i>Syntax</i>	<p>Dim <i>Status</i> As Boolean</p> <p><i>Status</i> = app.SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.ECAL.UTHRu.STATE</p> <p>app.SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.ECAL.UTHRu.STATE = False</p>
<i>Equivalent Softkeys</i>	Calibration > AutoCal > Unkn Thru

SCPI.SENSe(*Ch*).CORRection.COLLect.METHOD.ERESponse

<i>Object Type</i>	Property (write only)
<i>Data Type</i>	Variant (array of long)
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	Selects the ports and sets the <i>one path 2-port calibration</i> type for the calculation of the calibration coefficients on completion of the calibration executed by the SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.SAVE method. The array contains 2 elements: <i>Data(0)</i> the number of the receiver port; <i>Data(1)</i> the number of the source port.
<i>Range</i>	Port number is 1 to 4. The array elements can not contain the same port numbers.
<i>Out of Range</i>	If an incorrect port number is specified, an error occurs (error code: 222). If the same port numbers are specified, an error occurs (error code: 220).
<i>Syntax</i>	<i>app</i> .SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.METHOD.ERESponse = Array(2, 1)
<i>Equivalent Softkeys</i>	Calibration > Calibrate > One Path 2-Port Cal > Select Ports

SCPI.SENSe(*Ch*).CORRection.COLLect.METHOD.RESPonse.OPEN

<i>Object Type</i>	Property (write only)
<i>Data Type</i>	Long
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	Selects the port and sets the <i>response calibration (Open)</i> type for the calculation of the calibration coefficients on completion of the calibration executed by the SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.SAVE method.
<i>Range</i>	from 1 to 4
<i>Out of Range</i>	An error occurs. Error code: 222.

<i>Syntax</i>	<code>app.SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.METHod.RESPonse.OPEN = 1</code>
<i>Equivalent Softkeys</i>	Calibration > Calibrate > Response (Open) > Select Port

SCPI.SENSe(*Ch*).CORRection.COLLect.METHod.RESPonse.SHORt

<i>Object Type</i>	Property (write only)
<i>Data Type</i>	Long
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	Selects the port and sets the <i>response calibration (Short)</i> type for the calculation of the calibration coefficients on completion of the calibration executed by the SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.SAVE method.
<i>Range</i>	from 1 to 4
<i>Out of Range</i>	An error occurs. Error code: 222.
<i>Syntax</i>	<code>app.SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.METHod.RESPonse.SHORt = 1</code>
<i>Equivalent Softkeys</i>	Calibration > Calibrate > Response (Short) > Select Port

SCPI.SENSe(*Ch*).CORRection.COLLect.METHod.RESPonse.THRU

<i>Object Type</i>	Property (write only)
<i>Data Type</i>	Variant (array of long)
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	Selects the ports and sets the <i>response calibration (Thru)</i> type for the calculation of the calibration coefficients on completion of the calibration executed by the SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.SAVE method. The array contains 2 elements: <i>Data(0)</i> the number of the receiver port; <i>Data(1)</i> the number of the source port.

<i>Range</i>	Port number is 1 to 4. Array elements can not contain the same port numbers.
<i>Out of Range</i>	If an incorrect port number is specified, an error occurs (error code: 222). If the same port numbers are specified, an error occurs (error code: 220).
<i>Syntax</i>	<i>app.SCPI.SENSe(Ch).CORRection.COLLect.METHod.RESPonse.THRU</i> = Array(2, 1)
<i>Equivalent Softkeys</i>	Calibration > Calibrate > Response (Thru) > Select Ports

SCPI.SENSe(*Ch*).CORRection.COLLect.METHod.SOLT1

<i>Object Type</i>	Property (write only)
<i>Data Type</i>	Long
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	Selects the port and sets the <i>full 1-port calibration</i> type for the calculation of the calibration coefficients on completion of the calibration executed by the SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.SAVE method.
<i>Range</i>	from 1 to 4
<i>Out of Range</i>	An error occurs. Error code: 222.
<i>Syntax</i>	<i>app.SCPI.SENSe(Ch).CORRection.COLLect.METHod.SOLT1</i> = 1
<i>Equivalent Softkeys</i>	Calibration > Calibrate > 1-Port SOL Cal > Select Port

SCPI.SENSe(*Ch*).CORRection.COLLect.METHod.SOLT2

<i>Object Type</i>	Property (write only)
<i>Data Type</i>	Variant (array of long)
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)

<i>Description</i>	Selects the port and sets the <i>full 2-port calibration</i> type for the calculation of the calibration coefficients on completion of the calibration executed by the SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.SAVE method. The array contains 2 elements: <i>Data(0)</i> specifies a port for full 2-port calibration; <i>Data(1)</i> specifies a port for full 2-port calibration.
<i>Range</i>	Port number is 1 to 4. Array elements can not contain the same port numbers.
<i>Out of Range</i>	If an incorrect port number is specified, an error occurs (error code: 222). If the same port numbers are specified, an error occurs (error code: 220).
<i>Syntax</i>	<i>app</i> .SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.METHod.SOLT2 = Array(1, 2)
<i>Equivalent Softkeys</i>	Calibration > Calibrate > 2-Port SOLT Cal > Select Ports

SCPI.SENSe(*Ch*).CORRection.COLLect.METHOD.SOLT3

<i>Object Type</i>	Property (write only)
<i>Data Type</i>	Variant (array of long)
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	Selects the port and sets the <i>full 3-port calibration</i> type for the calculation of the calibration coefficients on completion of the calibration executed by the SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.SAVE method. The array contains 3 elements: <i>Data(0)</i> specifies a port for full 3-port calibration; <i>Data(1)</i> specifies a port for full 3-port calibration; <i>Data(2)</i> specifies a port for full 3-port calibration.
<i>Range</i>	Port number is 1 to 4. Array elements can not contain the same port numbers.
<i>Out of Range</i>	If an incorrect port number is specified, an error occurs (error code: 222). If the same port numbers are specified, an error occurs (error code: 220).
<i>Syntax</i>	<i>app</i> .SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.METHOD.SOLT3 = Array(1, 2, 4)
<i>Equivalent Softkeys</i>	Calibration > Calibrate > 3-Port SOLT Cal > Select Ports

SCPI.SENSe(*Ch*).CORRection.COLLect.METHOD.SOLT4

<i>Object Type</i>	Property (write only)
<i>Data Type</i>	Variant (array of long)
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	Selects the port and sets the <i>full 4-port calibration</i> type for the calculation of the calibration coefficients on completion of the calibration executed by the SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.SAVE method. The array contains 4 elements: <ul style="list-style-type: none"> <i>Data(0)</i> specifies a port for full 3-port calibration; <i>Data(1)</i> specifies a port for full 3-port calibration; <i>Data(2)</i> specifies a port for full 3-port calibration; <i>Data(3)</i> specifies a port for full 3-port calibration.
<i>Range</i>	Port number is 1 to 4. Array elements can not contain the same port numbers.
<i>Out of Range</i>	If an incorrect port number is specified, an error occurs (error code: 222). If the same port numbers are specified, an error occurs (error code: 220).
<i>Syntax</i>	<i>app</i> .SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.METHOD.SOLT4 = Array(1, 2, 3, 4)
<i>Equivalent Softkeys</i>	Calibration > Calibrate > 4-Port SOLT Cal > Select Ports

SCPI.SENSe(*Ch*).CORRection.COLLect.METHOD.TRL2

<i>Object Type</i>	Property (write only)
<i>Data Type</i>	Variant (array of long)
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	Selects the port and sets the <i>2-port TRL calibration</i> type for the calculation of the calibration coefficients on completion of the calibration executed by the SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.SAVE method. The array contains 2 elements: <i>Data(0)</i> specifies a port for 2-port TRL calibration; <i>Data(1)</i> specifies a port for 2-port TRL calibration.
<i>Range</i>	Port number is 1 to 4. Array elements can not contain the same port numbers.
<i>Out of Range</i>	If an incorrect port number is specified, an error occurs (error code: 222). If the same port numbers are specified, an error occurs (error code: 220).
<i>Syntax</i>	<i>app</i> .SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.METHOD.TRL2 = Array(1, 2)
<i>Equivalent Softkeys</i>	Calibration > Calibrate > 2-Port TRL Cal > Select Ports

SCPI.SENSe(*Ch*).CORRection.COLLect.METHOD.TRL3

<i>Object Type</i>	Property (write only)
<i>Data Type</i>	Variant (array of long)
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	Selects the port and sets the <i>3-port TRL calibration</i> type for the calculation of the calibration coefficients on completion of the calibration executed by the SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.SAVE method. The array contains 3 elements: <i>Data(0)</i> specifies a port for 3-port TRL calibration; <i>Data(1)</i> specifies a port for 3-port TRL calibration; <i>Data(2)</i> specifies a port for 3-port TRL calibration.
<i>Range</i>	Port number is 1 to 4. Array elements can not contain the same port numbers.
<i>Out of Range</i>	If an incorrect port number is specified, an error occurs (error code: 222). If the same port numbers are specified, an error occurs (error code: 220).
<i>Syntax</i>	<i>app</i> .SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.METHOD.TRL3 = Array(1, 2, 3)
<i>Equivalent Softkeys</i>	Calibration > Calibrate > 3-Port TRL Cal > Select Ports

SCPI.SENSe(*Ch*).CORRection.COLLect.METHOD.TRL4

<i>Object Type</i>	Property (write only)
<i>Data Type</i>	Variant (array of long)
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	Selects the port and sets the <i>4-port TRL calibration</i> type for the calculation of the calibration coefficients on completion of the calibration executed by the SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.SAVE method. The array contains 4 elements: <ul style="list-style-type: none"> <i>Data(0)</i> specifies a port for 4-port TRL calibration; <i>Data(1)</i> specifies a port for 4-port TRL calibration; <i>Data(2)</i> specifies a port for 4-port TRL calibration; <i>Data(3)</i> specifies a port for 4-port TRL calibration.
<i>Range</i>	Port number is 1 to 4. Array elements can not contain the same port numbers.
<i>Out of Range</i>	If an incorrect port number is specified, an error occurs (error code: 222). If the same port numbers are specified, an error occurs (error code: 220).
<i>Syntax</i>	<i>app</i> .SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.METHOD.TRL4 = Array(1, 2, 3, 4)
<i>Equivalent Softkeys</i>	Calibration > Calibrate > 4-Port TRL Cal > Select Ports

SCPI.SENSe(*Ch*).CORRection.COLLect.METHOD.TYPE

<i>Object Type</i>	Property (read only)
<i>Data Type</i>	String
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The calibration type selected for calculating of the calibration coefficients on completion of the calibration executed by the SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.SAVE method.

<i>Range</i>	"RESPO" : Response (Open) "RESPS" : Response (Short) "RESPT" : Response (Thru) "1PATH" : One path 2–port calibration "SOLT1" : Full 1–port calibration "SOLT2" : Full 2–port calibration "SOLT3" : Full 3–port calibration "SOLT4" : Full 4–port calibration "TRL2" : 2–port TRL calibration "TRL3" : 3–port TRL calibration "TRL4" : 4–port TRL calibration "NONE" : Not defined
<i>Syntax</i>	Dim <i>Param</i> As String <i>Param</i> = app.SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.METHod.TYPE
<i>Equivalent Softkeys</i>	None

SCPI.SENSe(*Ch*).CORRection.COLLect.SAVE

<i>Object Type</i>	Method
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	Calculates the calibration coefficients from the calibration standards measurements depending on the selected calibration type. On completion of the method, all the calibration standards measurements are cleared and the error correction automatically turns ON. At the attempt to execute this method before all the needed standards are measured, an error occurs and the method is ignored.
<i>Syntax</i>	<i>app</i> .SCPI.SENSe(<i>Ch</i>).CORRection.COLLect.SAVE

<i>Related Commands</i>	<p>Calibration type selection:</p> <pre>SCPI.SENSe(Ch).CORRection.COLlect.METHOD.RESPonse.OPEN SCPI.SENSe(Ch).CORRection.COLlect.METHOD.RESPonse.SHORt SCPI.SENSe(Ch).CORRection.COLlect.METHOD.RESPonse.THRU SCPI.SENSe(Ch).CORRection.COLlect.METHOD.ERESPonse SCPI.SENSe(Ch).CORRection.COLlect.METHOD.SOLT1 SCPI.SENSe(Ch).CORRection.COLlect.METHOD.SOLT2 SCPI.SENSe(Ch).CORRection.COLlect.METHOD.SOLT3 SCPI.SENSe(Ch).CORRection.COLlect.METHOD.SOLT4 SCPI.SENSe(Ch).CORRection.COLlect.METHOD.TRL2 SCPI.SENSe(Ch).CORRection.COLlect.METHOD.TRL3 SCPI.SENSe(Ch).CORRection.COLlect.METHOD.TRL4</pre> <p>Calibration standards measurement:</p> <pre>SCPI.SENSe(Ch).CORRection.COLlect.ACQuire.ISOLation SCPI.SENSe(Ch).CORRection.COLlect.ACQuire.LOAD SCPI.SENSe(Ch).CORRection.COLlect.ACQuire.OPEN SCPI.SENSe(Ch).CORRection.COLlect.ACQuire.SHORt SCPI.SENSe(Ch).CORRection.COLlect.ACQuire.THRU SCPI.SENSe(Ch).CORRection.COLlect.ACQuireTRLLine SCPI.SENSe(Ch).CORRection.COLlect.ACQuireTRLReflect SCPI.SENSe(Ch).CORRection.COLlect.ACQuireTRLThru</pre>
<i>Equivalent Softkeys</i>	<p>Calibration > Calibrate ></p> <p>Response (Open) </p> <p>Response (Short) </p> <p>Response (Thru) </p> <p>One Path 2–Port Cal </p> <p>1–Port SOL Cal </p> <p>2–Port SOLT Cal </p> <p>3–Port SOLT Cal </p> <p>4–Port SOLT Cal </p> <p>2–Port TRL Cal </p> <p>3–Port TRL Cal </p> <p>4–Port TRL Cal </p> <p>> Apply</p>

SCPI.SENSE(*Ch*).CORRection.COLLect.SIMPlified.SAVE

<i>Object Type</i>	Method
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	Same as SCPI.SENSE(<i>Ch</i>).CORRection.COLLect.SAVE method. Allows to accomplish 3 and 4 port calibration with non complete set of standard measurements. About omissible calibration standards see user guide chapter "Simplified calibration".
<i>Syntax</i>	<i>app</i> .SCPI.SENSE(<i>Ch</i>).CORRection.COLLect.SIMPlified.SAVE
<i>Related Commands</i>	<p>Calibration type selection:</p> <p>SCPI.SENSE(<i>Ch</i>).CORRection.COLLect.METHOD.SOLT3 SCPI.SENSE(<i>Ch</i>).CORRection.COLLect.METHOD.SOLT4 SCPI.SENSE(<i>Ch</i>).CORRection.COLLect.METHOD.TRL3 SCPI.SENSE(<i>Ch</i>).CORRection.COLLect.METHOD.TRL4</p> <p>Calibration standards measurement:</p> <p>SCPI.SENSE(<i>Ch</i>).CORRection.COLLect.ACQUIRE.ISOLATION SCPI.SENSE(<i>Ch</i>).CORRection.COLLect.ACQUIRE.THRU SCPI.SENSE(<i>Ch</i>).CORRection.COLLect.ACQUIRE.TRLLINE</p>
<i>Equivalent Softkeys</i>	<p>Calibration > Calibrate > 3-Port SOLT Cal 4-Port SOLT Cal 3-Port TRL Cal 4-Port TRL Cal </p> <p>> Apply</p>

SCPI.SENSE(*Ch*).CORRection.EXTension.PORT(*Pt*).FREQuency(*Ls*)

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double
<i>Target</i>	Port <i>Pt</i> of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Pt</i> : port number 1–4 (see Table 2 on page 25)
<i>Description</i>	The value of the frequency at the point number <i>Ls</i> for calculation of the loss for the port extension function, <i>Ls</i> : point number 1–2 (see Table 8 on page 283)

<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	1E9
<i>Unit</i>	Hz (Hertz)
<i>Syntax</i>	<p>Dim <i>Value</i> As Double</p> <p><i>Value</i> = app.SCPI.SENSe(<i>Ch</i>).CORRection.EXTension.PORT(<i>Pt</i>).FREQuency(<i>Ls</i>)</p> <p>app.SCPI.SENSe(<i>Ch</i>).CORRection.EXTension.PORT(<i>Pt</i>).FREQuency(<i>Ls</i>) = 100E6</p>
<i>Equivalent Softkeys</i>	Calibration > Port Extensions > Loss Port n > Freq1 Freq2

Table 8. Ls: Point Number

<i>Data Type</i>	Long
<i>Description</i>	The point number for the loss setting in the port extension function.
<i>Range</i>	1 or 2
<i>Out of Range</i>	An error occurs. Error code: 222.
<i>Notes</i>	If the point number is not specified, it is taken as equal to 1.

SCPI.SENSE(*Ch*).CORRection.EXTension.PORT(*Pt*).INCLude(*Ls*).STATe

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Boolean
<i>Target</i>	Port <i>Pt</i> of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Pt</i> : port number 1–4 (see Table 2 on page 25)
<i>Description</i>	The ON/OFF state of the loss compensation at the point number <i>Ls</i> to calculate the loss for the port extension function, <i>Ls</i> : point number 1–2 (see Table 8 on page 283)
<i>Allowable Values</i>	True: Loss compensation ON False: Loss compensation OFF
<i>Preset Value</i>	False
<i>Syntax</i>	Dim <i>Status</i> As Boolean <i>Status</i> = app.SCPI.SENSE(<i>Ch</i>).CORRection.EXTension.PORT(<i>Pt</i>).INCLude(<i>Ls</i>).STATe app.SCPI.SENSE(<i>Ch</i>).CORRection.EXTension.PORT(<i>Pt</i>).INCLude(<i>Ls</i>).STATe = True
<i>Equivalent Softkeys</i>	Calibration > Port Extensions > Loss Port n > Loss1 Loss2

SCPI.SENSE(*Ch*).CORRection.EXTension.PORT(*Pt*).LDC

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double
<i>Target</i>	Port <i>Pt</i> of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Pt</i> : port number 1–4 (see Table 2 on page 25)
<i>Description</i>	The loss value at DC for the loss calculation of the port extension function.
<i>Range</i>	from –200 to 200
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.

<i>Preset Value</i>	0
<i>Unit</i>	dB (decibel)
<i>Syntax</i>	<p>Dim <i>Value</i> As Double <i>Value</i> = app.SCPI.SENSE(<i>Ch</i>).CORRection.EXTension.PORT(<i>Pt</i>).LDC <i>app.SCPI.SENSE(Ch).CORRection.EXTension.PORT(Pt).LDC</i> = 10</p>
<i>Equivalent Softkeys</i>	Calibration > Port Extensions > Loss Port n > Loss at DC

SCPI.SENSE(*Ch*).CORRection.EXTension.PORT(*Pt*).LOSS(*Ls*)

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double
<i>Target</i>	Port <i>Pt</i> of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Pt</i> : port number 1–4 (see Table 2 on page 25)
<i>Description</i>	The loss value at the point number <i>Ls</i> to calculate the loss for the port extension function, <i>Ls</i> : point number 1–2 (see Table 7 on page 236)
<i>Range</i>	from –200 to 200
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	0
<i>Unit</i>	dB (decibel)
<i>Syntax</i>	<p>Dim <i>Value</i> As Double <i>Value</i> = app.SCPI.SENSE(<i>Ch</i>).CORRection.EXTension.PORT(<i>Pt</i>).LOSS(<i>Ls</i>) <i>app.SCPI.SENSE(Ch).CORRection.EXTension.PORT(Pt).LOSS(Ls)</i> = 10</p>
<i>Equivalent Softkeys</i>	Calibration > Port Extensions > Loss Port n > Loss1 Loss2

SCPI.SENSE(*Ch*).CORRection.EXTension.PORT(*Pt*).TIME

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double
<i>Target</i>	Port Pt of channel Ch , Ch : channel number 1–16 (see Table 1 on page 25) Pt : port number 1–4 (see Table 2 on page 25)
<i>Description</i>	The electrical delay value for the port extension function.
<i>Range</i>	from –10 to 10
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	0
<i>Unit</i>	s (second)
<i>Syntax</i>	Dim Value As Double $Value = app.SCPI.SENSe(Ch).CORRection.EXTension.PORT(Pt).TIME$ $app.SCPI.SENSe(Ch).CORRection.EXTension.PORT(Pt).TIME = 10E-9$
<i>Equivalent Softkeys</i>	Calibration > Port Extensions > Extension Port n

SCPI.SENSe(*Ch*).CORRection.EXTension.STATE

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Boolean
<i>Target</i>	Channel Ch , Ch : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The ON/OFF state of the port extension function.
<i>Allowable Values</i>	True: Port extension function ON False: Port extension function OFF
<i>Preset Value</i>	False

<i>Syntax</i>	Dim <i>Status</i> As Boolean <i>Status</i> = app.SCPI.SENSe(<i>Ch</i>).CORRection.EXTension.STATE app.SCPI.SENSe(<i>Ch</i>).CORRection.EXTension.STATE = True
<i>Equivalent Softkeys</i>	Calibration > Port Extensions > Extensions

SCPI.SENSe(*Ch*).CORRection.INFormation

<i>Object Type</i>	Property (read only)
<i>Data Type</i>	String
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The calibration information string.
<i>Syntax</i>	Dim <i>CalInfo</i> As String <i>CalInfo</i> = app.SCPI.SENSe(<i>Ch</i>).CORRection.INFormation
<i>Equivalent Softkeys</i>	none

SCPI.SENSe(*Ch*).CORRection.IMPedance.INPut.MAGNitude

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The system characteristic impedance (<i>Z0</i>) value.
<i>Range</i>	from 0.001 to 1000
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	50
<i>Unit</i>	Ω (Ohm)
<i>Syntax</i>	Dim <i>Value</i> As Double <i>Value</i> = app.SCPI.SENSe.CORRection.IMPedance.INPut.MAGNitude app.SCPI.SENSe.CORRection.IMPedance.INPut.MAGNitude = 50

<i>Equivalent Softkeys</i>	Calibration > System Z0
----------------------------	-----------------------------------

SCPI.SENSe(*Ch*).CORRection.OFFSet.CLEar

<i>Object Type</i>	Method
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	Clears the scalar mixer calibration coefficient table.
<i>Syntax</i>	<i>app.SCPI.SENSe(Ch).CORRection.OFFSet.CLEar</i>
<i>Equivalent Softkeys</i>	None

SCPI.SENSe(*Ch*).CORRection.OFFSet.COLLect.ACQuire.LOAD

<i>Object Type</i>	Property (write only)
<i>Data Type</i>	Variant (array of long)
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	<p>Measures the calibration data of the load standard of the specified port when the frequency offset feature is on (scalar mixer cal).</p> <p>The array contains 2 elements:</p> <ul style="list-style-type: none"> <i>Port(0)</i> Measurement port number; <i>Port(1)</i> Frequency port number.
<i>Range</i>	Port number is 1 to 4. The array elements can contain the same port numbers.
<i>Out of Range</i>	If an incorrect port number is specified, an error occurs (error code: 222).
<i>Syntax</i>	<i>app.SCPI.SENSe(Ch).CORRection.OFFSet.COLLect.ACQuire.LOAD</i> = Array(1, 2)
<i>Notes</i>	The property writing starts the measurement for the channel independently of the trigger initiation and trigger source settings. The function of the property writing waits for the completion of the measurement.
<i>Equivalent Softkeys</i>	Calibration > Mixer/Converter Calibration > Scalar Mixer Calibration > Reflection Port n > Port n @Freq m Load

SCPI.SENSe(*Ch*).CORRection.OFFSet.COLLect.ACQuire.OPEN

<i>Object Type</i>	Property (write only)
<i>Data Type</i>	Variant (array of long)
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	<p>Measures the calibration data of the open standard of the specified port when the frequency offset feature is on (scalar mixer cal).</p> <p>The array contains 2 elements:</p> <p style="padding-left: 40px;"><i>Port(0)</i> Measurement port number;</p> <p style="padding-left: 40px;"><i>Port(1)</i> Frequency port number.</p>
<i>Range</i>	Port number is 1 to 4. The array elements can contain the same port numbers.
<i>Out of Range</i>	If an incorrect port number is specified, an error occurs (error code: 222).
<i>Syntax</i>	<i>app.SCPI.SENSe(Ch).CORRection.OFFSet.COLLect.ACQuire.OPEN</i> = Array(1, 2)
<i>Notes</i>	The property writing starts the measurement for the channel independently of the trigger initiation and trigger source settings. The function of the property writing waits for the completion of the measurement.
<i>Equivalent Softkeys</i>	Calibration > Mixer/Converter Calibration > Scalar Mixer Calibration > Reflection Port n > Port n @Freq m Open

SCPI.SENSe(*Ch*).CORRection.OFFSet.COLLect.ACQuire.SHORT

<i>Object Type</i>	Property (write only)
<i>Data Type</i>	Variant (array of long)
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	<p>Measures the calibration data of the short standard of the specified port when the frequency offset feature is on (scalar mixer cal).</p> <p>The array contains 2 elements:</p> <p style="padding-left: 40px;"><i>Port(0)</i> Measurement port number;</p> <p style="padding-left: 40px;"><i>Port(1)</i> Frequency port number.</p>
<i>Range</i>	Port number is 1 to 4. The array elements can contain the same port numbers.
<i>Out of Range</i>	If an incorrect port number is specified, an error occurs (error code: 222).
<i>Syntax</i>	<i>app.SCPI.SENSe(Ch).CORRection.OFFSet.COLLect.ACQuire.SHORT</i> = Array(1, 2)
<i>Notes</i>	The property writing starts the measurement for the channel independently of the trigger initiation and trigger source settings. The function of the property writing waits for the completion of the measurement.
<i>Equivalent Softkeys</i>	Calibration > Mixer/Converter Calibration > Scalar Mixer Calibration > Reflection Port n > Port n @Freq m Short

SCPI.SENSe(*Ch*).CORRection.OFFSet.COLLect.ACQuire.THRU

<i>Object Type</i>	Property (write only)
<i>Data Type</i>	Variant (array of long)
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	<p>Measures the calibration data of the thru standard of the specified port when the frequency offset feature is on (scalar mixer cal).</p> <p>The array contains 2 elements:</p> <p style="padding-left: 40px;"><i>Port(0)</i> Response port number;</p> <p style="padding-left: 40px;"><i>Port(1)</i> Stimulus port number.</p>
<i>Range</i>	Port number is 1 to 4. The array elements can not contain the same port numbers.
<i>Out of Range</i>	If an incorrect port number is specified, an error occurs (error code: 222). If the same port numbers are specified, an error occurs (error code: 220).
<i>Syntax</i>	<i>app</i> .SCPI.SENSe(<i>Ch</i>).CORRection.OFFSet.COLLect.ACQuire.THRU = Array(1, 2)
<i>Notes</i>	The property writing starts the measurement for the channel independently of the trigger initiation and trigger source settings. The function of the property writing waits for the completion of the measurement.
<i>Equivalent Softkeys</i>	Calibration > Mixer/Converter Calibration > Scalar Mixer Calibration > Reflection Port n > Port n @Freq m Thru

SCPI.SENSe(*Ch*).CORRection.OFFSet.COLLect.ACQuire.PMETer

<i>Object Type</i>	Property (write only)
<i>Data Type</i>	Variant (array of long)
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	Measures the scalar-mixer calibration data using the power meter when the frequency offset feature is ON. The array contains 3 elements: <i>Port(0)</i> Measurement port number; <i>Port(1)</i> Frequency port number. <i>Port(2)</i> Reserved.
<i>Range</i>	Port number is 1 to 4. The array elements can contain the same port numbers.
<i>Out of Range</i>	If an incorrect port number is specified, an error occurs (error code: 222).
<i>Syntax</i>	<i>app.SCPI.SENSe(Ch).CORRection.OFFSet.COLLect.ACQuire.PMETer</i> = Array(1, 2, 0)
<i>Notes</i>	The property writing starts the measurement for the channel independently of the trigger initiation and trigger source settings. The function of the property writing waits for the completion of the measurement.
<i>Equivalent Softkeys</i>	Calibration > Mixer/Converter Calibration > Scalar Mixer Calibration > Power > Port n @Freq m

SCPI.SENSe(*Ch*).CORRection.OFFSet.COLLect.CLEAR

<i>Object Type</i>	Method
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	Clears the calibration measurement data when the frequency offset feature is ON (scalar mixer calibration).
<i>Syntax</i>	<i>app.SCPI.SENSe(Ch).CORRection.OFFSet.COLLect.CLEAR</i>
<i>Equivalent Softkeys</i>	Calibration > Mixer/Converter Calibration > Scalar Mixer Calibration > Cancel

SCPI.SENSe(*Ch*).CORRection.OFFSet.COLLect.METHOD.SMIX2

<i>Object Type</i>	Property (write only)
<i>Data Type</i>	Variant (array of long)
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	Selects the ports and sets the <i>scalar mixer calibration</i> type when the frequency offset feature is on for the calculation of the calibration coefficients on completion of the calibration executed by the SCPI.SENSe(<i>Ch</i>).CORRection.OFFSet.COLLect.SAVE method. The array contains 2 elements: <i>Port(0)</i> Port number 1; <i>Port(1)</i> Port number 2.
<i>Range</i>	Port number is 1 to 4. The array elements can not contain the same port numbers.
<i>Out of Range</i>	If an incorrect port number is specified, an error occurs (error code: 222). If the same port numbers are specified, an error occurs (error code: 220).
<i>Syntax</i>	<i>app</i> .SCPI.SENSe(<i>Ch</i>).CORRection.OFFSet.COLLect.METHOD.SMIX2 = Array(2, 1)
<i>Equivalent Softkeys</i>	Calibration > Mixer/Converter Calibration > Scalar Mixer Calibration

SCPI.SENSe(*Ch*).CORRection.OFFSet.COLLect.SAVE

<i>Object Type</i>	Method
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	<p>Calculates the calibration coefficient for the selected calibration type (scalar mixer calibration only) from the calibration data measured with the frequency offset feature is ON.</p> <p>If this command is executed before all necessary calibration data for calculating the calibration coefficient is measured, an error occurs when executed.</p>
<i>Syntax</i>	<i>app.SCPI.SENSe(Ch).CORRection.OFFSet.COLLect.SAVE</i>
<i>Related Commands</i>	SCPI.SENSe(<i>Ch</i>).CORRection.OFFSet.COLLect.METHOD.SMIX2 SCPI.SENSe(<i>Ch</i>).CORRection.OFFSet.COLLect.ACQuire.LOAD SCPI.SENSe(<i>Ch</i>).CORRection.OFFSet.COLLect.ACQuire.OPEN SCPI.SENSe(<i>Ch</i>).CORRection.OFFSet.COLLect.ACQuire.SHORT SCPI.SENSe(<i>Ch</i>).CORRection.OFFSet.COLLect.ACQuire.THRU SCPI.SENSe(<i>Ch</i>).CORRection.OFFSet.COLLect.ACQuire.PMETer
<i>Equivalent Softkeys</i>	Calibration > Mixer/Converter Calibration > Scalar Mixer Calibration > Apply

SCPI.SENSe(*Ch*).CORRection.RECeiver(*Pt*).COLLect.ACQuire

<i>Object Type</i>	Property (write only)
<i>Data Type</i>	Long
<i>Target</i>	Port <i>Pt</i> of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Pt</i> : port number 1–4 (see Table 2 on page 25)
<i>Description</i>	The property writing executes the receiver calibration (T – channel) for the specified port <i>Pt</i> , using the specified source port <i>Src</i> to the right of the equal sign. Then executes the receiver calibration (R – channel) for the specified port <i>Pt</i> , using port <i>Pt</i> as source (the specified source port <i>Src</i> is ignored).
<i>Range</i>	The number of the source port from 1 to 4.
<i>Out of Range</i>	Error occurs. Error code: 222.
<i>Syntax</i>	<i>app.SCPI.SENSe(Ch).CORRection.RECeiver(Pt).COLLect.ACQuire = Src</i>
<i>Notes</i>	The property writing triggers the channel sweep independently of its current mode (continuous, single, hold) and trigger source setting. The function of the property writing waits for the completion of the calibration.
<i>Equivalent Softkeys</i>	Calibration > Receiver Calibration > Calibrate Both

SCPI.SENSe(*Ch*).CORRection.RECeiver(*Pt*).COLLect.RCHannel.ACQuire

<i>Object Type</i>	Method
<i>Target</i>	Port <i>Pt</i> of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Pt</i> : port number 1–4 (see Table 2 on page 25)
<i>Description</i>	Method executes the receiver calibration (R – channel) for the specified port <i>Pt</i> , using port <i>Pt</i> as source.
<i>Range</i>	The number of the source port from 1 to 4.
<i>Out of Range</i>	Error occurs. Error code: 222.
<i>Syntax</i>	<i>app</i> .SCPI.SENSe(<i>Ch</i>).CORRection.RECeiver(<i>Pt</i>).COLLect.ACQuire = <i>Src</i>
<i>Notes</i>	The property writing triggers the channel sweep independently of its current mode (continuous, single, hold) and trigger source setting. The function of the property writing waits for the completion of the calibration.
<i>Equivalent Softkeys</i>	Calibration > Receiver Calibration > Calibrate Reference Receiver

SCPI.SENSe(*Ch*).CORRection.RECeiver(*Pt*).COLLect.TCHannel.ACQuire

<i>Object Type</i>	Property (write only)
<i>Data Type</i>	Long
<i>Target</i>	Port <i>Pt</i> of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Pt</i> : port number 1–4 (see Table 2 on page 25)
<i>Description</i>	The property writing executes the receiver calibration (T – channel) for the specified port <i>Pt</i> , using the specified source port <i>Src</i> to the right of the equal sign.
<i>Range</i>	The number of the source port from 1 to 4.
<i>Out of Range</i>	Error occurs. Error code: 222.
<i>Syntax</i>	<i>app.SCPI.SENSe(Ch).CORRection.RECeiver(Pt).COLLect.ACQuire = Src</i>
<i>Notes</i>	The property writing triggers the channel sweep independently of its current mode (continuous, single, hold) and trigger source setting. The function of the property writing waits for the completion of the calibration.
<i>Equivalent Softkeys</i>	Calibration > Receiver Calibration > Calibrate Test Receiver

SCPI.SENSe(*Ch*).CORRection.RECeiver(*Pt*).OFFSet.AMPlitude

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double
<i>Target</i>	Port <i>Pt</i> of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Pt</i> : port number 1–4 (see Table 2 on page 25)
<i>Description</i>	The power offset value for Receiver Calibration. Receiver calibration is done at the condition of <source power> + <Specified offset>, for selected channel (<i>Ch</i>).
<i>Allowable Values</i>	-200 to 200.

<i>Unit</i>	dB (decibel)
<i>Preset Value</i>	0
<i>Syntax</i>	<p>Dim <i>Offset</i> As Double</p> <p><i>Offset</i> = app.SCPI.SENSE(<i>Ch</i>).CORRection.RECeiver(<i>Pt</i>).OFFSet.AMPLitude</p> <p>app.SCPI.SENSE(<i>Ch</i>).CORRection.RECeiver(<i>Pt</i>).OFFSet.AMPLitude = -10</p>
<i>Equivalent Softkeys</i>	Calibration > Receiver Calibration > Power Offset

SCPI.SENSE(*Ch*).CORRection.RECeiver(*Pt*).STATE

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Boolean
<i>Target</i>	Port <i>Pt</i> of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Pt</i> : port number 1–4 (see Table 2 on page 25)
<i>Description</i>	The ON/OFF state of the receiver correction for the port <i>Pt</i> .
<i>Allowable Values</i>	True: Receiver correction ON False: Receiver correction OFF
<i>Preset Value</i>	False
<i>Syntax</i>	<p>Dim <i>Status</i> As Boolean</p> <p><i>Status</i> = app.SCPI.SENSE(<i>Ch</i>).CORRection.RECeiver(<i>Pt</i>).STATE</p> <p>app.SCPI.SENSE(<i>Ch</i>).CORRection.RECeiver(<i>Pt</i>).STATE = True</p>
<i>Equivalent Softkeys</i>	Calibration > Receiver Calibration > Correction

SCPI.SENSE(*Ch*).CORRection.STATE

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Boolean
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The ON/OFF state of the error correction.
<i>Allowable Values</i>	True: Error correction ON False: Error correction OFF
<i>Preset Value</i>	False

<i>Syntax</i>	Dim <i>Status</i> As Boolean <i>Status</i> = app.SCPI.SENSE(<i>Ch</i>).CORRection.STATE app.SCPI.SENSE(<i>Ch</i>).CORRection.STATE = True
<i>Equivalent Softkeys</i>	Calibration > Correction

SCPI.SENSE(*Ch*).CORRection.TYPE(*Tr*)

<i>Object Type</i>	Property (read only)																		
<i>Data Type</i>	Variant (Variant array)																		
<i>Target</i>	Trace <i>Tr</i> of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Tr</i> : trace number 1–16 (see Table 3 on page 36)																		
<i>Description</i>	The information about the applied calibration type and the port numbers for the specified trace. The array contains 5 elements: <table> <tr> <td><i>Data(0)</i></td> <td>calibration type (see below);</td> </tr> <tr> <td><i>Data(1)</i></td> <td>the port number to which the calibration is applied;</td> </tr> <tr> <td><i>Data(2)</i></td> <td>the port number to which the calibration is applied.</td> </tr> <tr> <td><i>Data(3)</i></td> <td>the port number to which the calibration is applied.</td> </tr> <tr> <td><i>Data(4)</i></td> <td>the port number to which the calibration is applied.</td> </tr> </table>	<i>Data(0)</i>	calibration type (see below);	<i>Data(1)</i>	the port number to which the calibration is applied;	<i>Data(2)</i>	the port number to which the calibration is applied.	<i>Data(3)</i>	the port number to which the calibration is applied.	<i>Data(4)</i>	the port number to which the calibration is applied.								
<i>Data(0)</i>	calibration type (see below);																		
<i>Data(1)</i>	the port number to which the calibration is applied;																		
<i>Data(2)</i>	the port number to which the calibration is applied.																		
<i>Data(3)</i>	the port number to which the calibration is applied.																		
<i>Data(4)</i>	the port number to which the calibration is applied.																		
<i>Range</i>	Calibration type in the element <i>Data(0)</i> : <table> <tr> <td>"RESPO"</td> <td>: Response (Open)</td> </tr> <tr> <td>"RESPS"</td> <td>: Response (Short)</td> </tr> <tr> <td>"RESPT"</td> <td>: Response (Thru)</td> </tr> <tr> <td>"SOLT1"</td> <td>: Full 1–port calibration</td> </tr> <tr> <td>"SOLT2"</td> <td>: Full 2–port calibration</td> </tr> <tr> <td>"SOLT3"</td> <td>: Full 3–port calibration</td> </tr> <tr> <td>"SOLT4"</td> <td>: Full 4–port calibration</td> </tr> <tr> <td>"1PATH"</td> <td>: One path 2–port calibration</td> </tr> <tr> <td>"NONE"</td> <td>: Not defined</td> </tr> </table>	"RESPO"	: Response (Open)	"RESPS"	: Response (Short)	"RESPT"	: Response (Thru)	"SOLT1"	: Full 1–port calibration	"SOLT2"	: Full 2–port calibration	"SOLT3"	: Full 3–port calibration	"SOLT4"	: Full 4–port calibration	"1PATH"	: One path 2–port calibration	"NONE"	: Not defined
"RESPO"	: Response (Open)																		
"RESPS"	: Response (Short)																		
"RESPT"	: Response (Thru)																		
"SOLT1"	: Full 1–port calibration																		
"SOLT2"	: Full 2–port calibration																		
"SOLT3"	: Full 3–port calibration																		
"SOLT4"	: Full 4–port calibration																		
"1PATH"	: One path 2–port calibration																		
"NONE"	: Not defined																		
<i>Syntax</i>	Dim <i>CalInfo</i> As Variant <i>CalInfo</i> = app.SCPI.SENSE(<i>Ch</i>).CORRection.TYPE(<i>Tr</i>)																		

<i>Equivalent Softkeys</i>	None
----------------------------	-------------

SCPI.SENSE(*Ch*).DATA.CORRdata(*Param*)

<i>Object Type</i>	Property (read only)
<i>Data Type</i>	Variant (array of double)
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Parameter</i>	<i>Param</i> of String type selects S-parameter: "S11", "S12", "S13", "S14", "S21", "S22", "S23", "S24", "S31", "S32", "S33", "S34", "S41", "S42", "S43", "S44"
<i>Description</i>	The corrected data array. The corrected measurements are complex numbers. Also, see section “Measurement Data Arrays” on page 20. The array size is 2N, where N is the number of measurement points. For the n-th point, where n from 1 to N: <i>Data</i> (2n–2) the real part of corrected measurement; <i>Data</i> (2n–1) the imaginary part of corrected measurement. The index of the array starts from 0.
<i>Syntax</i>	Dim <i>Data</i> As Variant <i>Data</i> = app.SCPI.SENSE(<i>ch</i>).DATA.CORRdata("S11")
<i>Equivalent Softkeys</i>	None

SCPI.SENSe(*Ch*).DATA.RAWData(*Param*)

<i>Object Type</i>	Property (read only)
<i>Data Type</i>	Variant (array of double)
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Parameter</i>	<i>Param</i> of String type selects S-parameter: "S11", "S12", "S13", "S14", "S21", "S22", "S23", "S24", "S31", "S32", "S33", "S34", "S41", "S42", "S43", "S44"
<i>Description</i>	The raw data array. The raw measurements are complex numbers. Also, see section “Measurement Data Arrays” on page 20. The array size is 2N, where N is the number of measurement points. For the n-th point, where n from 1 to N: <i>Data</i> (2n–2) the real part of corrected measurement; <i>Data</i> (2n–1) the imaginary part of corrected measurement. The index of the array starts from 0.
<i>Syntax</i>	Dim <i>Data</i> As Variant <i>Data</i> = app.SCPI.SENSe(<i>ch</i>).DATA.RAWData("S11")
<i>Equivalent Softkeys</i>	None

SCPI.SENSe(*Ch*).FREQuency.CENTer

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The stimulus center value of the sweep range for linear or logarithmic sweep types.
<i>Range</i>	from minimum to maximum frequency depend on model.
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	Center of frequency range depend on model.
<i>Unit</i>	Hz (Hertz)
<i>Syntax</i>	Dim <i>Value</i> As Double <i>Value</i> = app.SCPI.SENSe(<i>Ch</i>).FREQuency.CENTer <i>app.SCPI.SENSe(Ch).FREQuency.CENTer</i> = 1E9
<i>Equivalent Softkeys</i>	Stimulus > Center

SCPI.SENSe(*Ch*).FREQuency.CW

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The value of the fixed frequency for the power sweep.
<i>Range</i>	From minimum to maximum frequency depend on model.
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.

<i>Preset Value</i>	Frequency minimum.
<i>Unit</i>	Hz (Hertz)
<i>Syntax</i>	<p>Dim <i>Value</i> As Double <i>Value</i> = app.SCPI.SENSe(<i>Ch</i>).FREQuency.CW <i>app.SCPI.SENSe(Ch).FREQuency.CW</i> = 1E9</p>
<i>Equivalent Softkeys</i>	Stimulus > Power > CW Freq

SCPI.SENSe(*Ch*).FREQuency.DATA

<i>Object Type</i>	Property (read only)
<i>Data Type</i>	Variant (array of double)
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	<p>The array of the measurement points frequency for linear, logarithmic or segment sweep type.</p> <p>The array size is N, where N is the number of measurement points.</p> <p>For the n-th point, where n from 1 to N:</p> <p style="padding-left: 40px;"><i>Data(n-1)</i> the frequency value at the n-th measurement point.</p>
<i>Unit</i>	Hz (Hertz)
<i>Syntax</i>	<p>Dim <i>Data</i> As Variant <i>Data</i> = app. SCPI.SENSe(<i>Ch</i>).FREQuency.DATA</p>
<i>Equivalent Softkeys</i>	None

SCPI.SENSe(*Ch*).FREQuency.SPAN

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double

<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The stimulus span value of the sweep range for linear or logarithmic sweep types.
<i>Range</i>	from minimum to maximum frequency depend on model.
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	Full frequency span depend on model.
<i>Unit</i>	Hz (Hertz)
<i>Syntax</i>	<p>Dim <i>Value</i> As Double <i>Value</i> = app.SCPI.SENSe(<i>Ch</i>).FREQuency.SPAN <i>app.SCPI.SENSe(Ch).FREQuency.SPAN</i> = 2E9</p>
<i>Equivalent Softkeys</i>	Stimulus > Span

SCPI.SENSe(*Ch*).FREQuency.START

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The stimulus start value of the sweep range for linear or logarithmic sweep types.
<i>Range</i>	from minimum to maximum frequency depend on model.
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	Frequency minimum.
<i>Unit</i>	Hz (Hertz)

<i>Syntax</i>	Dim <i>Value</i> As Double <i>Value</i> = app.SCPI.SENSe(<i>Ch</i>).FREQuency.START <i>app.SCPI.SENSe(Ch).FREQuency.START</i> = 1E6
<i>Equivalent Softkeys</i>	Stimulus > Start

SCPI.SENSe(*Ch*).FREQuency.STOP

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The stimulus stop value of the sweep range for linear or logarithmic sweep types.
<i>Range</i>	from minimum to maximum frequency depend on model.
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	Frequency maximum.
<i>Unit</i>	Hz (Hertz)
<i>Syntax</i>	Dim <i>Value</i> As Double <i>Value</i> = app.SCPI.SENSe(<i>Ch</i>).FREQuency.STOP <i>app.SCPI.SENSe(Ch).FREQuency.STOP</i> = 1E6
<i>Equivalent Softkeys</i>	Stimulus > Stop

SCPI.SENSe(*Ch*).OFFSet.ADJust.CONTinuous.PERiod

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Long
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	Selects the period for continuous offset adjust feature: 1 – 3 sec; 2 – 10 sec; 3 – 30 sec.
<i>Range</i>	from 1 to 3
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	2
<i>Syntax</i>	Dim <i>Value</i> As Long <i>Value</i> = app.SCPI.SENSe(<i>Ch</i>).OFFSet.ADJust.PERiod <i>app.SCPI.SENSe(<i>Ch</i>).OFFSet.ADJust.PERiod</i> = 1
<i>Equivalent Softkeys</i>	Stimulus > Frequency Offset > Offset Adjust > Adjust Period

SCPI.SENSe(*Ch*).OFFSet.ADJust.CONTinuous.STATE

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Boolean
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The ON/OFF state of the continuous frequency offset adjust feature.
<i>Allowable Values</i>	True: continuous offset adjust feature is ON False: continuous offset adjust feature is OFF
<i>Preset Value</i>	False
<i>Syntax</i>	Dim <i>Status</i> As Boolean <i>Status</i> = app.SCPI.SENSe(<i>Ch</i>).OFFSet.ADJust.CONTinuous.STATE <i>app.SCPI.SENSe(<i>Ch</i>).OFFSet.ADJust.CONTinuous.STATE</i> = True
<i>Equivalent Softkeys</i>	Stimulus > Frequency Offset > Offset Adjust > Continuous Adjust

SCPI.SENSe(*Ch*).OFFSet.ADJust.EXECute

<i>Object Type</i>	Method
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	Executes the offset adjust when the frequency offset feature is ON.
<i>Syntax</i>	<i>app</i> .SCPI.SENSe(<i>Ch</i>).OFFset.ADJust.EXECute
<i>Equivalent Softkeys</i>	Stimulus > Frequency Offset > Offset Adjust > Adjust Immediate

SCPI.SENSe(*Ch*).OFFSet.ADJust.PORT

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Long
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	Selects the port number for frequency offset adjust feature.
<i>Range</i>	from 1 to 4
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	1
<i>Unit</i>	n/a
<i>Syntax</i>	<p>Dim <i>Value</i> As Long</p> <p><i>Value</i> = app.SCPI.SENSe(<i>Ch</i>).OFFset.ADJust.PORT</p> <p>app.SCPI.SENSe(<i>Ch</i>).OFFset.ADJust.PORT = 2</p>
<i>Equivalent Softkeys</i>	Stimulus > Frequency Offset > Offset Adjust > Select Port

SCPI.SENSe(*Ch*).OFFSet.ADJust.STATE

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Boolean
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The ON/OFF state of the frequency offset adjust feature.
<i>Allowable Values</i>	True: offset adjust feature is ON False: offset adjust feature is OFF
<i>Preset Value</i>	False
<i>Syntax</i>	<p>Dim <i>Status</i> As Boolean</p> <p><i>Status</i> = app.SCPI.SENSe(<i>Ch</i>).OFFSet.ADJust.STATE</p> <p>app.SCPI.SENSe(<i>Ch</i>).OFFSet.ADJust.STATE = True</p>
<i>Equivalent Softkeys</i>	Stimulus > Frequency Offset > Offset Adjust > Offset Adjust

SCPI.SENSe(*Ch*).OFFSet.ADJust.Value

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The frequency offset adjust value of the offset adjust feature.
<i>Range</i>	from –5E5 to 5E5
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	0
<i>Unit</i>	Hz
<i>Syntax</i>	<p>Dim <i>Value</i> As Double <i>Value</i> = app.SCPI.SENSe(<i>Ch</i>).OFFSet.ADJust.VALue <i>app.SCPI.SENSe(Ch).OFFSet.ADJust.VALue</i> = 1000</p>
<i>Equivalent Softkeys</i>	Stimulus > Frequency Offset > Offset Adjust > Adjust Value

SCPI.SENSe(*Ch*).OFFSet.PORT(*Pt*).FREQuency.DATA

<i>Object Type</i>	Property (read only)
<i>Data Type</i>	Variant (array of double)
<i>Target</i>	Port <i>Pt</i> of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Pt</i> : port number 1–4(see Table 2 on page 25)
<i>Description</i>	Reads the frequency data for the selected port <i>Pt</i> when the frequency offset feature is ON, for the selected channel <i>Ch</i> . The array size is N, where N is the number of measurement points. For the n-th point, where n from 1 to N: $Data(n-1)$ the frequency value at the n-th measurement point.
<i>Syntax</i>	Dim <i>Data</i> As Variant <i>Data</i> = app.SCPI.SENSe(<i>Ch</i>).OFFSet.PORT(<i>Pt</i>).FREQuency.DATA
<i>Equivalent Softkeys</i>	None

SCPI.SENSe(*Ch*).OFFSet.PORT(*Pt*).FREQuency.DIVisor

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double
<i>Target</i>	Port <i>Pt</i> of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Pt</i> : port number 1–4 (see Table 2 on page 25)
<i>Description</i>	The basic frequency range divisor when the frequency offset feature is ON.
<i>Range</i>	from 1 to 100
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	1
<i>Syntax</i>	Dim <i>Value</i> As Double <i>Value</i> = app.SCPI.SENSe(<i>Ch</i>).OFFset.PORT(<i>Pt</i>).FREQuency.DIVisor <i>app.SCPI.SENSe(<i>Ch</i>).OFFset.PORT(<i>Pt</i>).FREQuency.DIVisor</i> = 2
<i>Equivalent Softkeys</i>	Stimulus > Frequency Offset > Port n > Divider

SCPI.SENSE(*Ch*).OFFSET.PORT(*Pt*).FREQuency. MULTiplier

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double
<i>Target</i>	Port <i>Pt</i> of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Pt</i> : port number 1–4 (see Table 2 on page 25)
<i>Description</i>	The basic range frequency multiplier when the frequency offset feature is ON.
<i>Range</i>	from –100 to 100
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	1
<i>Syntax</i>	Dim <i>Value</i> As Double <i>Value</i> = app.SCPI.SENSE(<i>Ch</i>).OFFSET.PORT(<i>Pt</i>).FREQuency.MULTiplier <i>app.SCPI.SENSE(Ch).OFFSET.PORT(Pt).FREQuency.MULTiplier = 2</i>
<i>Equivalent Softkeys</i>	Stimulus > Frequency Offset > Port n > Multiplier

SCPI.SENSe(*Ch*).OFFSet.PORT(*Pt*).FREQuency.OFFSet

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double
<i>Target</i>	Port <i>Pt</i> of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Pt</i> : port number 1–4 (see Table 2 on page 25)
<i>Description</i>	The basic frequency range offset when the frequency offset feature is ON.
<i>Range</i>	from –1e–12 to 1e12
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	0
<i>Unit</i>	Hz
<i>Syntax</i>	Dim <i>Value</i> As Double <i>Value</i> = app.SCPI.SENSe(<i>Ch</i>).OFFset.PORT(<i>Pt</i>).FREQuency.OFFSet <i>app.SCPI.SENSe(<i>Ch</i>).OFFset.PORT(<i>Pt</i>).FREQuency.OFFSet</i> = 1e9
<i>Equivalent Softkeys</i>	Stimulus > Frequency Offset > Port n > Offset

SCPI.SENSe(*Ch*).OFFSet.PORT(*Pt*).FREQuency. START

<i>Object Type</i>	Property (read only)
<i>Data Type</i>	Double
<i>Target</i>	Port <i>Pt</i> of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Pt</i> : port number 1–4 (see Table 2 on page 25)
<i>Description</i>	The frequency sweep start when the frequency offset feature is ON.
<i>Unit</i>	Hz
<i>Syntax</i>	Dim <i>Value</i> As Double <i>Value</i> = app.SCPI.SENSe(<i>Ch</i>).OFFset.PORT(<i>Pt</i>).FREQuency.START
<i>Equivalent Softkeys</i>	Stimulus > Frequency Offset > Port n > Start

SCPI.SENSe(*Ch*).OFFSet.PORT(*Pt*).FREQuency. STOP

<i>Object Type</i>	Property (read only)
<i>Data Type</i>	Double
<i>Target</i>	Port <i>Pt</i> of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Pt</i> : port number 1–4 (see Table 2 on page 25)
<i>Description</i>	The frequency sweep stop when the frequency offset feature is ON.
<i>Unit</i>	Hz
<i>Syntax</i>	Dim <i>Value</i> As Double <i>Value</i> = app.SCPI.SENSe(<i>Ch</i>).OFFset.PORT(<i>Pt</i>).FREQuency.STOP
<i>Equivalent Softkeys</i>	Stimulus > Frequency Offset > Port n > Stop

SCPI.SENSe(*Ch*).OFFSet.STATE

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Boolean
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The ON/OFF state of the frequency offset feature.
<i>Allowable Values</i>	True: frequency offset feature is ON False: frequency offset feature is OFF
<i>Preset Value</i>	False
<i>Syntax</i>	Dim <i>Status</i> As Boolean <i>Status</i> = app.SCPI.SENSe(<i>Ch</i>).OFFSet.STATE app.SCPI.SENSe(<i>Ch</i>).OFFSet.STATE = True
<i>Equivalent Softkeys</i>	Stimulus > Frequency Offset > Frequency Offset

SCPI.SENSe(*Ch*).ROSCillator.SOURce

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	String
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	Selects the internal or external source of the reference frequency of 10 MHz.
<i>Range</i>	"INTernal" : Internal source of the reference frequency "EXTernal" : External source of the reference frequency

<i>Notes</i>	The short format of the parameter is indicated by upper case letters. There is no distinction between upper and lower case letters when the property is written. When the property is read out, the short format is indicated by upper case letters.
<i>Out of Range</i>	An error occurs. Error code: 224.
<i>Preset Value</i>	"INT"
<i>Syntax</i>	<pre>Dim Param As String Param = app.SCPI.SENSe(Ch).ROSCillator.SOURce app.SCPI.SENSe(Ch).ROSCillator.SOURce = "EXT"</pre>
<i>Equivalent Softkeys</i>	System > Misc Setup > Ref Source

SCPI.SENSe(*Ch*).SEGMenT.DATa

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Variant (array of double)
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)

	<p>The array of the segment sweep table.</p> <p>The array has the following format:</p> <pre>{ <Buf>, <Flag1>, <Flag2>, <Flag3>, <Flag4>, <Flag5>, <N>, <Start(1)>, <Stop(1)>, <NOP(1)> [,<IFBW(1)>] [,<Pow(1)>] [,<Del(1)>] [,<Time(1)>], <Start(2)>, <Stop(2)>, <NOP(2)> [,<IFBW(2)>] [,<Pow(2)>] [,<Del(2)>] [,<Time(2)>], ... <Start(N)>, <Stop(N)>, <NOP(N)> [,<IFBW(N)>] [,<Pow(N)>] [,<Del(N)>] [,<Time(N)>] }</pre> <p><i><Buf></i> : Always 5, <i><Flag1></i> : Stimulus start setting (0 – start/stop, 1 – center/span), <i><Flag2></i> : Setting of the <i><IFBW></i> field (0 – disabled, 1 – enabled), <i><Flag3></i> : Setting of the <i><Pow></i> field (0 – disabled, 1 – enabled), <i><Flag4></i> : Setting of the <i></i> field (0 – disabled, 1 – enabled), <i><Flag5></i> : Setting of the <i><Time></i> field (0 – disabled, 1 – enabled), <i><N></i> : Number of segments, <i><Start n></i> : Start value of the n-th segment, <i><Stop n></i> : Stop value of the n-th segment, <i><NOP n></i> : Number of points of the n-th segment, <i><IFBW n></i> : IF bandwidth of the n-th segment (if enabled), <i><Pow n></i> : Power of the n-th segment (if enabled), <i><Del n></i> : Measurement delay of the n-th segment (if enabled), <i><Time n></i> : Reserved for future use (if enabled).</p>
<i>Syntax</i>	<p>Dim <i>Data</i> As Variant <i>Data</i> = app.SCPI.SENSe(<i>Ch</i>).SEGMENT.DATA app.SCPI.SENSe(<i>Ch</i>).SEGMENT.DATA = <i>Data</i></p>
<i>Equivalent Softkeys</i>	Stimulus / Segment Table

SCPI.SENSe(*Ch*).SWEEP.POINT.TIME

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The value of the delay before measurement in each measurement point.
<i>Range</i>	from 0 to 0.3
<i>Resolution</i>	5E-6

<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	0
<i>Unit</i>	s (second)
<i>Syntax</i>	<p>Dim <i>Value</i> As Double <i>Value</i> = app.SCPI.SENSe(<i>Ch</i>).SWEep.POInt.TIME <i>app.SCPI.SENSe(Ch).SWEep.POInt.TIME</i> = 5E-6</p>
<i>Equivalent Softkeys</i>	Stimulus > Meas Delay

SCPI.SENSe(*Ch*).SWEep.POInts

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Long
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The number of measurement points.
<i>Range</i>	2 to 500001
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	201
<i>Syntax</i>	<p>Dim <i>Value</i> As Long <i>Value</i> = app.SCPI.SENSe(<i>Ch</i>).SWEep.POInts <i>app.SCPI.SENSe(Ch).SWEep.POInts</i> = 1001</p>
<i>Equivalent Softkeys</i>	Stimulus > Points

SCPI.SENSe(*Ch*).SWEep.TYPE

<i>Object Type</i>	Property (read/write)
--------------------	-----------------------

<i>Data Type</i>	String
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	Sets the sweep type.
<i>Range</i>	"LINear" : Linear frequency sweep "LOGarithmic" : Logarithmic frequency sweep "SEGMENT" : Segment frequency sweep "POWER" : Power sweep
<i>Notes</i>	The short format of the parameter is indicated by upper case letters. There is no distinction between upper and lower case letters when the property is written. When the property is read out, the short format is indicated by upper case letters.
<i>Out of Range</i>	An error occurs. Error code: 206.
<i>Preset Value</i>	"LIN"
<i>Syntax</i>	Dim <i>Param</i> As String <i>Param</i> = app.SCPI.SENSE(<i>Ch</i>).SWEep.TYPE app.SCPI.SENSE(<i>Ch</i>).SWEep.TYPE = "LOG"
<i>Equivalent Softkeys</i>	Stimulus > Sweep Type

SCPI.SERVICE.CHANNEL.ACTIVE

<i>Object Type</i>	Property (read only)
<i>Data Type</i>	Long
<i>Target</i>	Instrument
<i>Description</i>	The number of the active channel.
<i>Syntax</i>	Dim <i>Value</i> As Long <i>Value</i> = app.SCPI.SERVICE.CHANNEL.ACTIVE

<i>Equivalent Softkeys</i>	None
----------------------------	-------------

SCPI.SERViCe.CHANnel.COUNt

<i>Object Type</i>	Property (read only)
<i>Data Type</i>	Long
<i>Target</i>	Instrument
<i>Description</i>	The maximum number of the channels.
<i>Syntax</i>	<p>Dim <i>Value</i> As Long <i>Value</i> = app.SCPI.SERViCe.CHANnel.COUNt</p>
<i>Equivalent Softkeys</i>	None

SCPI.SERViCe.CHANnel(*Ch*).TRACe.ACTive

<i>Object Type</i>	Property (read only)
<i>Data Type</i>	Long
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The active trace number of the channel.
<i>Syntax</i>	<p>Dim <i>Value</i> As Long <i>Value</i> = app.SCPI.SERViCe.CHANnel(<i>Ch</i>).TRACe.ACTive</p>
<i>Equivalent Softkeys</i>	None

SCPI.SERViCe.CHANnel.TRACe.COUNt

<i>Object Type</i>	Property (read only)
<i>Data Type</i>	Long
<i>Target</i>	Instrument
<i>Description</i>	The maximum number of the traces in the channel.
<i>Syntax</i>	Dim <i>Value</i> As Long <i>Value</i> = app.SCPI.SERVICE.CHANNEL.TRACE.COUNT
<i>Equivalent Softkeys</i>	None

SCPI.SERVICE.PORT.COUNT

<i>Object Type</i>	Property (read only)
<i>Data Type</i>	Long
<i>Target</i>	Instrument
<i>Description</i>	The number of the ports.
<i>Syntax</i>	Dim <i>Value</i> As Long <i>Value</i> = app.SCPI.SERVICE.PORT.COUNT
<i>Equivalent Softkeys</i>	None

SCPI.SERVICE.SWEep.FREQuency.MAXimum

<i>Object Type</i>	Property (read only)
<i>Data Type</i>	Double
<i>Target</i>	Instrument
<i>Description</i>	The upper limit of the measurement frequency.

<i>Syntax</i>	Dim <i>Value</i> As Double <i>Value</i> = app.SCPI.SERVICE.SWEep.FREQency.MAXimum
<i>Equivalent Softkeys</i>	None

SCPI.SERVICE.SWEep.FREQency.MINimum

<i>Object Type</i>	Property (read only)
<i>Data Type</i>	Double
<i>Target</i>	Instrument
<i>Description</i>	The lower limit of the measurement frequency.
<i>Syntax</i>	Dim <i>Value</i> As Double <i>Value</i> = app.SCPI.SERVICE.SWEep.FREQency.MINimum
<i>Equivalent Softkeys</i>	None

SCPI.SERVICE.SWEep.POINTs

<i>Object Type</i>	Property (read only)
<i>Data Type</i>	Double
<i>Target</i>	Instrument
<i>Description</i>	The maximum number of the measurement points.
<i>Syntax</i>	Dim <i>Value</i> As Long <i>Value</i> = app.SCPI.SERVICE.SWEep.POINTs
<i>Equivalent Softkeys</i>	None

SCPI.SOURce(*Ch*).POWer.CENTer

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The center value of the power sweep range.
<i>Range</i>	from –60 to 10
<i>Resolution</i>	0.025
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	–25
<i>Unit</i>	dBm (decibels above 1 milliwatt)
<i>Syntax</i>	<p>Dim <i>Value</i> As Double <i>Value</i> = app.SCPI.SOURce(<i>Ch</i>).POWer.CENTer <i>app.SCPI.SOURce(Ch).POWer.CENTer</i> = 5</p>
<i>Equivalent Softkeys</i>	Stimulus > Center

SCPI.SOURce(*Ch*).POWer.LEVel.IMMEDIATE.AMPLitude

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The power level for the frequency sweep.
<i>Range</i>	from –60 to 10
<i>Resolution</i>	0.05

<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	0
<i>Unit</i>	dBm (decibels above 1 milliwatt)
<i>Syntax</i>	<p>Dim <i>Value</i> As Double</p> <p><i>Value</i> = app.SCPI.SOURce(<i>Ch</i>).POWER.LEVel.IMMEDIATEAMPLitude</p> <p>app.SCPI.SOURce(<i>Ch</i>).POWER.LEVel.IMMEDIATEAMPLitude = 10</p>
<i>Equivalent Softkeys</i>	Stimulus > Power > Power

SCPI.SOURce(*Ch*).POWER.LEVel.SLOPe.DATA

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The power slope value for the frequency sweep.
<i>Range</i>	from –2 to 2
<i>Resolution</i>	0.1
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	0
<i>Unit</i>	dB/GHz (decibel/gigahertz)
<i>Syntax</i>	<p>Dim <i>Value</i> As Double</p> <p><i>Value</i> = app.SCPI.SOURce(<i>Ch</i>).POWER.LEVel.SLOPe.DATA</p> <p>app.SCPI.SOURce(<i>Ch</i>).POWER.LEVel.SLOPe.DATA = 0.2</p>
<i>Equivalent Softkeys</i>	Stimulus > Power > Slope [dB/GHz]

SCPI.SOURce(*Ch*).POWer.LEVel.SLOPe.STATE

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Boolean
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The ON/OFF state of the power slope for the frequency sweep.
<i>Allowable Values</i>	True: Power slope ON False: Power slope OFF
<i>Preset Value</i>	False
<i>Syntax</i>	<p>Dim <i>Status</i> As Boolean</p> <p><i>Status</i> = app.SCPI.SOURce(<i>Ch</i>).POWer.LEVel.SLOPe.STATE</p> <p>app.SCPI.SOURce(<i>Ch</i>).POWer.LEVel.SLOPe.STATE = True</p>
<i>Equivalent Softkeys</i>	Stimulus > Power > Slope [ON/OFF]

SCPI.SOURce(*Ch*).POWer.PORT(*Pt*).CORRection.COLLect.ACQuire

<i>Object Type</i>	Method
<i>Target</i>	Port <i>Pt</i> of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Pt</i> : port number 1–4 (see Table 2 on page 25)
<i>Description</i>	Measures the power calibration data for the specified port using the power meter controlled via USB or USB/GPIB. Calculates calibration coefficients on completion of the measurement, and turns ON the power correction for the port.
<i>Syntax</i>	<i>app.SCPI.SOURce(Ch).POWer.PORT(Pt).CORRection.COLLect.ACQuire</i>
<i>Equivalent Softkeys</i>	Calibration > Power Calibration > Calibrate

SCPI.SOURce(*Ch*).POWer.PORT(*Pt*).CORRection.COLLect.TABLE. LOSS.DATA

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Variant (array of double)
<i>Target</i>	Port <i>Pt</i> of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Pt</i> : port number 1–4 (see Table 2 on page 25)
<i>Description</i>	The loss compensation table used during the power calibration. The array size is 1+2N, where N is the number of the table rows. For the n-th point, where n from 1 to N: <i>Data(0)</i> the number of the table rows N integer from 0 to 100; <i>Data(2n-1)</i> the frequency of the n-th row of the table from 300 kHz to 8.0 GHz; <i>Data(2n)</i> the loss value of the n-th table row in dB.
<i>Syntax</i>	Dim <i>Data</i> As Variant <i>Data</i> = <i>app.SCPI.SOURce(Ch).POWER.PORT(Pt).CORRection.COLLeCT.TABLE.LOSS.DATa</i> <i>app.SCPI.SOURce(Ch).POWER.PORT(Pt).CORRection.COLLeCT.TABLE.LOSS.DATa</i> = <i>Data</i>
<i>Related Commands</i>	<i>SCPI.SOURce(Ch).POWER.PORT(Pt).CORRection.COLLeCT.ACQuire</i>
<i>Equivalent Softkeys</i>	Calibration > Power Calibration > Loss Compen

SCPI.SOURce(*Ch*).POWER.PORT(*Pt*).CORRection.COLLeCT.TABLE.LOSS.STATE

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Boolean
<i>Target</i>	Port <i>Pt</i> of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Pt</i> : port number 1–4 (see Table 2 on page 25)
<i>Description</i>	The ON/OFF state of the loss compensation function used during the power calibration.
<i>Allowable Values</i>	True: Loss compensation ON False: Loss compensation OFF

<i>Preset Value</i>	False
<i>Syntax</i>	<p>Dim <i>Status</i> As Boolean</p> <p><i>Status</i> = app.SCPI.SOURce(<i>Ch</i>).POWER.PORT(<i>Pt</i>).CORRection.COLLeCT.TABLE.LOSS.STATE</p> <p>app.SCPI.SOURce(<i>Ch</i>).POWER.PORT(<i>Pt</i>).CORRection.COLLeCT.TABLE.LOSS.STATE = True</p>
<i>Related Commands</i>	SCPI.SOURce(<i>Ch</i>).POWER.PORT(<i>Pt</i>).CORRection.COLLeCT.TABLE.LOSS.DATA
<i>Equivalent Softkeys</i>	Calibration > Power Calibration > Loss Compen > Compensation

SCPI.SOURce(*Ch*).POWER.PORT(*Pt*).CORRection.DATA

<i>Object Type</i>	Property (read/write)						
<i>Data Type</i>	Variant (array of double)						
<i>Target</i>	Port <i>Pt</i> of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Pt</i> : port number 1–4 (see Table 2 on page 25)						
<i>Description</i>	<p>The power correction table.</p> <p>The array size is 1+2N, where N is the number of the table rows.</p> <p>For the n-th point, where n from 1 to N:</p> <table style="margin-left: 20px;"> <tr> <td><i>Data(0)</i></td> <td>the number of the table rows N integer from 0 to 10001;</td> </tr> <tr> <td><i>Data(2n-1)</i></td> <td>the frequency of the n-th row of the table from 100 kHz to 8.0 GHz;</td> </tr> <tr> <td><i>Data(2n)</i></td> <td>power correction value of the n-th row of the table from -10 to +10 dB.</td> </tr> </table>	<i>Data(0)</i>	the number of the table rows N integer from 0 to 10001;	<i>Data(2n-1)</i>	the frequency of the n-th row of the table from 100 kHz to 8.0 GHz;	<i>Data(2n)</i>	power correction value of the n-th row of the table from -10 to +10 dB.
<i>Data(0)</i>	the number of the table rows N integer from 0 to 10001;						
<i>Data(2n-1)</i>	the frequency of the n-th row of the table from 100 kHz to 8.0 GHz;						
<i>Data(2n)</i>	power correction value of the n-th row of the table from -10 to +10 dB.						
<i>Syntax</i>	<p>Dim <i>Data</i> As Variant</p> <p><i>Data</i> = app.SCPI.SOURce(<i>Ch</i>).POWER.PORT(<i>Pt</i>).CORRection.DATA</p> <p>app.SCPI.SOURce(<i>Ch</i>).POWER.PORT(<i>Pt</i>).CORRection.DATA = <i>Data</i></p>						
<i>Related Commands</i>	SCPI.SOURce(<i>Ch</i>).POWER.PORT(<i>Pt</i>).CORRection.COLLeCT.ACQuire						
<i>Equivalent Softkeys</i>	None						

SCPI.SOURce(*Ch*).POWER.PORT(*Pt*).CORRection.STATE

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Boolean
<i>Target</i>	Port Pt of channel Ch , Ch : channel number 1–16 (see Table 1 on page 25) Pt : port number 1–4 (see Table 2 on page 25)
<i>Description</i>	The ON/OFF state of the power correction function.
<i>Allowable Values</i>	True: Power correction ON False: Power correction OFF
<i>Preset Value</i>	False
<i>Syntax</i>	Dim <i>Status</i> As Boolean <i>Status</i> = app.SCPI.SOURce(<i>Ch</i>).POWER.PORT(<i>Pt</i>).CORRection.STATE <i>app.SCPI.SOURce(Ch).POWER.PORT(Pt).CORRection.STATE</i> = True
<i>Related Commands</i>	SCPI.SOURce(<i>Ch</i>).POWER.PORT(<i>Pt</i>).CORRection.COLlect.ACQuire
<i>Equivalent Softkeys</i>	Calibration > Power Calibration > Correction

SCPI.SOURce(*Ch*).POWER.PORT(*Pt*).LEVel.IMMEDIATEAMPLitude

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double
<i>Target</i>	Port <i>Pt</i> of channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25) <i>Pt</i> : port number 1–4 (see Table 2 on page 25)
<i>Description</i>	The individual power level of specified port (<i>Pt</i>) for the frequency sweep.
<i>Range</i>	from –60 to 10
<i>Resolution</i>	0.05
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	0
<i>Unit</i>	dBm (decibels above 1 milliwatt)
<i>Syntax</i>	<p>Dim <i>Value</i> As Double <i>Value</i> =</p> <pre>app.SCPI.SOURce(<i>Ch</i>).POWER.PORT(<i>Pt</i>).LEVel.IMMEDIATEAMPLitude app.SCPI.SOURce(<i>Ch</i>).POWER.PORT(<i>Pt</i>).LEVel.IMMEDIATEAMPLitude = 10</pre>
<i>Equivalent Softkeys</i>	Stimulus > Power > Port Power > Port x

SCPI.SOURce(*Ch*).POWer.PORT.COUPle

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Boolean
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The ON/OFF state of the port power couple function.
<i>Allowable Values</i>	True: port power couple ON False: port power couple OFF
<i>Preset Value</i>	False
<i>Syntax</i>	Dim <i>Status</i> As Boolean <i>Status</i> = app.SCPI.SOURce(<i>Ch</i>).POWer.PORT.COUPle app.SCPI.SOURce(<i>Ch</i>).POWer.PORT.COUPle = True
<i>Related Commands</i>	SCPI.SOURce(<i>Ch</i>).POWer.PORT(<i>Pt</i>).LEVel.IMMEDIATE.AMPLitude
<i>Equivalent Softkeys</i>	Stimulus > Power > Port Couple

SCPI.SOURce(*Ch*).POWer.SPAN

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The power span for the power sweep.
<i>Range</i>	from 0 to 70.
<i>Resolution</i>	0.05

<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	70
<i>Unit</i>	dBm (decibels above 1 milliwatt)
<i>Syntax</i>	<p>Dim <i>Value</i> As Double <i>Value</i> = app.SCPI.SOURce(<i>Ch</i>).POWer.SPAN <i>app.SCPI.SOURce(Ch).POWer.SPAN</i> = 50</p>
<i>Equivalent Softkeys</i>	Stimulus > Span

SCPI.SOURce(*Ch*).POWer.START

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The power sweep start for the power sweep.
<i>Range</i>	from –60 to 10
<i>Resolution</i>	0.05
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	–60
<i>Unit</i>	dBm (decibels above 1 milliwatt)
<i>Syntax</i>	<p>Dim <i>Value</i> As Double <i>Value</i> = app.SCPI.SOURce(<i>Ch</i>).POWer.START <i>app.SCPI.SOURce(Ch).POWer.START</i> = 5</p>
<i>Equivalent Softkeys</i>	Stimulus > Start

SCPI.SOURce(*Ch*).POWeR.STOP

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Double
<i>Target</i>	Channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Description</i>	The power sweep stop for the power sweep.
<i>Range</i>	from –60 to 10
<i>Resolution</i>	0.05
<i>Out of Range</i>	Sets the value of the limit, which is closer to the specified value.
<i>Preset Value</i>	10
<i>Unit</i>	dBm (decibels above 1 milliwatt)
<i>Syntax</i>	<p>Dim <i>Value</i> As Double <i>Value</i> = app.SCPI.SOURce(<i>Ch</i>).POWeR.STOP <i>app.SCPI.SOURce(Ch).POWeR.STOP</i> = 5</p>
<i>Equivalent Softkeys</i>	Stimulus > Stop

SCPI.STATus.OPERation.CONDition

<i>Object Type</i>	Property (read only)
<i>Data Type</i>	Long
<i>Target</i>	IEEE488.2 Status Reporting System (Appendix 1)
<i>Description</i>	Operation Status Condition Register.
<i>Syntax</i>	<p>Dim <i>Value</i> As Long <i>Value</i> = app.SCPI.STATus.OPERation.CONDition</p>
<i>Equivalent Softkeys</i>	None

SCPI.STATus.OPERation.ENABLE

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Long
<i>Target</i>	IEE488.2 Status Reporting System (Appendix 1)
<i>Description</i>	Operation Status Enable Register.
<i>Range</i>	from 0 to 65535
<i>Preset Value</i>	0
<i>Syntax</i>	<p>Dim <i>Value</i> As Long</p> <p><i>Value</i> = app.SCPI.STATus.OPERation.ENABLE</p> <p>app.SCPI.STATus.OPERation.ENABLE = <i>Value</i></p>
<i>Equivalent Softkeys</i>	None

SCPI.STATus.OPERation.EVENT

<i>Object Type</i>	Property (read only)
<i>Data Type</i>	Long
<i>Target</i>	IEE488.2 Status Reporting System (Appendix 1)
<i>Description</i>	Operation Status Event Register.
<i>Syntax</i>	<p>Dim <i>Value</i> As Long</p> <p><i>Value</i> = app.SCPI.STATus.OPERation.EVENT</p>
<i>Equivalent Softkeys</i>	None

SCPI.STATus.OPERation.NTRansition

<i>Object Type</i>	Property (read/write)
--------------------	-----------------------

<i>Data Type</i>	Long
<i>Target</i>	IEE488.2 Status Reporting System (Appendix 1)
<i>Description</i>	Negative Transition Filter of the Operation Status Register.
<i>Range</i>	from 0 to 65535
<i>Preset Value</i>	0
<i>Syntax</i>	<p>Dim <i>Value</i> As Long</p> <p><i>Value</i> = app.SCPI.STATus.OPERation.NTRansition</p> <p>app.SCPI.STATus.OPERation.NTRansition = <i>Value</i></p>
<i>Equivalent Softkeys</i>	None

SCPI.STATus.OPERation.PTRansition

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Long
<i>Target</i>	IEE488.2 Status Reporting System (Appendix 1)
<i>Description</i>	Positive Transition Filter of the Operation Status Register.
<i>Range</i>	from 0 to 65535
<i>Preset Value</i>	65535
<i>Syntax</i>	<p>Dim <i>Value</i> As Long</p> <p><i>Value</i> = app.SCPI.STATus.OPERation.PTRansition</p> <p>app.SCPI.STATus.OPERation.PTRansition = <i>Value</i></p>
<i>Equivalent Softkeys</i>	None

SCPI.STATus.PRESet

<i>Object Type</i>	Method
--------------------	--------

<i>Target</i>	IEE488.2 Status Reporting System (Appendix 1)
<i>Description</i>	Initialization of all registers.
<i>Syntax</i>	<i>app.SCPI.STATus.PRESet</i>
<i>Equivalent Softkeys</i>	None

SCPI.STATus.QUESTIONable.CONDition

<i>Object Type</i>	Property (read only)
<i>Data Type</i>	Long
<i>Target</i>	IEE488.2 Status Reporting System (Appendix 1)
<i>Description</i>	Questionable Status Condition Register.
<i>Syntax</i>	Dim <i>Value</i> As Long <i>Value</i> = <i>app.SCPI.STATus.QUESTIONable.CONDition</i>
<i>Equivalent Softkeys</i>	None

SCPI.STATus.QUESTIONable.ENABLE

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Long
<i>Target</i>	IEE488.2 Status Reporting System (Appendix 1)
<i>Description</i>	Questionable Status Enable Register.
<i>Range</i>	from 0 to 65535
<i>Preset Value</i>	0
<i>Syntax</i>	Dim <i>Value</i> As Long <i>Value</i> = <i>app.SCPI.STATus.QUESTIONable.ENABLE</i> <i>app.SCPI.STATus.QUESTIONable.ENABLE</i> = <i>Value</i>

<i>Equivalent Softkeys</i>	None
----------------------------	-------------

SCPI.STATus.QUESTIONable.EVENT

<i>Object Type</i>	Property (read only)
<i>Data Type</i>	Long
<i>Target</i>	IEE488.2 Status Reporting System (Appendix 1)
<i>Description</i>	Questionable Status Event Register.
<i>Syntax</i>	<p>Dim <i>Value</i> As Long <i>Value</i> = app.SCPI.STATus.QUESTIONable.EVENT</p>
<i>Equivalent Softkeys</i>	None

SCPI.STATus.QUESTIONable.LIMit.CHANnel(*Ch*).CONDition

<i>Object Type</i>	Property (read only)
<i>Data Type</i>	Long
<i>Target</i>	IEE488.2 Status Reporting System (Appendix 1)
<i>Description</i>	Questionable Limit Channel Status Condition Register for channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Syntax</i>	<p>Dim <i>Value</i> As Long <i>Value</i> = app.SCPI.STATus.QUESTIONable.LIMit.CHANnel(<i>Ch</i>).CONDition</p>
<i>Equivalent Softkeys</i>	None

SCPI.STATus.QUESTIONable.LIMit.CHANnel(*Ch*).ENABLE

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Long

<i>Target</i>	IEE488.2 Status Reporting System (Appendix 1)
<i>Description</i>	Questionable Limit Channel Status Enable Register for channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Range</i>	from 0 to 65535
<i>Preset Value</i>	0
<i>Syntax</i>	<p>Dim <i>Value</i> As Long</p> <p><i>Value</i> = app.SCPI.STATUs.QUESTIONable.LIMit.CHANnel(<i>Ch</i>).ENABLE</p> <p>app.SCPI.STATUs.QUESTIONable.LIMit.CHANnel(<i>Ch</i>).ENABLE = <i>Value</i></p>
<i>Equivalent Softkeys</i>	None

SCPI.STATUs.QUESTIONable.LIMit.CHANnel(*Ch*).EVENT

<i>Object Type</i>	Property (read only)
<i>Data Type</i>	Long
<i>Target</i>	IEE488.2 Status Reporting System (Appendix 1)
<i>Description</i>	Questionable Limit Channel Status Event Register for channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Syntax</i>	<p>Dim <i>Value</i> As Long</p> <p><i>Value</i> = app. SCPI.STATUs.QUESTIONable.LIMit.CHANnel(<i>Ch</i>).EVENT</p>
<i>Equivalent Softkeys</i>	None

SCPI.STATUs.QUESTIONable.LIMit.CHANnel(*Ch*).NTRansition

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Long
<i>Target</i>	IEE488.2 Status Reporting System (Appendix 1)

<i>Description</i>	Negative Transition Filter of the Questionable Limit Channel Status Register for channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Range</i>	from 0 to 65535
<i>Preset Value</i>	0
<i>Syntax</i>	Dim <i>Value</i> As Long <i>Value</i> = app.SCPI.STATUS.QUESTIONABLE.LIMIT.CHANNEL(<i>Ch</i>).NTRANSITION app.SCPI.STATUS.QUESTIONABLE.LIMIT.CHANNEL(<i>Ch</i>).NTRANSITION = <i>Value</i>
<i>Equivalent Softkeys</i>	None

SCPI.STATUS.QUESTIONABLE.LIMIT.CHANNEL(*Ch*).PTRANSITION

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Long
<i>Target</i>	IEE488.2 Status Reporting System (Appendix 1)
<i>Description</i>	Positive Transition Filter of the Questionable Limit Channel Status Register for channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Range</i>	from 0 to 65535
<i>Preset Value</i>	65535
<i>Syntax</i>	Dim <i>Value</i> As Long <i>Value</i> = app.SCPI.STATUS.QUESTIONABLE.LIMIT.CHANNEL(<i>Ch</i>).PTRANSITION app.SCPI.STATUS.QUESTIONABLE.LIMIT.CHANNEL(<i>Ch</i>).PTRANSITION = <i>Value</i>
<i>Equivalent Softkeys</i>	None

SCPI.STATUS.QUESTIONABLE.LIMIT.CONDITION

<i>Object Type</i>	Property (read only)
--------------------	----------------------

<i>Data Type</i>	Long
<i>Target</i>	IEE488.2 Status Reporting System (Appendix 1).
<i>Description</i>	Questionable Limit Status Condition Register.
<i>Syntax</i>	Dim <i>Value</i> As Long <i>Value</i> = app.SCPI.STATus.QUESTIONable.LIMit.CONDition
<i>Equivalent Softkeys</i>	None

SCPI.STATus.QUESTIONable.LIMit.ENABLE

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Long
<i>Target</i>	IEE488.2 Status Reporting System (Appendix 1)
<i>Description</i>	Questionable Limit Status Enable Register.
<i>Range</i>	from 0 to 65535
<i>Preset Value</i>	0
<i>Syntax</i>	Dim <i>Value</i> As Long <i>Value</i> = app.SCPI.STATus.QUESTIONable.LIMit.ENABLE app.SCPI.STATus.QUESTIONable.LIMit.ENABLE = <i>Value</i>
<i>Equivalent Softkeys</i>	None

SCPI.STATus.QUESTIONable.LIMit.EVENT

<i>Object Type</i>	Property (read only)
<i>Data Type</i>	Long
<i>Target</i>	IEE488.2 Status Reporting System (Appendix 1)
<i>Description</i>	Questionable Limit Status Event Register.

<i>Syntax</i>	Dim <i>Value</i> As Long <i>Value</i> = app.SCPI.STATus.QUEStionable.LIMit.EVENt
<i>Equivalent Softkeys</i>	None

SCPI.STATus.QUEStionable.LIMit.NTRansition

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Long
<i>Target</i>	IEE488.2 Status Reporting System (Appendix 1)
<i>Description</i>	Negative Transition Filter of the Questionable Limit Status Register.
<i>Range</i>	from 0 to 65535
<i>Preset Value</i>	0
<i>Syntax</i>	Dim <i>Value</i> As Long <i>Value</i> = app.SCPI.STATus.QUEStionable.LIMit.NTRansition app.SCPI.STATus.QUEStionable.LIMit.NTRansition = <i>Value</i>
<i>Equivalent Softkeys</i>	None

SCPI.STATus.QUEStionable.LIMit.PTRansition

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Long
<i>Target</i>	IEE488.2 Status Reporting System (Appendix 1)
<i>Description</i>	Positive Transition Filter of the Questionable Limit Status Register.
<i>Range</i>	from 0 to 65535
<i>Preset Value</i>	65535

<i>Syntax</i>	Dim <i>Value</i> As Long <i>Value</i> = app.SCPI.STATus.QUESTIONable.LIMit.PTRansition <i>app.SCPI.STATus.QUESTIONable.LIMit.PTRansition</i> = <i>Value</i>
<i>Equivalent Softkeys</i>	None

SCPI.STATus.QUESTIONable.NTRansition

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Long
<i>Target</i>	IEE488.2 Status Reporting System (Appendix 1)
<i>Description</i>	Negative Transition Filter of the Questionable Status Register.
<i>Range</i>	from 0 to 65535
<i>Preset Value</i>	0
<i>Syntax</i>	Dim <i>Value</i> As Long <i>Value</i> = app.SCPI.STATus.QUESTIONable.NTRansition <i>app.SCPI.STATus.QUESTIONable.NTRansition</i> = <i>Value</i>
<i>Equivalent Softkeys</i>	None

SCPI.STATus.QUESTIONable.PTRansition

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Long
<i>Target</i>	IEE488.2 Status Reporting System (Appendix 1)
<i>Description</i>	Positive Transition Filter of the Questionable Status Register.
<i>Range</i>	from 0 to 65535
<i>Preset Value</i>	65535

<i>Syntax</i>	Dim <i>Value</i> As Long <i>Value</i> = app.SCPI.STATus.QUEStionable.PTRansition <i>app.SCPI.STATus.QUEStionable.PTRansition</i> = <i>Value</i>
<i>Equivalent Softkeys</i>	None

SCPI.STATus.QUEStionable.RLIMit.CHANnel(*Ch*).CONDition

<i>Object Type</i>	Property (read only)
<i>Data Type</i>	Long
<i>Target</i>	IEE488.2 Status Reporting System (Appendix 1)
<i>Description</i>	Questionable Ripple Limit Channel Status Condition Register for channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Syntax</i>	Dim <i>Value</i> As Long <i>Value</i> = app.SCPI.STATus.QUEStionable.RLIMit.CHANnel(<i>Ch</i>).CONDition
<i>Equivalent Softkeys</i>	None

SCPI.STATus.QUEStionable.RLIMit.CHANnel(*Ch*).ENABLE

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Long
<i>Target</i>	IEE488.2 Status Reporting System (Appendix 1)
<i>Description</i>	Questionable Ripple Limit Channel Status Enable Register for channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Range</i>	from 0 to 65535
<i>Preset Value</i>	0

<i>Syntax</i>	Dim <i>Value</i> As Long <i>Value</i> = app.SCPI.STATus.QUEStionable.RLIMit.CHANnel(<i>Ch</i>).ENABLE <i>app.SCPI.STATus.QUEStionable.RLIMit.CHANnel(Ch).ENABLE</i> = <i>Value</i>
<i>Equivalent Softkeys</i>	None

SCPI.STATus.QUEStionable.RLIMit.CHANnel(*Ch*).EVENt

<i>Object Type</i>	Property (read only)
<i>Data Type</i>	Long
<i>Target</i>	IEE488.2 Status Reporting System (Appendix 1)
<i>Description</i>	Questionable Ripple Limit Channel Status Event Register for channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Syntax</i>	Dim <i>Value</i> As Long <i>Value</i> = app.SCPI.STATus.QUEStionable.RLIMit.CHANnel(<i>Ch</i>).EVENt
<i>Equivalent Softkeys</i>	None

SCPI.STATus.QUEStionable.RLIMit.CHANnel(*Ch*).NTRansition

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Long
<i>Target</i>	IEE488.2 Status Reporting System (Appendix 1)
<i>Description</i>	Negative Transition Filter of the Questionable Ripple Limit Channel Status Register for channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Range</i>	from 0 to 65535
<i>Preset Value</i>	0

<i>Syntax</i>	Dim <i>Value</i> As Long <i>Value</i> = app.SCPI.STATus.QUEStionable.RLIMit.CHANnel(<i>Ch</i>).NTRansition <i>app.SCPI.STATus.QUEStionable.RLIMit.CHANnel(Ch).NTRansition</i> = <i>Value</i>
<i>Equivalent Softkeys</i>	None

SCPI.STATus.QUEStionable.RLIMit.CHANnel(*Ch*).PTRansition

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Long
<i>Target</i>	IEE488.2 Status Reporting System (Appendix 1)
<i>Description</i>	Positive Transition Filter of the Questionable Ripple Limit Channel Status Register for channel <i>Ch</i> , <i>Ch</i> : channel number 1–16 (see Table 1 on page 25)
<i>Range</i>	from 0 to 65535
<i>Preset Value</i>	65535
<i>Syntax</i>	Dim <i>Value</i> As Long <i>Value</i> = app.SCPI.STATus.QUEStionable.RLIMit.CHANnel(<i>Ch</i>).PTRansition <i>app.SCPI.STATus.QUEStionable.RLIMit.CHANnel(Ch).PTRansition</i> = <i>Value</i>
<i>Equivalent Softkeys</i>	None

SCPI.STATus.QUEStionable.RLIMit.CONDition

<i>Object Type</i>	Property (read only)
<i>Data Type</i>	Long
<i>Target</i>	IEE488.2 Status Reporting System (Appendix 1)
<i>Description</i>	Questionable Ripple Limit Status Condition Register.

<i>Syntax</i>	Dim <i>Value</i> As Long <i>Value</i> = app.SCPI.STATus.QUESTIONable.RLIMit.CONDition
<i>Equivalent Softkeys</i>	None

SCPI.STATus.QUESTIONable.RLIMit.ENABLE

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Long
<i>Target</i>	IEE488.2 Status Reporting System (Appendix 1)
<i>Description</i>	Questionable Ripple Limit Status Enable Register.
<i>Range</i>	from 0 to 65535
<i>Preset Value</i>	0
<i>Syntax</i>	Dim <i>Value</i> As Long <i>Value</i> = app.SCPI.STATus.QUESTIONable.RLIMit.ENABLE app.SCPI.STATus.QUESTIONable.RLIMit.ENABLE = <i>Value</i>
<i>Equivalent Softkeys</i>	None

SCPI.STATus.QUESTIONable.RLIMit.EVENT

<i>Object Type</i>	Property (read only)
<i>Data Type</i>	Long
<i>Target</i>	IEE488.2 Status Reporting System (Appendix 1)
<i>Description</i>	Questionable Ripple Limit Status Event Register.
<i>Syntax</i>	Dim <i>Value</i> As Long <i>Value</i> = app.SCPI.STATus.QUESTIONable.RLIMit.EVENT
<i>Equivalent Softkeys</i>	None

SCPI.STATUS.QUESTIONable.RLIMit.NTRansition

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Long
<i>Target</i>	IEE488.2 Status Reporting System (Appendix 1)
<i>Description</i>	Negative Transition Filter of the Questionable Ripple Limit Status Register.
<i>Range</i>	from 0 to 65535
<i>Preset Value</i>	0
<i>Syntax</i>	<p>Dim <i>Value</i> As Long</p> <p><i>Value</i> = app.SCPI.STATUS.QUESTIONable.RLIMit.NTRansition</p> <p>app.SCPI.STATUS.QUESTIONable.RLIMit.NTRansition = <i>Value</i></p>
<i>Equivalent Softkeys</i>	None

SCPI.STATUS.QUESTIONable.RLIMit.PTRansition

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Long
<i>Target</i>	IEE488.2 Status Reporting System (Appendix 1)
<i>Description</i>	Positive Transition Filter of the Questionable Ripple Limit Status Register.
<i>Range</i>	from 0 to 65535
<i>Preset Value</i>	65535
<i>Syntax</i>	<p>Dim <i>Value</i> As Long</p> <p><i>Value</i> = app.SCPI.STATUS.QUESTIONable.RLIMit.PTRansition</p> <p>app.SCPI.STATUS.QUESTIONable.RLIMit.PTRansition = <i>Value</i></p>
<i>Equivalent Softkeys</i>	None

SCPI.SYSTem.BEEPer.COMplete.IMMEDIATE

<i>Object Type</i>	Method
<i>Target</i>	Instrument
<i>Description</i>	Generates a beep to notify of the completion of the operation.
<i>Syntax</i>	<i>app.SCPI.SYSTem.BEEPer.COMplete.IMMEDIATE</i>
<i>Equivalent Softkeys</i>	System > Misc Setup > Beeper > Test Beep Complete

SCPI.SYSTem.BEEPer.COMplete.STATE

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Boolean
<i>Target</i>	Instrument
<i>Description</i>	The ON/OFF state of the beeper notifying of the completion of the operation.
<i>Allowable Values</i>	True: Completion beeper ON False: Completion beeper OFF
<i>Preset Value</i>	True
<i>Syntax</i>	Dim <i>Status</i> As Boolean <i>Status</i> = <i>app.SCPI.SYSTem.BEEPer.COMplete.STATE</i> <i>app.SCPI.SYSTem.BEEPer.COMplete.STATE</i> = False
<i>Equivalent Softkeys</i>	System > Misc Setup > Beeper > Beep complete

SCPI.SYSTem.BEEPer.WARNING.IMMEDIATE

<i>Object Type</i>	Method
<i>Target</i>	Instrument

<i>Description</i>	Generates a beep to notify of warning.
<i>Syntax</i>	<i>app.SCPI.SYSTem.BEEPer.WARNing.IMMEDIATE</i>
<i>Equivalent Softkeys</i>	System > Misc Setup > Beeper > Test Beep Warning

SCPI.SYSTem.BEEPer.WARNing.STATE

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Boolean
<i>Target</i>	Instrument
<i>Description</i>	The ON/OFF state of the beeper notifying of warning.
<i>Allowable Values</i>	True: Warning beeper ON False: Warning beeper OFF
<i>Preset Value</i>	True
<i>Syntax</i>	Dim <i>Status</i> As Boolean <i>Status</i> = <i>app.SCPI.SYSTem.BEEPer.WARNing.STATE</i> <i>app.SCPI.SYSTem.BEEPer.WARNing.STATE</i> = False
<i>Equivalent Softkeys</i>	System > Misc Setup > Beeper > Beep Warning

SCPI.SYSTem.COMMUnicat.ECAL.TEMPerature.SENSor

<i>Object Type</i>	Property (read only)
<i>Data Type</i>	Double
<i>Target</i>	AutoCal module
<i>Description</i>	Reads out the temperature of the AutoCal module connected to the instrument.
<i>Unit</i>	°C (Celsius)

<i>Syntax</i>	Dim <i>Value</i> As Double <i>Value</i> = app.SCPI.SYSTem.COMMunicate.ECAL.TEMPerature.SENSOR
<i>Equivalent Softkeys</i>	None

SCPI.SYSTem.COMMunicate.ECAL.IMPedance(*Pt*)

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	String
<i>Target</i>	AutoCal module
<i>Description</i>	Sets or reads out the impedance state of the specified port (<i>Pt</i>) of AutoCal module connected to the instrument.
<i>Range</i>	"OPEN" : OPEN impedance state "SHORt" : SHORT impedance state "LOAD" : LOAD impedance state
<i>Preset Value</i>	"LOAD"
<i>Syntax</i>	Dim <i>Param</i> As String <i>Param</i> = app.SCPI.SYSTem.COMMunicate.ECAL.IMPedance(<i>Pt</i>) app.SCPI.SYSTem.COMMunicate.ECAL.IMPedance(<i>Pt</i>) = "OPEN"
<i>Equivalent Softkeys</i>	None

SCPI.SYSTem.COMMunicate.ECAL.THRU(*Pt1, Pt2*)

<i>Object Type</i>	Method
<i>Target</i>	AutoCal module
<i>Description</i>	Sets the thru state between the specified 2 ports (<i>Pt1, Pt2</i>) of AutoCal module connected to the instrument.
<i>Syntax</i>	app.SCPI.SYSTem.COMMunicate.ECAL.THRU(<i>I, 2</i>)
<i>Equivalent Softkeys</i>	None

SCPI.SYSTem.CORRection.STATE

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	Boolean
<i>Target</i>	Instrument
<i>Description</i>	The ON/OFF state of the system error correction.
<i>Allowable Values</i>	True: System error correction ON False: System error correction OFF
<i>Preset Value</i>	True
<i>Syntax</i>	<p>Dim <i>Status</i> As Boolean</p> <p><i>Status</i> = app.SCPI.SYSTem.CORRection.STATE</p> <p>app.SCPI.SYSTem.CORRection.STATE = False</p>
<i>Equivalent Softkeys</i>	System > Misc Setup > System Correction

SCPI.SYSTem.DATE

<i>Object Type</i>	Property (read/write)						
<i>Data Type</i>	Variant (array of long)						
<i>Target</i>	Instrument						
<i>Description</i>	<p>The current date.</p> <p>The array consists of three elements:</p> <table style="margin-left: 40px;"> <tr> <td><i>Data(0)</i></td> <td>year from 1900 to 2100;</td> </tr> <tr> <td><i>Data(1)</i></td> <td>month from 1 to 12;</td> </tr> <tr> <td><i>Data(2)</i></td> <td>day from 1 to 31.</td> </tr> </table>	<i>Data(0)</i>	year from 1900 to 2100;	<i>Data(1)</i>	month from 1 to 12;	<i>Data(2)</i>	day from 1 to 31.
<i>Data(0)</i>	year from 1900 to 2100;						
<i>Data(1)</i>	month from 1 to 12;						
<i>Data(2)</i>	day from 1 to 31.						

<i>Syntax</i>	Dim <i>Data</i> As Variant <i>Data</i> = app.SCPI.SYSTem.DATE <i>app. app.SCPI.SYSTem.DATE</i> = Array(2009, 9, 9)
<i>Equivalent Softkeys</i>	None

SCPI.SYSTem.HIDE

<i>Object Type</i>	Method
<i>Target</i>	Instrument GUI
<i>Description</i>	Hides the instrument GUI.
<i>Syntax</i>	<i>app.SCPI.SYSTem.HIDE</i>
<i>Related Commands</i>	SCPI.SYSTem.SHOW
<i>Equivalent Softkeys</i>	None

SCPI.SYSTem.LOCal

<i>Object Type</i>	Method
<i>Target</i>	Instrument
<i>Description</i>	Sets the instrument to the local operation mode, when all the keys on the front panel, mouse and the touch screen are active.
<i>Syntax</i>	<i>app</i> .SCPI.SYSTem.LOCal
<i>Related Commands</i>	SCPI.SYSTem.REMote SCPI.SYSTem.RWLock
<i>Equivalent Softkeys</i>	None

SCPI.SYSTem.PRESet

<i>Object Type</i>	Method
<i>Target</i>	Instrument
<i>Description</i>	Resets the instrument to the factory settings. The difference from the SCPI.IEEE4882.RST: method is that the trigger is set to the <i>Continuous</i> trigger mode.
<i>Syntax</i>	<i>app</i> .SCPI.SYSTem.PRESet
<i>Equivalent Softkeys</i>	System > Preset > OK

SCPI.SYSTem.REMote

<i>Object Type</i>	Method
<i>Target</i>	Instrument
<i>Description</i>	Sets the instrument to the remote operation mode, when all the keys on the front panel, mouse and the touch screen are not active, except for one key labeled <i>Return to Local</i> . Pushing this button will reset the instrument to the local operation mode.
<i>Syntax</i>	<i>app.SCPI.SYSTem.REMote</i>
<i>Related Commands</i>	SCPI.SYSTem.LOCal SCPI.SYSTem.RWLock
<i>Equivalent Softkeys</i>	None

SCPI.SYSTem.RWLock

<i>Object Type</i>	Method
<i>Target</i>	Instrument
<i>Description</i>	Sets the instrument to the remote operation mode, when all the keys on the front panel, mouse and the touch screen are not active. Only SCPI.SYSTem.LOCal or SCPI.SYSTem.REMote command can release this remote operation mode.
<i>Syntax</i>	<i>app.SCPI.SYSTem.RWLock</i>
<i>Related Commands</i>	SCPI.SYSTem.LOCal SCPI.SYSTem.REMote
<i>Equivalent Softkeys</i>	None

SCPI.SYSTem.SHOW

<i>Object Type</i>	Method
<i>Target</i>	Instrument GUI
<i>Description</i>	Shows the instrument GUI hidden by the SCPI.SYSTem.HIDE command.
<i>Syntax</i>	<i>app</i> .SCPI.SYSTem.SHOW
<i>Related Commands</i>	SCPI.SYSTem.HIDE
<i>Equivalent Softkeys</i>	None

SCPI.SYSTem.TEMPerature.SENSor(*Idx*)

<i>Object Type</i>	Property (read only)
<i>Data Type</i>	Double
<i>Target</i>	Instrument
<i>Description</i>	Reads out the specified sensor (<i>Idx</i>) temperature inside the instrument.
<i>Unit</i>	°C (Celsius)
<i>Syntax</i>	<p>Dim <i>Value</i> As Double <i>Value</i> = <i>app</i>.SCPI.SYSTem.TEMPerature.SENSor(1)</p>
<i>Equivalent Softkeys</i>	None

SCPI.SYSTem.TERMinate

<i>Object Type</i>	Method
<i>Target</i>	Instrument GUI
<i>Description</i>	Terminates the application.
<i>Syntax</i>	<i>app.SCPI.SYSTem.TERMinate</i>
<i>Equivalent Softkeys</i>	None

SCPI.SYSTem.TIME

<i>Object Type</i>	Property (read/write)						
<i>Data Type</i>	Variant (array of long)						
<i>Target</i>	Instrument						
<i>Description</i>	<p>The current time.</p> <p>The array consists of three elements:</p> <table style="margin-left: 40px;"> <tr> <td><i>Data(0)</i></td> <td>hours from 0 to 23;</td> </tr> <tr> <td><i>Data(1)</i></td> <td>minutes from 0 to 59;</td> </tr> <tr> <td><i>Data(2)</i></td> <td>seconds from 0 to 59.</td> </tr> </table>	<i>Data(0)</i>	hours from 0 to 23;	<i>Data(1)</i>	minutes from 0 to 59;	<i>Data(2)</i>	seconds from 0 to 59.
<i>Data(0)</i>	hours from 0 to 23;						
<i>Data(1)</i>	minutes from 0 to 59;						
<i>Data(2)</i>	seconds from 0 to 59.						
<i>Syntax</i>	<pre>Dim Data As Variant Data = app.SCPI.SYSTem.TIME app.app.SCPI.SYSTem.TIME = Array(15, 20, 30)</pre>						
<i>Equivalent Softkeys</i>	None						

SCPI.TRIGger.SEQuence.IMMEDIATE

<i>Object Type</i>	Method
--------------------	--------

<i>Target</i>	Instrument
<i>Description</i>	<p>Generates a trigger, independently of the trigger source setting (except for the <i>External</i>). If the trigger source is set to <i>External</i>, an error occurs (error code 221) and the command is ignored.</p> <p>If the instrument is not in the waiting for a trigger state (sweep is in progress or all the channels are set to <i>Hold</i>), an error occurs (error code 211) and the command is ignored.</p> <p>The method returns control before the end of the sweep.</p>
<i>Syntax</i>	<code>app.SCPI.TRIGger.SEQuence.IMMEDIATE</code>
<i>Related Commands</i>	<p><code>SCPI.TRIGger.SEQuence.SOURce</code></p> <p><code>SCPI.INITiate(<i>Ch</i>).CONTinuous</code></p> <p><code>SCPI.INITiate(<i>Ch</i>).IMMEDIATE</code></p>
<i>Equivalent Softkeys</i>	None


SCPI.TRIGger.SEQuence.SINGle

<i>Object Type</i>	Method
<i>Target</i>	Instrument
<i>Description</i>	<p>Generates a trigger, independently of the trigger source setting (except for the <i>External</i>). If the trigger source is set to <i>External</i>, an error occurs (error code 221) and the command is ignored.</p> <p>If the instrument is not in the waiting for a trigger state (sweep is in progress or all the channels are set to <i>Hold</i>), an error occurs (error code 211) and the command is ignored.</p> <p>The method does not return control before the end of the sweep (waiting for the completion of the sweep of all the channels).</p>
<i>Syntax</i>	<i>app.SCPI.TRIGger.SEQuence.SINGle</i>
<i>Related Commands</i>	SCPI.TRIGger.SEQuence.SOURce SCPI.INITiate(<i>Ch</i>).CONTinuous SCPI.INITiate(<i>Ch</i>).IMMEDIATE
<i>Equivalent Softkeys</i>	None


SCPI.TRIGger.SEQuence.SOURce

<i>Object Type</i>	Property (read/write)
<i>Data Type</i>	String
<i>Target</i>	Instrument
<i>Description</i>	Selects the sweep trigger source.
<i>Range</i>	"INTernal" : Internal "EXTernal" : External "MANual" : Manual "BUS" : Bus


<i>Notes</i>	The short format of the parameter is indicated by upper case letters. There is no distinction between upper and lower case letters when the property is written. When the property is read out, the short format is indicated by upper case letters.
<i>Out of Range</i>	An error occurs. Error code: 205.
<i>Preset Value</i>	"INT"
<i>Syntax</i>	<pre>Dim Param As String Param = app.SCPI.TRIGger.SEQuence.SOURce app.SCPI.TRIGger.SEQuence.SOURce = "BUS"</pre>
<i>Related Commands</i>	SCPI.TRIGger.SEQuence.IMMediate SCPI.TRIGger.SEQuence.SINGle SCPI.IEEE4882.TRG
<i>Equivalent Softkeys</i>	Stimulus > Trigger > Trigger Source > Internal External Manual Bus

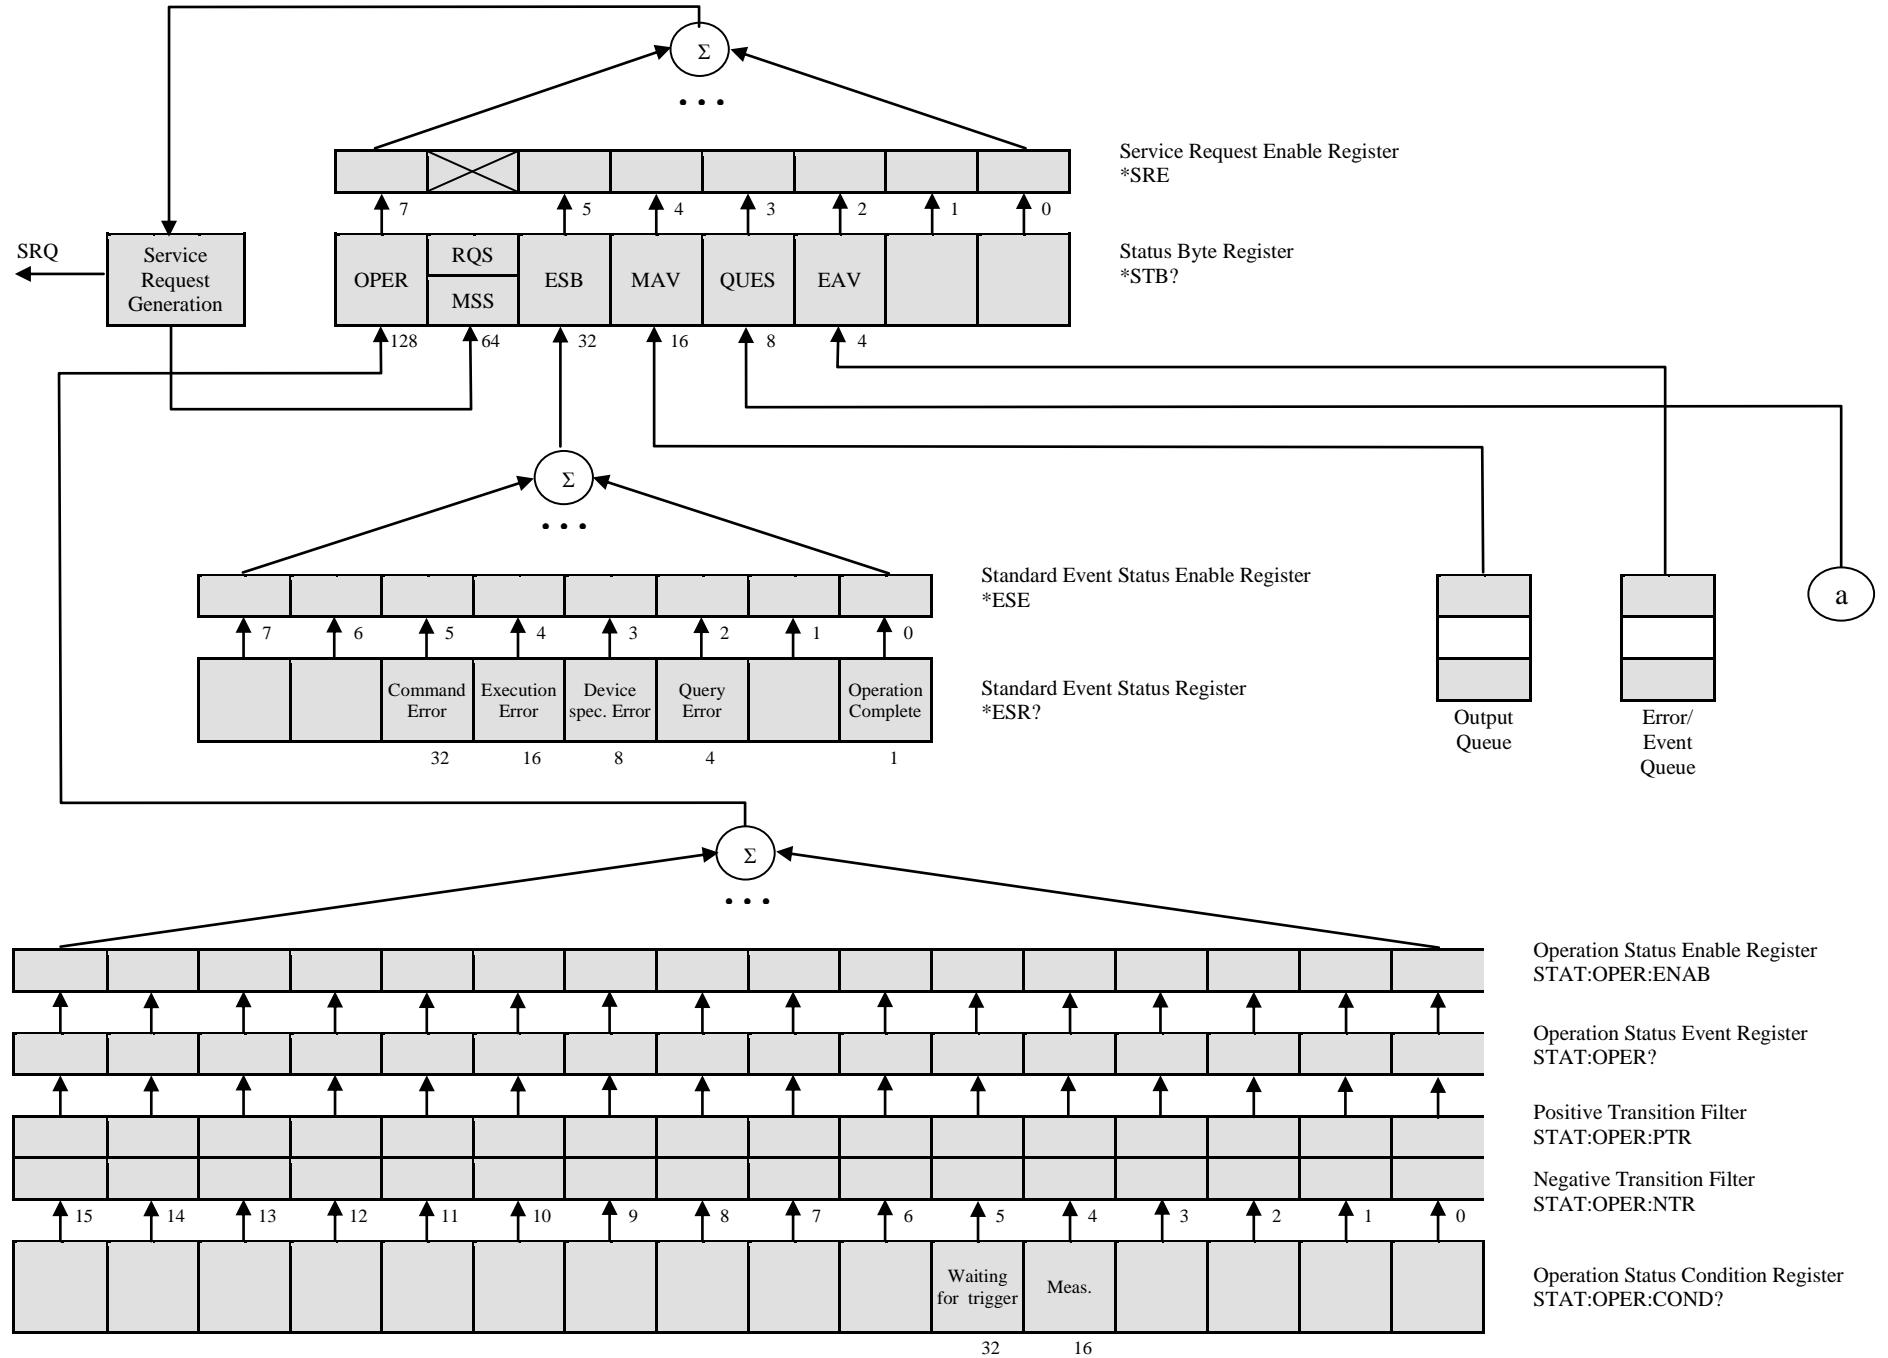


Appendix 1. IEE488.2 Status Reporting System

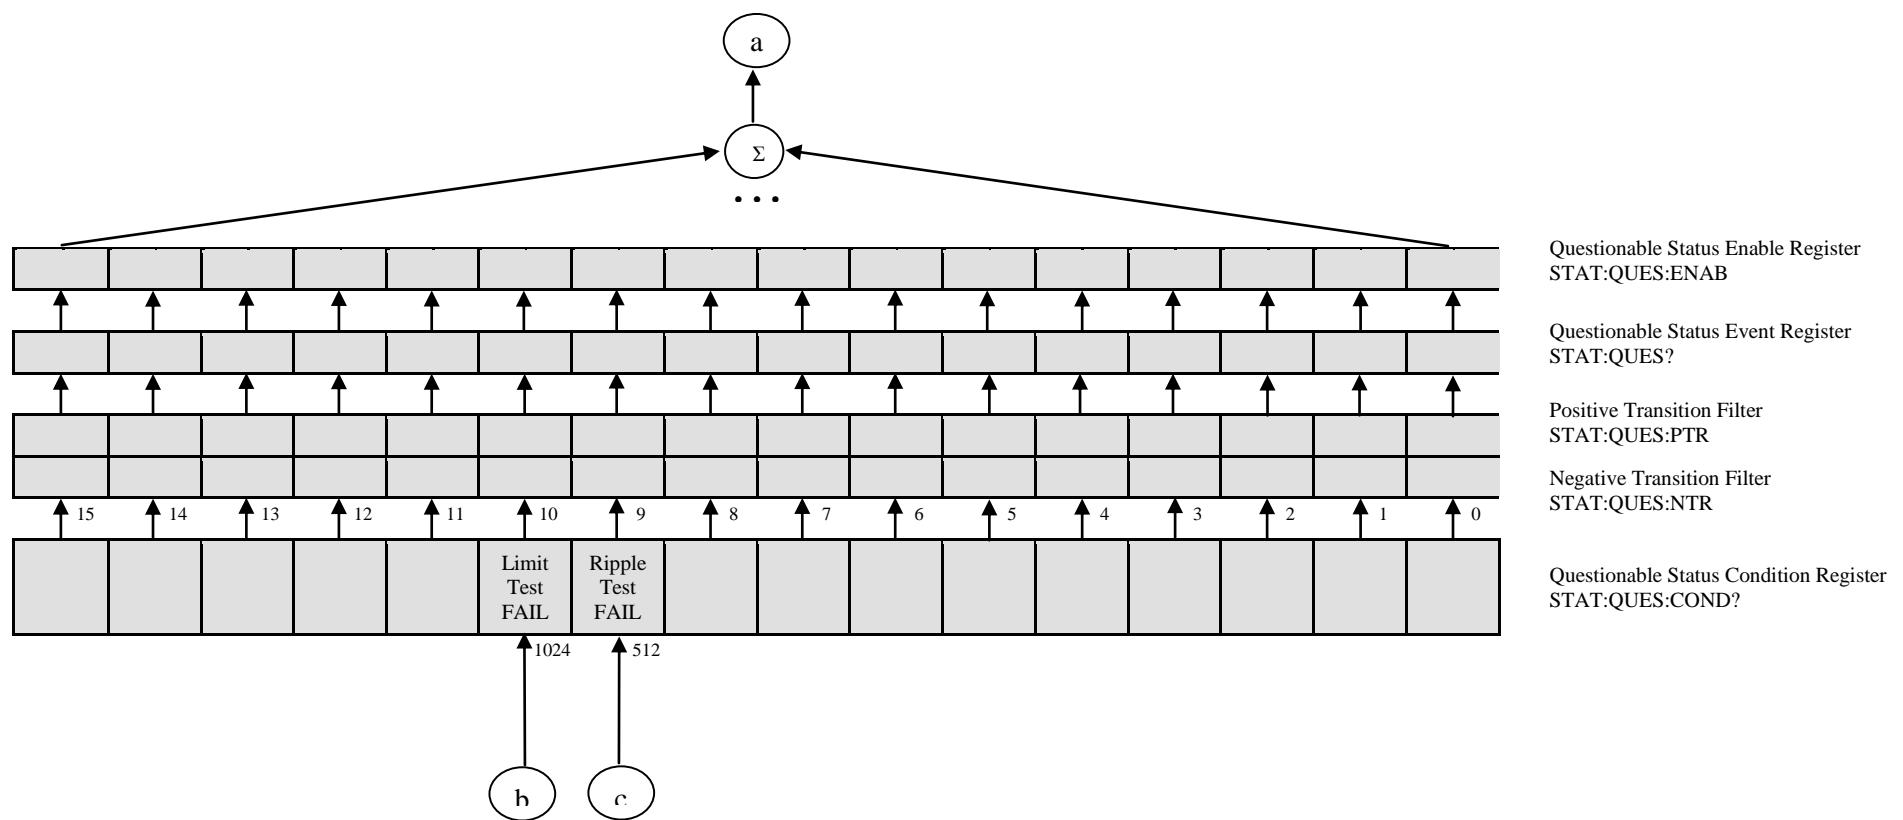


Appendix 1. IEE488.2 Status Reporting System

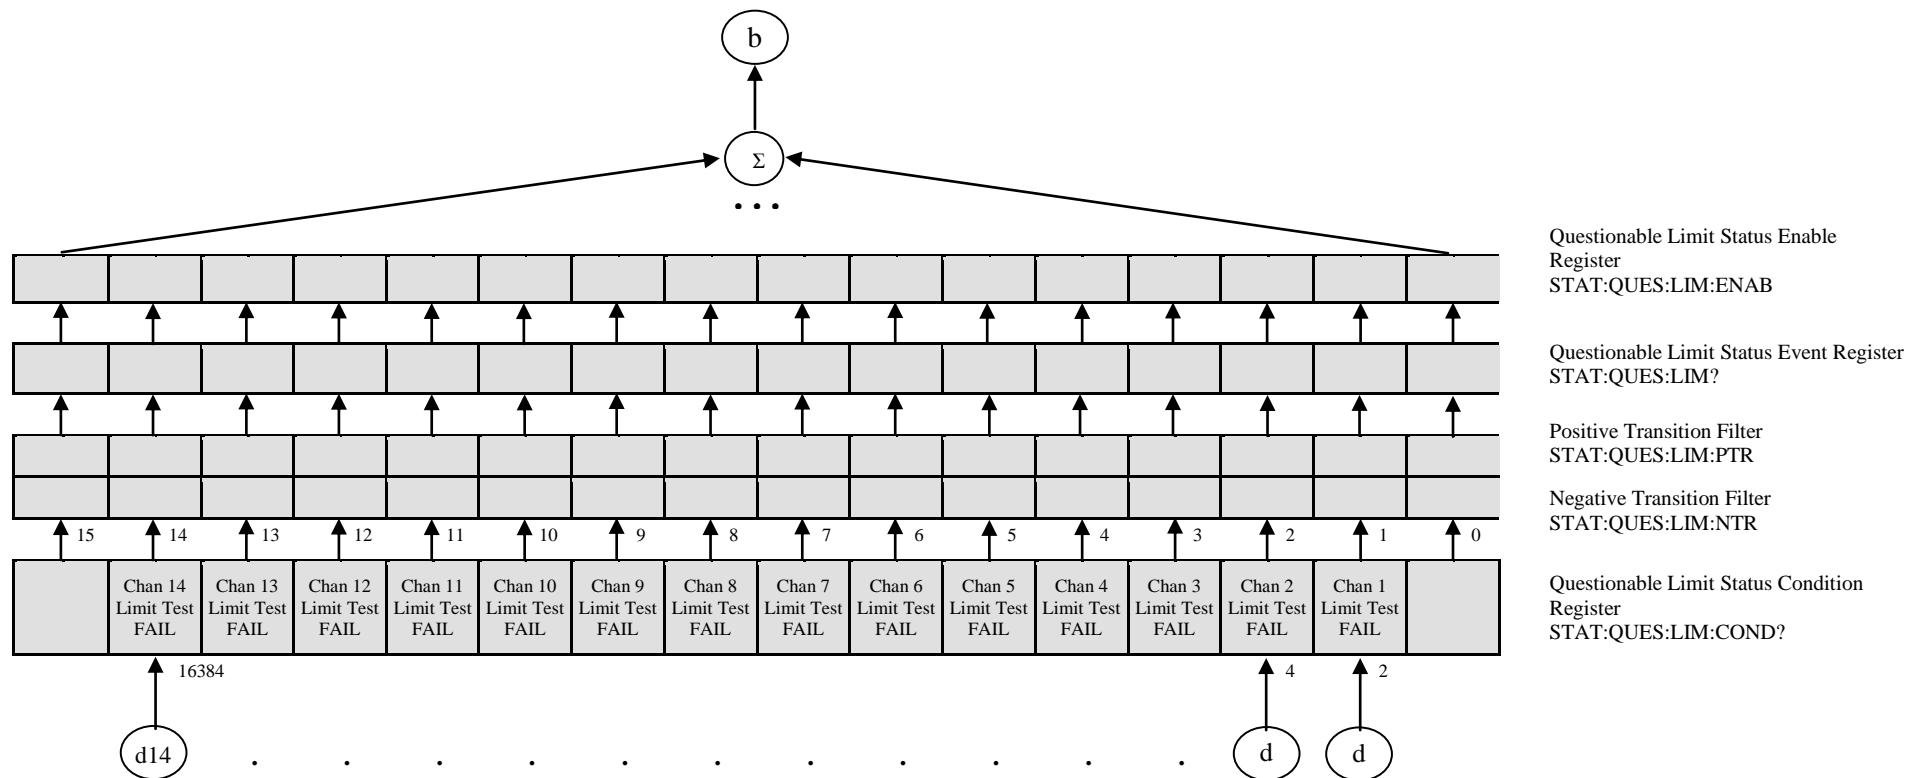


Appendix 1. IEE488.2 Status Reporting System

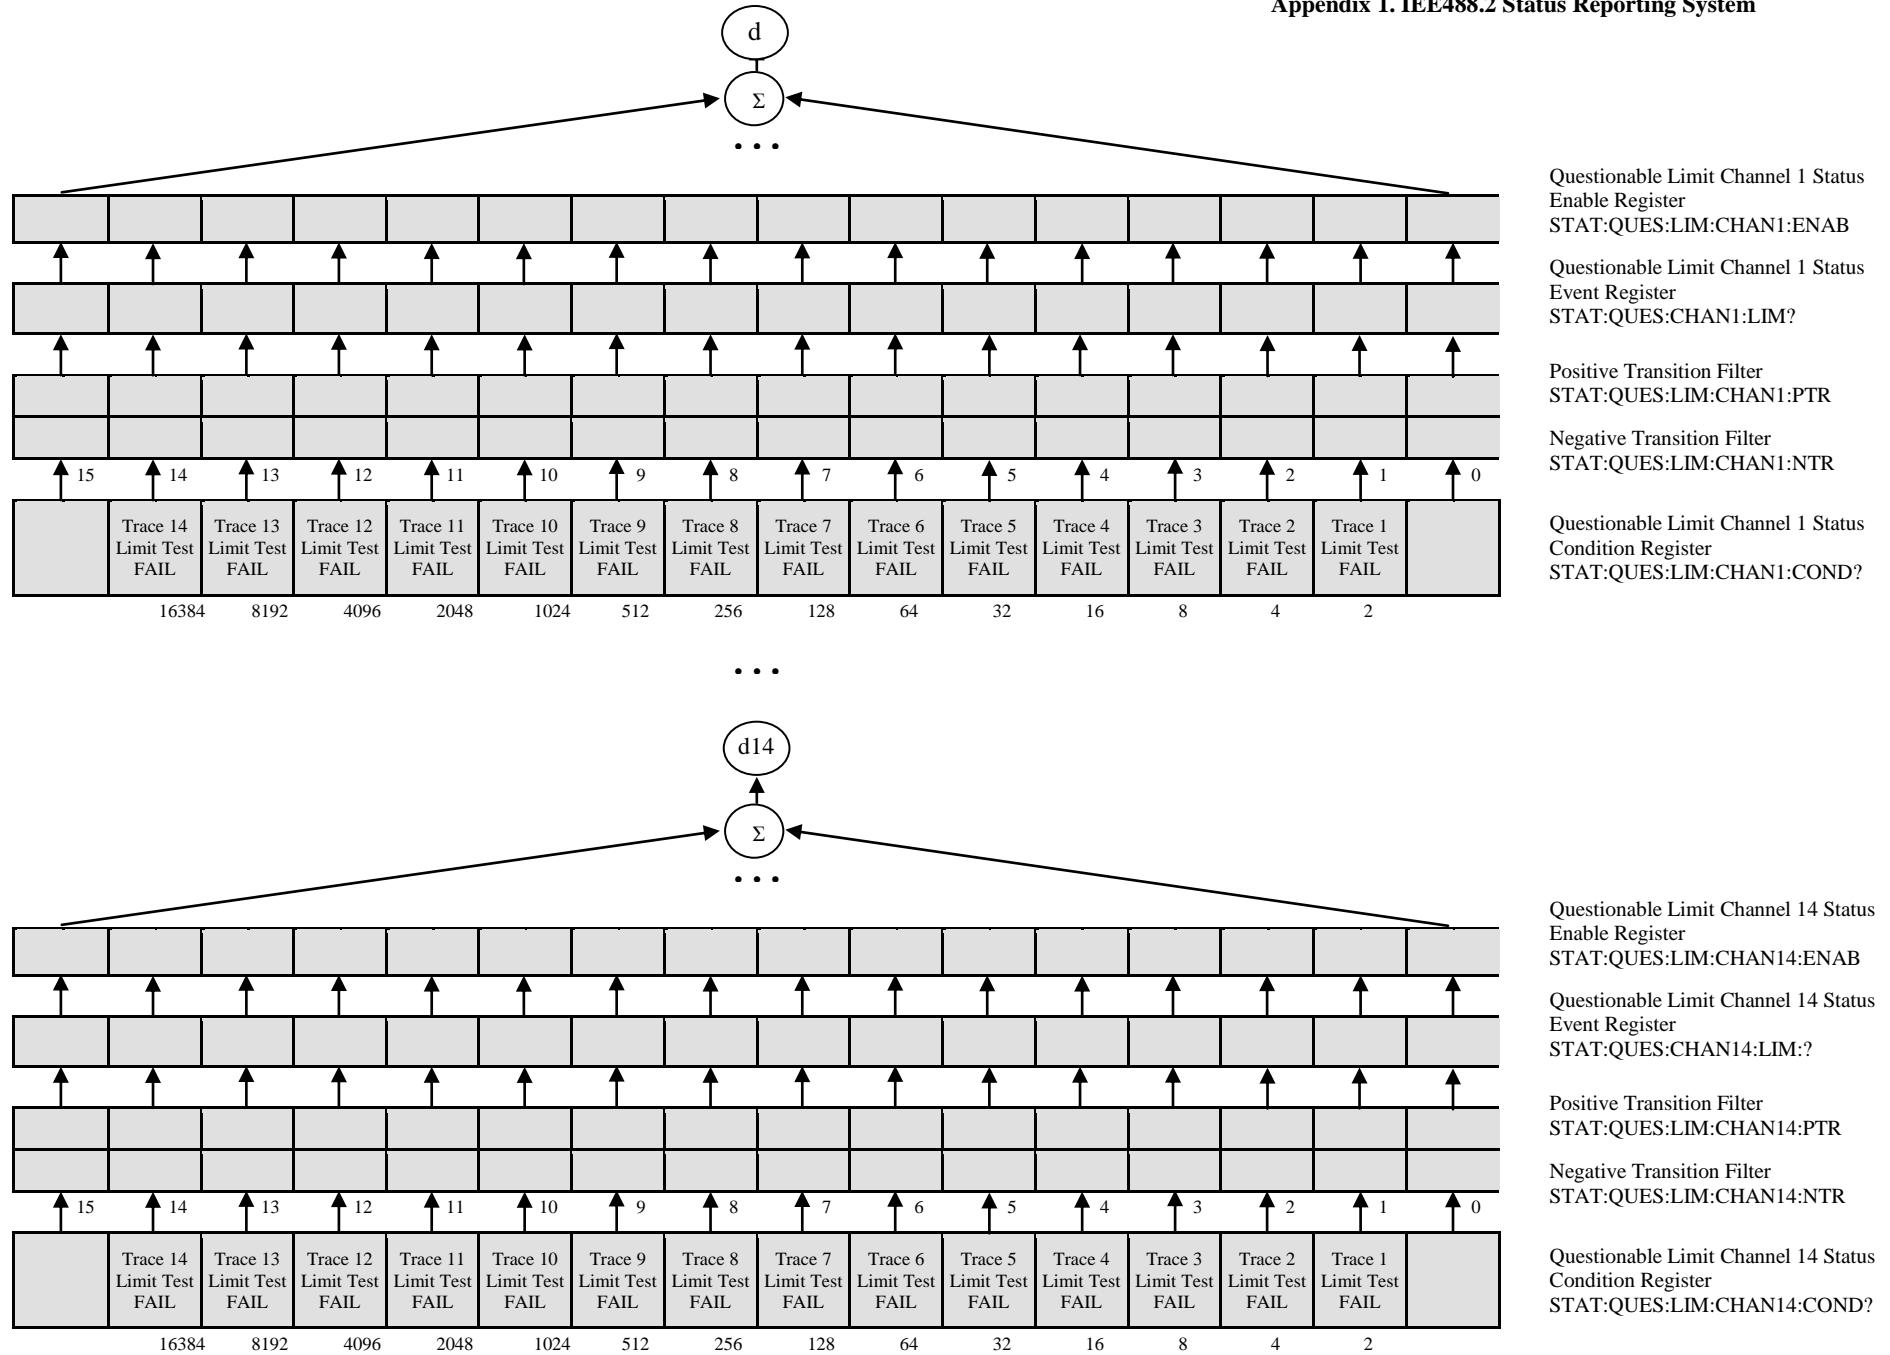

Appendix 1. IEE488.2 Status Reporting System

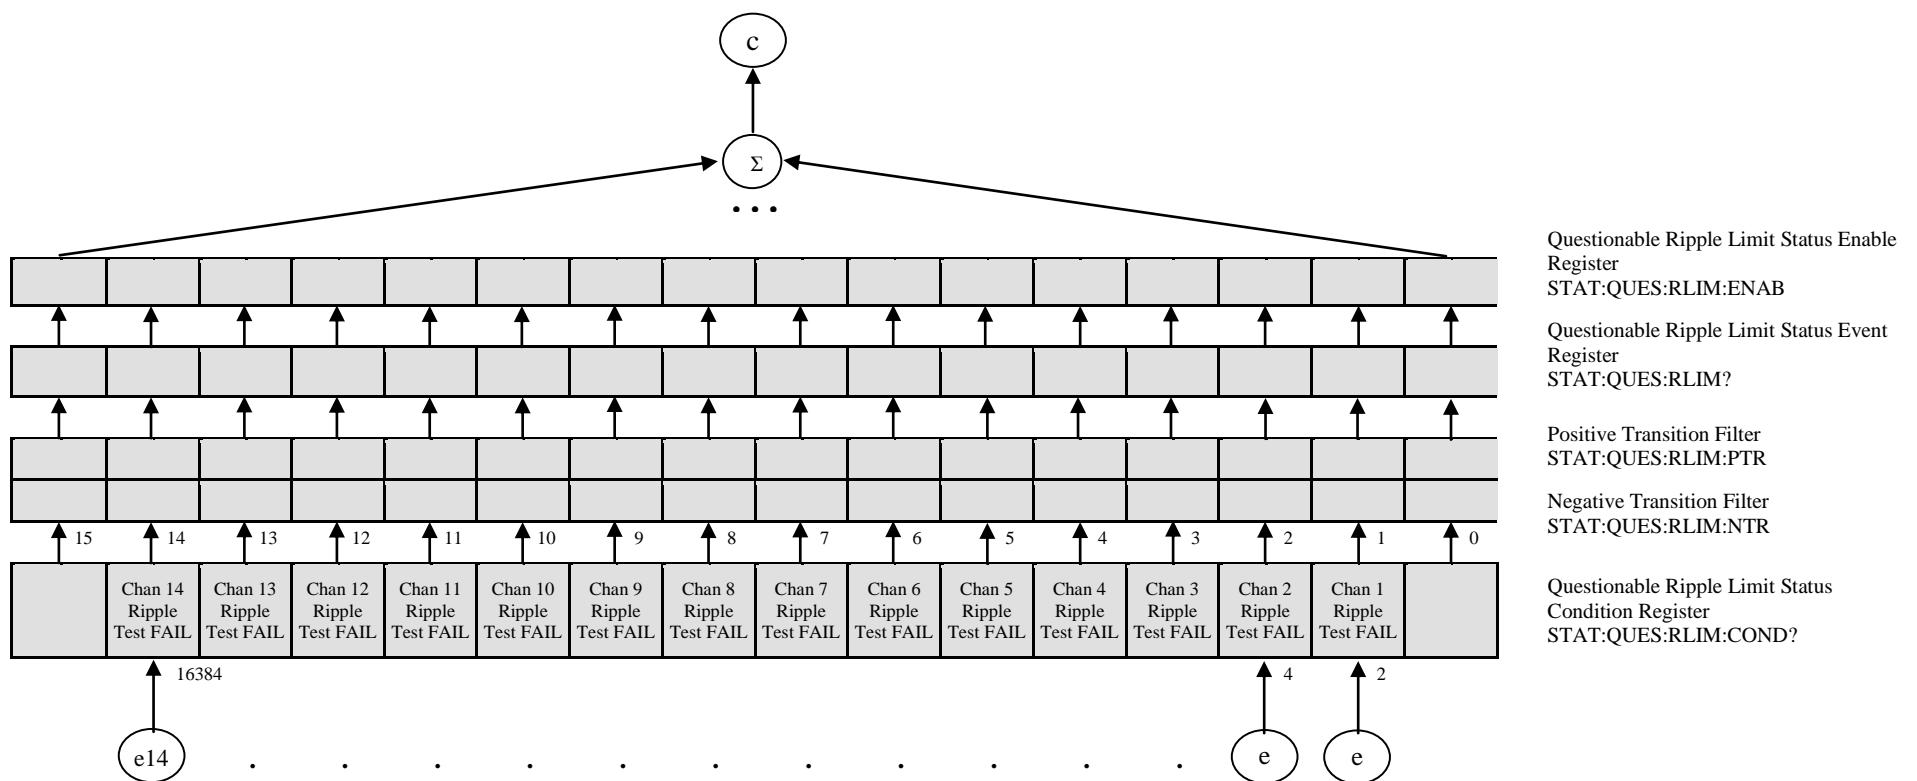

Appendix 1. IEE488.2 Status Reporting System

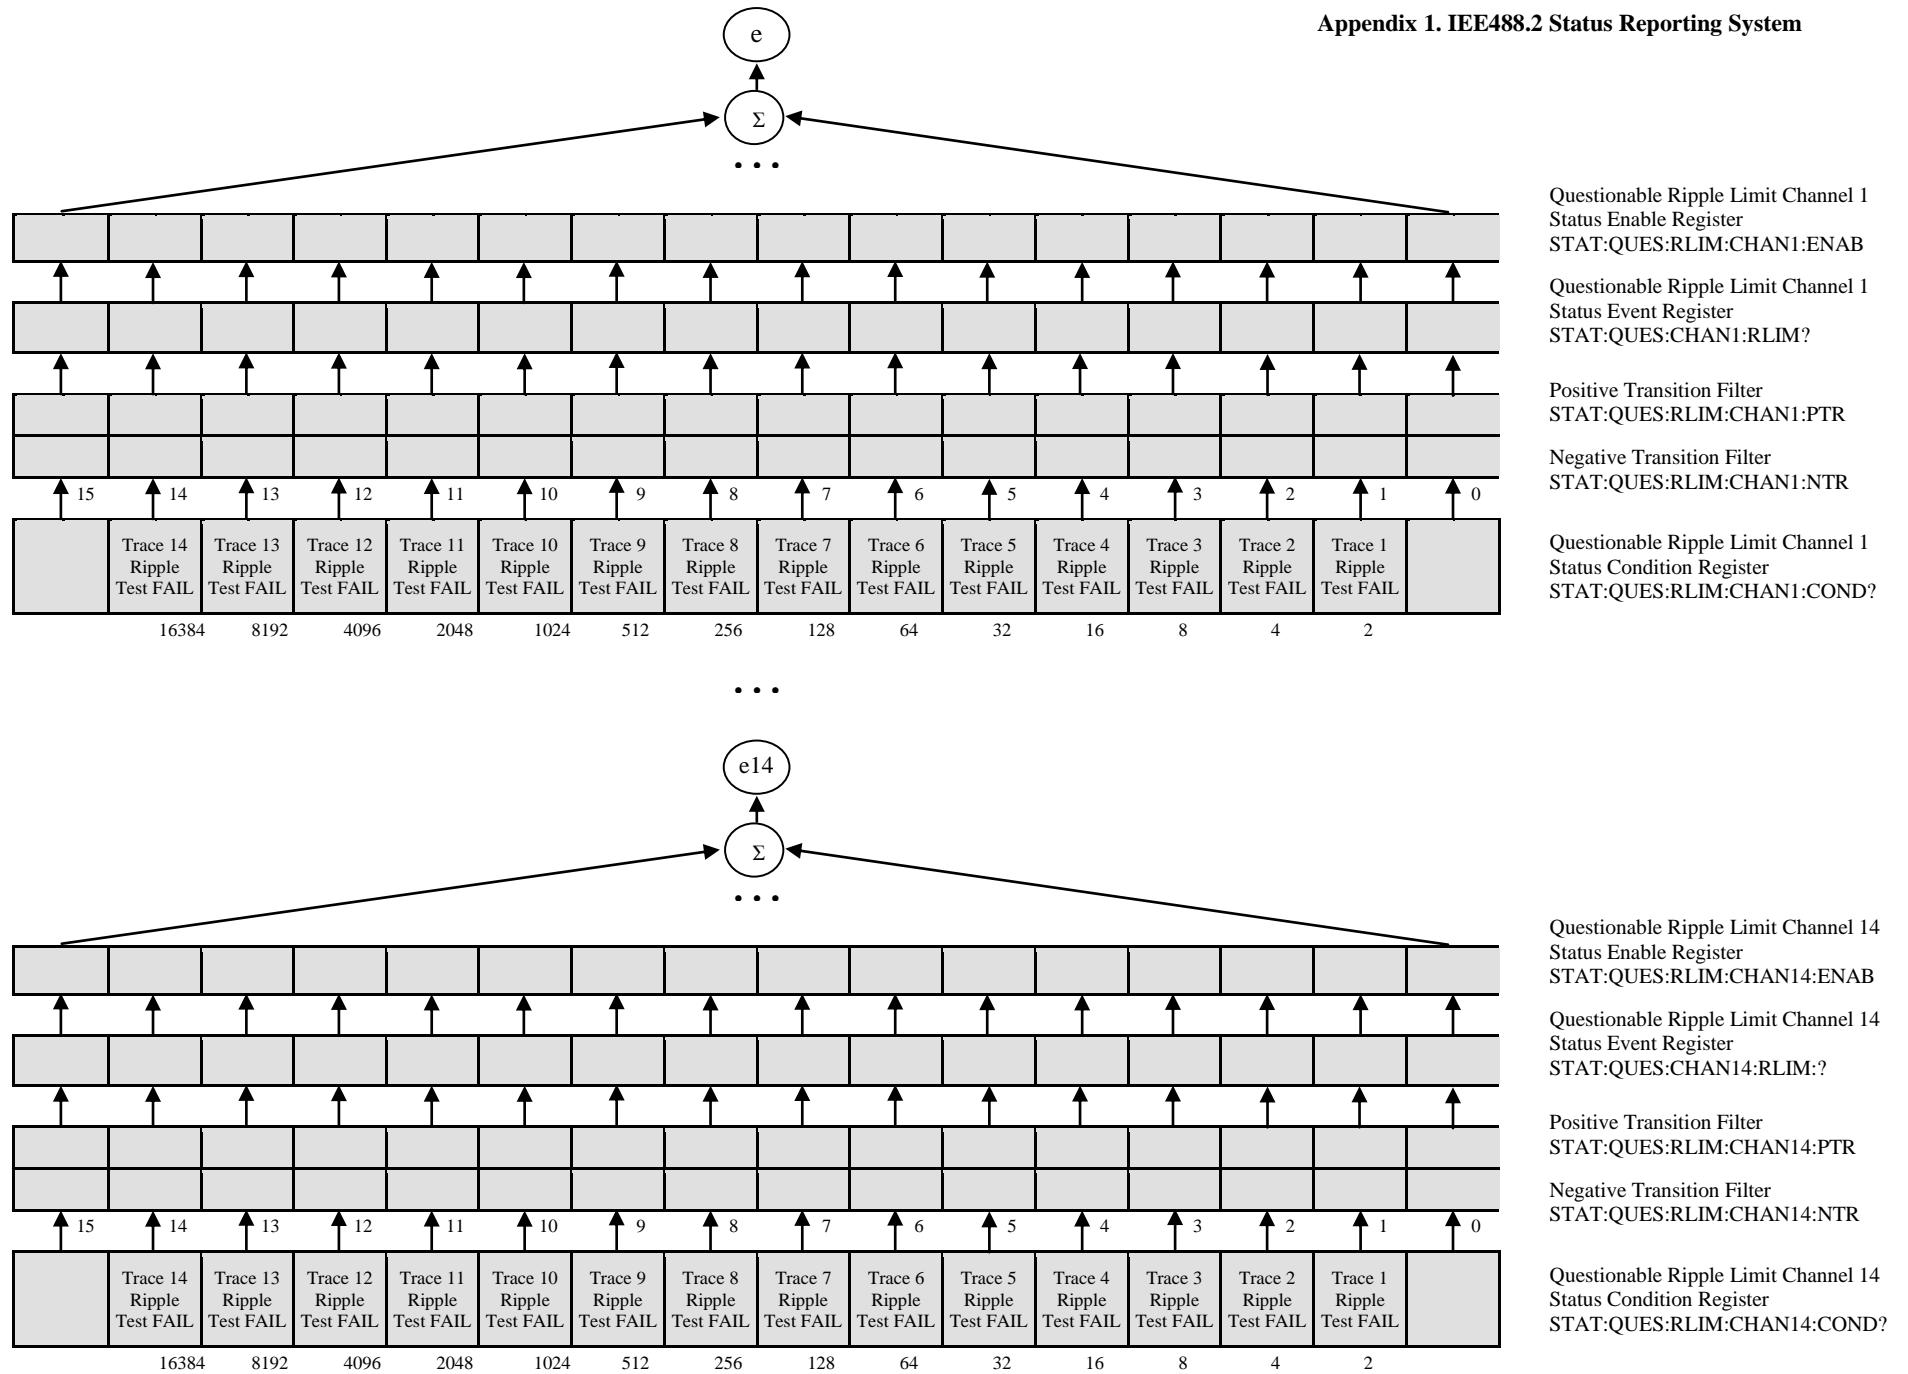

Appendix 2. Error Codes

114	"Header suffix out of range"
200	"Execution error"
211	"Trigger ignored"
213	"Init ignored"
220	"Parameter Error"
222	"Data out of range"
224	"Illegal parameter value"
201	"Invalid channel index"
202	"Invalid trace index"
203	"Invalid marker index"
204	"Marker is not active"
205	"Invalid save type specifier"
206	"Invalid sweep type specifier"
207	"Invalid trigger source specifier"
208	"Invalid measurement parameter specifier"
209	"Invalid format specifier"
210	"Invalid data math specifier"
214	"Invalid limit data"
215	"Invalid segment data"
216	"Invalid standard type specifier"
217	"Invalid conversion specifier"
218	"Invalid gating shape specifier"
219	"Invalid gating type specifier"
300	"Device-specific error"
302	"Status reporting system error"

Example 1. Instrument Information String Readout

The following program reads out and displays on the screen the instrument information string – the Name property of the COM object. The string contains the following fields:

Manufacturer, Model, Serial Number, Software Version/Firmware Version

For example:

CMT, S8081, 09381020, 1.01/01

```
Dim app As Object
Sub Example1()
Set app = CreateObject("S8081.Application")
ID = app.Name
MsgBox ("Information string read out: " + ID)
End Sub
```

Example 2. Checking the Instrument Ready State

Normally, the user control program starts when the analyzer executable module is running, the instrument booting is completed, and the instrument is ready for use. In some cases, it is recommended to check if the instrument is ready for use. The instrument may be not ready for use if it is not connected to PC via USB cable. Moreover, if the analyzer executable module has not been started in advance, the *CreateObject* function will automatically start the application and then within about 10 seconds the instrument booting will be in progress. The instrument will not be ready for use until the booting is completed. The *Ready* property is used to check if the instrument is ready for use.

The following program checks the *Ready* property right after a COM object has been created. If the analyzer executable module has been started in advance and the booting is completed, “Analyzer is ready” will be displayed. If the *Ready* property value is *False*, 10 second delay is activated for the case the analyzer executable module has been started by the COM object creation. In 10 seconds the program rechecks the *Ready* property. If the value is *True*, “Analyzer is ready” will be displayed, if otherwise, “Analyzer is not ready” will be displayed, what means the instrument is not turned on or it is not connected to PC via USB cable.

```
Dim app As Object
Sub Example2()
Set app = CreateObject("S8081.Application")
If app.READy = False Then
    Application.Wait (Now + TimeValue("0:00:10"))
    If app.READy = False Then
        MsgBox ("Analyzer is not ready")
        Exit Sub
    End If
End If
MsgBox ("Analyzer is ready")
End Sub
```

Example 3. Setting the Measurement Parameters

The following program shows the setting of some measurement parameters. First, the instrument is reset to the factory settings. Then the following parameters are set:

- Two channel windows are opened and allocated one above the other.
- The number of traces is set to 2 in the first channel window, the traces are allocated in different graphs in the channel window.
- For the first channel the stimulus parameters are set as follows: the frequency range from 1 MHz to 2 GHz, the number of measurement points 401.
- For the second channel the stimulus parameters are set as follows: the frequency range from 800 MHz to 900 MHz, the number of points 51, IF bandwidth 100 Hz, stimulus power -10 dBm.
- In the first channel window: S11 measurement is set for the trace 1, S22 measurement is set for the trace 2. The Smith chart format is set for the both traces.
- In the second channel window: S21 measurement and logarithmic magnitude format are set for the single trace. Then the auto scale function is called for this trace.

```
Dim app As Object
```

```
Public Sub Example3()
Set app = CreateObject("S8081.Application")

app.SCPI.SYSTem.PRESet

app.SCPI.DISPlay.Split = 2
app.SCPI.Calculate(1).Parameter.Count = 2
app.SCPI.DISPlay.Window(1).Split = 3

app.SCPI.SENSe(1).Frequency.Start = 100000
app.SCPI.SENSe(1).Frequency.STOP = 2000000000
app.SCPI.SENSe(1).SWEep.Points = 401

app.SCPI.SENSe(2).Frequency.Start = 800000000
app.SCPI.SENSe(2).Frequency.STOP = 900000000
app.SCPI.SENSe(2).SWEep.Points = 51
app.SCPI.SENSe(2).BANDwidth.RESolution = 100
app.SCPI.Source(2).Power.LEVel.IMMEDIATE.AMPlitude = -10

app.SCPI.Calculate(1).Parameter(1).DEFine = "S11"
```

```
app.SCPI.Calculate(1).Parameter(2).DEFine = "S22"
app.SCPI.Calculate(1).Parameter(1).Select
app.SCPI.Calculate(1).Selected.Format = "SMIT"
app.SCPI.Calculate(1).Parameter(2).Select
app.SCPI.Calculate(1).Selected.Format = "SMIT"

app.SCPI.Calculate(2).Parameter(1).DEFine = "S21"
app.SCPI.Calculate(2).Parameter(1).Select
app.SCPI.Calculate(2).Selected.Format = "MLOG"
app.SCPI.DISPlay.Window(2).TRACe(1).Y.SCALE.AUTO

End Sub
```

Example 4. Measurement Data Acquisition

The following program shows data array acquisition with further writing into a file. The program also shows the method of a sweep triggering and waiting for the sweep completion.

Three variables F , M , P are declared in the second string of the code. They are used for arrays of frequency values (Hz), magnitude values (dB), and phase values (degree) respectively.

After the instrument has been reset to the factory settings, two operators are used for the sweep triggering and waiting for the sweep completion:

```
app.SCPI.TRIGger.SEQuence.Source = "bus"  
app.SCPI.TRIGger.SEQuence.Single
```

The first operator sets the GPIB/LAN bus command or the COM/DCOM interface command as a trigger source. It aborts the sweep and switches the instrument to waiting for a trigger. The second operator is used for a new sweep triggering and waiting for the sweep completion.

Note	Unlike the <i>SCPI.TRIGger.SEQuence.IMMEDIATE</i> and <i>SCPI.IEEE4882.TRG</i> commands, which are completed immediately after a trigger generation, the <i>SCPI.TRIGger.SEQuence.Single</i> command is not completed until the end of the sweep. Using the <i>SCPI.TRIGger.SEQuence.Single</i> command is the simplest way to set the waiting for the sweep completion.
------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

On completion of the sweep, three arrays are read out: frequency values, magnitude values and phase values. Before the magnitude and phase arrays are read out, the corresponding trace format is set.

The array size of frequency F is equal to the number of measurement points, and the array size of magnitude M and phase P is equal to the double number of measurement points (see section 11 “Measurement Data Arrays”). In rectangular formats (for magnitude and phase) the measurement data are real numbers located in even cells of the array. Odd cells of the array contain 0.

On completion of the program, the frequency, magnitude and phase values for each measurement point are written string by string into the file named *TESTFILE*.

```
Dim app As Object
Dim app As Object
Dim F, M, P

Public Sub Example4()
Set app = CreateObject("S8081.Application")

app.SCPI.SYSTem.PRESet

app.SCPI.TRIGger.SEQuence.Source = "bus"
app.SCPI.TRIGger.SEQuence.Single

F = app.SCPI.SENSe.Frequency.Data

app.SCPI.Calculate.Selected.Format = "MLOG"
M = app.SCPI.Calculate.Selected.Data.FDAta

app.SCPI.Calculate.Selected.Format = "PHASe"
P = app.SCPI.Calculate.Selected.Data.FDAta

Open "TESTFILE" For Output As #1

For i = LBound(F) To UBound(F)
    Print #1, F(i), M(i * 2), P(i * 2)
Next i

Close #1
End Sub
```

Example 5. Program Written in C++

The following C++ program represents an example of the measurement parameter setting, as well as acquisition and display of the measurement data array. The program also shows a method of the sweep triggering and waiting for the sweep completion.

```
//-----
// Simple example of using COM object of S8081.exe application.
//
// This example is console application. GUI is not used in this example to
// simplify the program. Error processing is very restricted too.
//
#include "stdafx.h"

//-----
// Generate description of COM object of S8081.exe application.
#import "S8081.exe" no_namespace

//-----
int _tmain(int argc, _TCHAR* argv[])
{
    IS8081Ptr pNWA;           // Pointer to COM object of S8081.exe
    CComVariant Data;          // Variable for measurement data

    // Init COM subsystem
    HRESULT hr = CoInitialize(NULL);
    if(hr != S_OK) return -1;

    // Create COM object
    hr = pNWA.CreateInstance(__uuidof(S8081));
    if(hr != S_OK) return -1;

    // Preset network analyzer
    pNWA->SCPI->SYSTem->PRESet();
    // Set frequency start to 1 GHz
    pNWA->SCPI->GetSENSe(1)->FREQuency->STARt = 1e9;
    // Set frequency stop to 2 GHz
    pNWA->SCPI->GetSENSe(1)->FREQuency->STOP = 2e9;
    // Set number of measurement points to 51
    pNWA->SCPI->GetSENSe(1)->SWEEp->POINTs = 51;
    // Set measured parameter to S21
    pNWA->SCPI->GetCALCulate(1)->GetPARameter(1)->DEFine = "S21";
    // Set trigger source to GPIB/LAN bus or COM interface
    pNWA->SCPI->TRIGger->SEQUence->SOURce = "bus";
    // Trigger measurement and wait
    pNWA->SCPI->TRIGger->SEQUence->SINGle();
    // Get measurement data (array of complex numbers)
    Data = pNWA->SCPI->GetCALCulate(1)->SELected->DATA->FDATA;

    // Display measurement data.
    // Data is array of NOP * 2 (number of measurement points).
    // Where n is an integer between 0 and NOP - 1.
    // Data(n*2)   : Primary value at the n-th measurement point.
    // Data(n*2+1) : Secondary value at the n-th measurement point. Always 0
    //               when the data format is not the Smith chart or the polar.

    CComSafeArray<double> mSafeArray;
    if (mSafeArray.Attach(Data.parray) == S_OK)
    {
        for (unsigned int n = 0; n < mSafeArray.GetCount() / 2; ++n)
        {
```

```
    printf("%+.9E\t%+.9E\n",
           mSafeArray.GetAt(n*2),
           mSafeArray.GetAt(n*2+1));
}
mSafeArray.Detach();
}

printf("Press ENTER to exit.\n");
getc(stdin);

// Release COM object
pNWA.Release();
CoUninitialize();
return 0;
}
```

Example 6. Program Written in LabView

The following LabView program represents an example of the measurement parameter setting, as well as acquisition and display of the measurement data array. The program also shows a method of the sweep triggering and waiting for the sweep completion.

Below see the block diagram of the program and the front panel of the program with the program execution result.

The front panel contains the entry field for the instrument network name or IP address. This field is used to control the instrument with DCOM technology from a remote PC, on which the LabView package is executed. This example can also be used on a single PC running the instrument program In this case leave this field empty.

The user must enter the instrument name in the entry field and click the “Run” button. As the result of the program, the instrument information string will be displayed and the measurement trace of transmission coefficient will be plotted.

